

VOLVO  
**OWNERS MANUAL** S80

**VOLVO**  
for life



WEB EDITION

**An alphabetical index is at the back of the book.**

Safety	9
Instruments, switches, controls	31
Climate control	53
Interior	65
Locks, alarm	77
Starting and driving	87
Wheels and tyres	117
Fuses, bulb replacement	125
Car care and Service	137
Specifications	155
Audio	167
Telephone	187
Index	201

In addition to describing the standard equipment this manual also covers optional and extra equipment. In addition there are also equipment alternatives, manual or automatic transmission for example. In certain countries statutory requirements affect the level of equipment. This means that it is occasionally necessary to page past sections of the book which describe equipment not installed on your car.

The specifications, design features and illustrations in this Owner's Manual are not binding. We reserve the right to make modifications without prior notice.


© Volvo Car Corporation

# Dashboard - left-hand drive

Temperature gauge .....	32	Tachometer .....	32
Speedometer .....	32	Automatic gearbox .....	32
Odometer .....	32	Clock .....	32
Trip odometer .....	32	Outside temperature sensor .....	32
Warning symbols .....	33	Fuel gauge .....	32
Display .....	37		

Hazard warning flashers ..... 46

Radio ..... 167

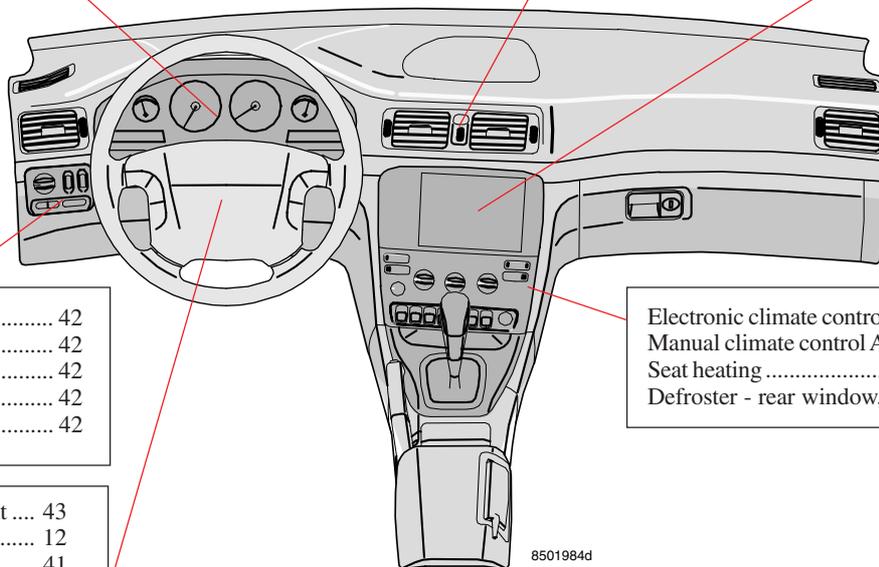

Main/Dipped beam .....	42
Position/Parking lamps .....	42
Fog lamps .....	42
Instrument lighting .....	42
Beam length control .....	42

Electronic climate control ECC .....	56
Manual climate control A/C .....	60
Seat heating .....	46
Defroster - rear window, door mirrors .....	46

Steering wheel adjustment .....	43
Airbag .....	12
Cruise control .....	41
Radio keypad .....	173
Windscreen washers/wipers .....	44
Direction indicator lever .....	43
Trip computer .....	40

8501984d

# Dashboard - right-hand drive

Temperature gauge .....	32	Automatic gearbox .....	32
Speedometer .....	32	Clock .....	32
Odometer .....	32	Outside temperature sensor ....	32
Tripodometer .....	32	Fuel gauge .....	32
Warning symbols .....	33		
Display .....	37		
Tachometer .....	32		


Hazard warning  
flashers ..... 46

Main/Dipped beam .....	42
Position/Parking lamps .....	42
Fog lamps .....	42
Instrument lighting .....	42
Beam length control .....	42

Radio ..... 167

Electronic climate control ECC .....	56
Manual climate control A/C .....	60
Seat heating .....	46
Defroster - rear window, door mirrors .....	46

Steering wheel adjustment ....	43
Airbag .....	12
Cruise control .....	41
Radio keypad .....	173
Windscreen washers/wipers ..	44
Direction indicator lever .....	43
Trip computer .....	40

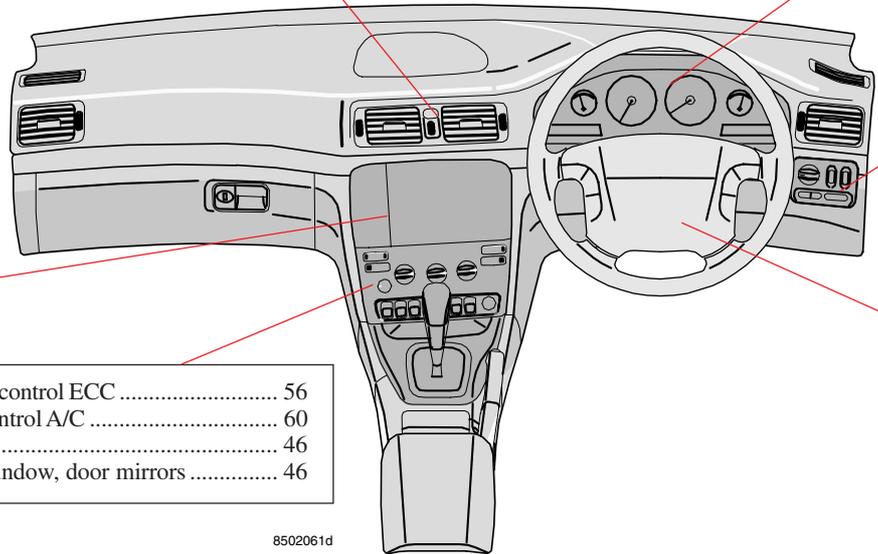


8502061d

# Interior - left-hand drive

Doors and Locks .....	78
Alarm .....	83
Power windows .....	48
Power mirror controls .....	49


Glovebox .....	70
----------------	----

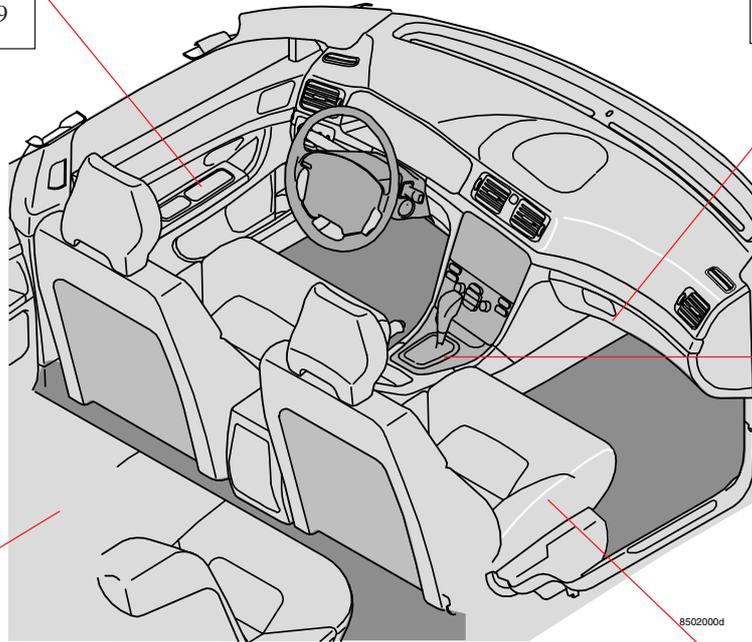

Manual gearbox .....	91
Automatic gearbox .....	92
Geartronic .....	93
Handbrake .....	47
Switches in centre console ...	38

Tipping backrests forward .....	74
Hatch for long loads .....	74
Tilting head restraints forward ...	39
Adjusting head restraints .....	67
Child locks .....	82
Integrated booster cushion for children .....	28

Manual adjustment of front seats .....	66
Electrical adjustment of front seats .....	68
Seat heating .....	46
Cleaning the upholstery .....	141

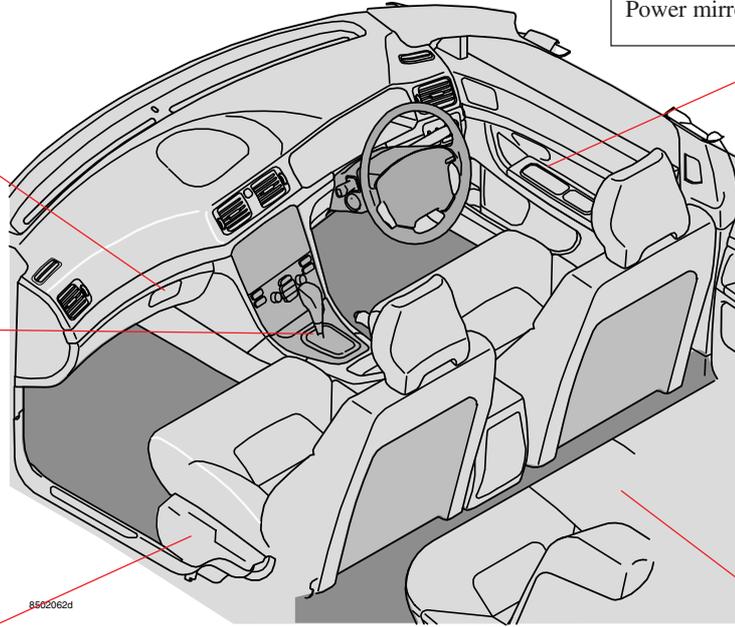

Glovebox ..... 70

Manual gearbox ..... 91  
 Automatic gearbox ..... 92  
 Geartronic ..... 93  
 Handbrake ..... 47  
 Switches in centre console ... 38

Manual adjustment of front seats ..... 66  
 Electrical adjustment of front seats ..... 68  
 Seat heating ..... 46  
 Cleaning the upholstery ..... 141

Doors and Locks ..... 78  
 Alarm ..... 83  
 Power windows ..... 48  
 Power mirror controls ..... 49

Tipping backrests forward ..... 74  
 Hatch for long loads ..... 74  
 Tilting head restraints forward ... 39  
 Adjusting head restraints ..... 67  
 Child locks ..... 82  
 Integrated booster cushion  
 for children ..... 28


8502062d

# Exterior

Sunroof .....	50
---------------	----

Cleaning the car body .....	140
Rustproofing .....	138
Touching up paintwork .....	139

Fuel filler flap .....	88
Refuelling .....	88
Economical driving .....	89

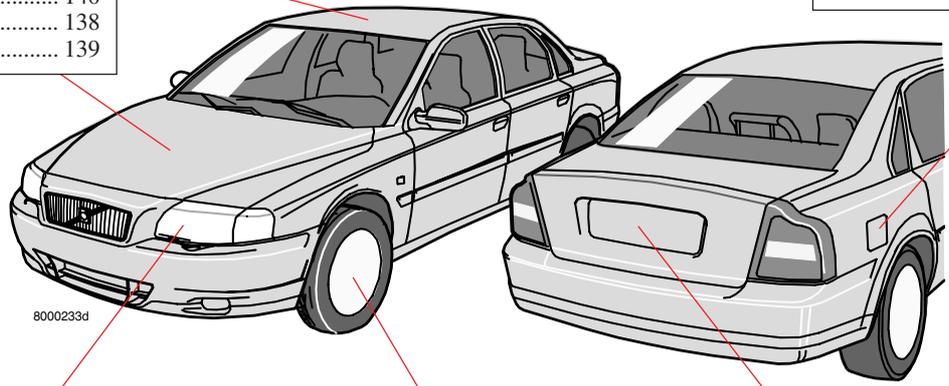

Replacing main beam bulb .....	132
Replacing dipped beam bulb .....	132
Replacing position lamp bulb .....	132
Replacing direction indicator lamp bulb .....	133
Replacing fog lamp bulb .....	134

Tyres .....	118
Wheels .....	118
Brakes .....	110
Spare wheel .....	121
Changing wheels .....	122

Boot lid .....	80
Replacing reversing lamp bulb .....	133
Replacing brake lamp bulb .....	133
Replacing tail lamp bulb .....	133
Replacing direction indicator lamp bulb .....	133
Replacing fog lamp bulb .....	133
Replacing number plate lighting .....	135



## Volvo Car Corporation's environmental philosophy

Environmental care, safety and quality are the three core values of the Volvo Car Corporation. They influence all operations. We also believe that our customers share our consideration for the environment.

Your Volvo complies with strict international environmental standards and is also manufactured in one of the cleanest and most resource-efficient plants in the world. Volvo Car Corporation has global certification to the ISO 14001 environmental standard. This leads to continuous improvements within the area of the environment.

EPI (Environmental Product Information) environmental product declarations are supplied for all Volvo models. You can now compare the environmental impact of different models and engines. Read more at [www.volvocars.com/epi](http://www.volvocars.com/epi)

## Fuel consumption

Volvo cars have competitive fuel consumption in each of their respective classes. The lower the fuel consumption the lower the emission of the greenhouse gas, carbon dioxide.

## Efficient emission control

Your Volvo is manufactured following the concept - Clean inside and out - a concept that encompasses a clean interior environment as well as highly efficient emission control. Your car saves fuel and releases minimal quantities of harmful substances.

Applied to the radiator is the PremAir®<sup>1</sup> - a catalytic coating which converts up to 75 % of hazardous ground-level ozone into pure oxygen.

<sup>1</sup> PremAir® is a registered trademark of Engelhard Corporation

## Air cleaning in the passenger compartment

A sophisticated air cleaning system, IAQS (Interior Air Quality System)<sup>2</sup>, option, ensures that the air in the passenger compartment is cleaner than the air outside.

The system consists of an electronic sensor and a carbon filter. The air intake is closed if the level of carbon monoxide in the passenger compartment becomes too high - for example in heavy town traffic, queues and tunnels. The entry of nitrous oxides, ground-level ozone and hydrocarbons is prevented by the carbon filter.

<sup>2</sup> Option.

# Volvo Car Corporation and the environment

## Ecological standard for textiles

Textiles and leather inside the car fulfil the requirements in accordance with the international ecological standard, Öko-Text 100<sup>1</sup>.

## Volvo workshops and the environment

Regular maintenance carried out by an authorised Volvo workshop creates the conditions for low fuel consumption and contributes to a cleaner environment.

Volvo service technicians are equipped with the knowhow and tools to ensure that your car delivers the best possible environmental performance.

## Reducing environmental impact

You can help reduce environmental impact, for example, by purchasing eco-labelled car care products and by servicing and maintaining the car according to the instructions in the owner's manual.

The following hints will help you to do your bit for the environment:

- Ensure that your tyre pressures are correct. Poorly inflated tyres increase fuel consumption.

- Since a roof rack and ski box increase air resistance, leading to significantly higher fuel consumption, they should be removed immediately after use.




- Remove unnecessary items from the car - the greater the load the higher the fuel consumption.
- Is your car equipped with an engine block heater? If so, use it for a few hours before starting from cold to reduce fuel consumption and exhaust emissions.

- Drive gently. Avoid unnecessary rapid acceleration and heavy braking.
- Drive in the highest gear possible. Low engine speeds result in lower fuel consumption.



- Ease back on the accelerator on downhill gradients.
- Use engine braking. Take your foot off the accelerator and change down.
- Avoid idling. Switch off the engine in traffic queues.
- Always dispose of environmentally hazardous waste, such as batteries and oils, in an environmentally safe manner. If uncertain, consult your Volvo workshop for advice.
- Service your car regularly.

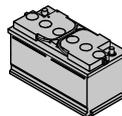

These hints will help you to reduce your fuel consumption without increasing your travel time or lessening the enjoyment of driving. Apart from being kind to your car, you'll be saving money - and the Earth's resources.


<sup>1</sup> Does not apply to the S80 Executive

---

---

## Safety

Seatbelts	10
Airbag (SRS)	12
Activating/deactivating the airbag (SRS)	16
Side airbags	18
Inflatable Curtain (IC)	20
WHIPS (Whiplash Protection System)	21
When are the safety systems activated?	23
Inspecting the airbags and inflatable curtains	24
Child safety	25

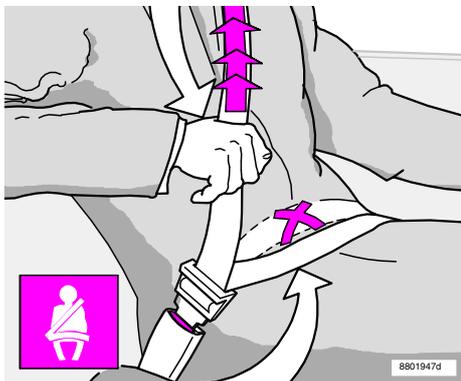

*Tensioning the hip strap. The belt must be positioned low down*

## Always use a seatbelt

Heavy braking can have serious consequences if the seatbelts are not used. Ensure that all passengers use their seatbelts. Otherwise, rear seat passengers may be thrown forward against the backs of the front seats in a collision.

### Putting on a seatbelt:

- Pull the belt out slowly and secure it by pressing the buckle into the lock. A loud "click" indicates that the belt has locked.

### Releasing the belt:

- Press the red lock button and let the belt retract. If the belt does not retract fully, feed the belt in by hand so that it does not hang loose.



*Label on seatbelts with seatbelt tensioner*

### The belt locks and cannot be withdrawn:

- if it is pulled out too quickly
- during braking and acceleration
- if the car leans heavily.

It is important that the belt lies against the body so it can provide maximum protection. Do not lean the backrest too far back. The seatbelt is designed to protect in a normal seating position.

### Keep the following in mind:


- do not use clips or anything else that can prevent the belt from fitting properly
- ensure the belt is not twisted or caught on anything
- the hip strap must be positioned low down (not over the abdomen)
- tension the hip strap over the lap by pulling the diagonal shoulder belt as illustrated.

## Seatbelt tensioner

All the seatbelts are equipped with belt tensioners. A mechanism in the belt tensioner tightens the belt around the body in the event of a sufficiently violent collision. This provides more effective restraint for passengers.

### **WARNING!**

- The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.
- Each belt is intended for one person only.
- Never modify or repair the seatbelts yourself. Contact an authorised Volvo workshop.
- If the belt has been subjected to a major load, such as in a collision, the entire belt must be replaced. Some of the protective characteristics of the belt may have been lost, even if it appears to be undamaged. Replace the seatbelt if the belt is worn or damaged. The new seatbelt must be type-approved and intended for installation in the same position as the replaced belt.

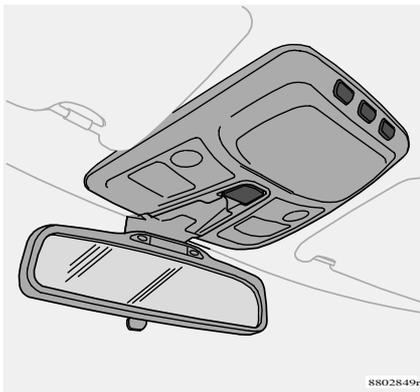

88028-49r

## Seatbelt reminder

The seatbelt warning symbol in the combined instrument panel and above the rearview mirror comes on until the driver and front seat passenger buckle their seatbelts. The seatbelt reminder switches off after 6 seconds if speed is below 10 km/h. If the driver or front seat passenger have not buckled their seatbelts, the reminder switches on again when the speed exceeds 10 km/h and switches off if the speed drops below 5 km/h. If the belt is released, the function reactivates when the speed exceeds 10 km/h.

The seatbelt reminder is intended for an adult sitting in the front seat. If a belt-fitted child seat is fitted in the front seat, the seatbelt reminder does not switch on.




8803443a

## Seatbelts and pregnancy

The seatbelt should always be worn during pregnancy. But it is crucial that it be worn in the correct way. The diagonal section should wrap over the shoulder then be routed between the breasts and to the side of the belly. The lap section should lay flat over the thighs and as low as possible under the belly. It must never be allowed to ride upward. Remove all slack from the belt and insure that it fits close to the body without any twists.

As a pregnancy progresses, pregnant drivers should adjust their seats and steering wheel such that they can easily maintain control of the vehicle as they drive (which means they must be able to easily operate the foot pedals and steering wheel). Within this context, they should strive to position the seat with as large a distance as possible between their belly and the steering wheel.

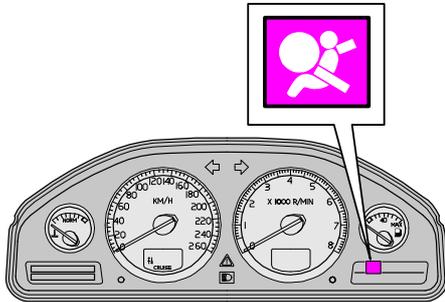

3800639d

### Warning symbol in combined instrument panel

The Airbag system<sup>1</sup> is monitored continuously by the control module and there is a warning lamp in the combined instrument panel. This lamp comes on when the ignition key is turned to position I, II or III. The symbol goes out after about 7 seconds if the Airbag system<sup>1</sup> is working correctly.




As well as the warning symbol, a message appears in the information display. If the warning symbol malfunctions, the warning triangle comes on and the message SRS AIRBAG SERVICE URGENT appears in the display. Contact an authorised Volvo workshop immediately.



### WARNING!

If the warning symbol for the Airbag system remains on or comes on while driving, it means that the Airbag system is not functioning fully. The symbol can indicate a fault in the seatbelt buckle, SIPS, SRS or IC system. Contact an authorised Volvo workshop immediately.

1. Includes SRS and seatbelt tensioner, SIPS and IC.

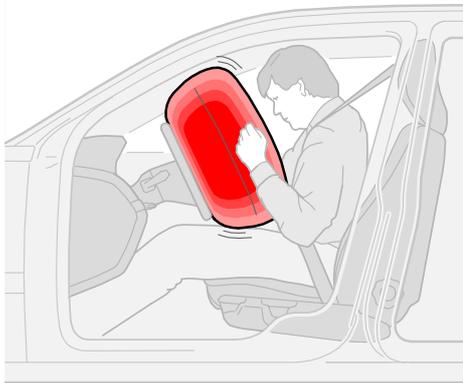


8801907e

## Airbag (SRS) on the driver's side

The car has an SRS airbag (Supplemental Restraint System) in the steering wheel to supplement the protection afforded by the seatbelt. This airbag is fitted folded up into the centre of the steering wheel. The steering wheel is marked SRS AIRBAG.

### **WARNING!**

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

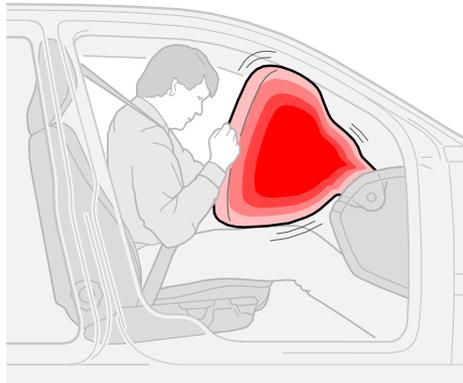

8801889e

## Passenger airbag (SRS)

The passenger airbag<sup>1</sup> is fitted folded up behind a panel above the glovebox. This panel is marked SRS AIRBAG.

### **WARNING!**

To minimise the risk of injury if the airbag deploys, passengers must sit as upright as possible with their feet on the floor and backs against the backrest. Seatbelts must be secured.

### **WARNING!**

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated<sup>2</sup>.


Never allow a child to stand or sit in front of the front passenger seat. No one shorter than 140 cm (4 ft 7) should sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger the life of the child.


2. For information on activated/deactivated airbag (SRS) see page 16.

1. Not all cars have a passenger airbag (SRS). This can be unselected when the car is ordered.

## Airbag (SRS)

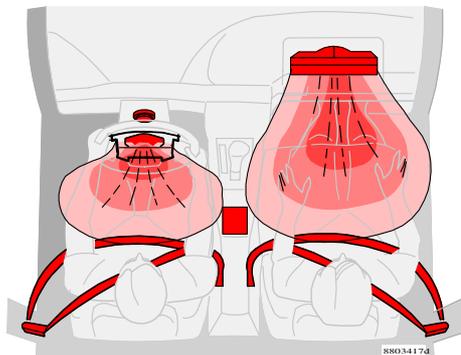

*SRS system, left-hand drive*

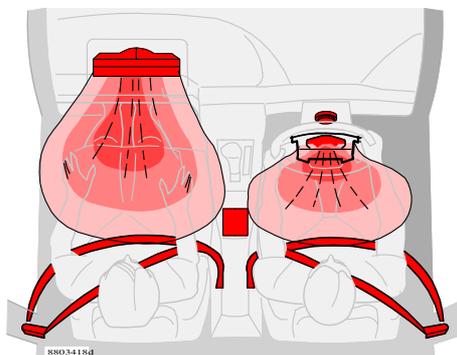

*SRS system, right-hand drive*



### **WARNING!**



Repairs must only be performed by an authorised Volvo workshop. Work on the SRS system can cause malfunction and result in serious personal injury.

### **SRS system**

The SRS system consists of a gas generator surrounded by an inflatable airbag. A sufficiently violent collision trips sensors and ignites the gas generator, inflating the airbag with hot gas. To cushion the impact, the airbag deflates when compressed. When this occurs, smoke escapes into the car. This is completely normal. The entire process, including inflation and deflation of the airbag, occurs within tenths of a second.

### **NOTE!**

- The sensors react differently depending on the course of the collision and whether the seatbelts on the driver and passenger side are used. It is therefore possible that only one (or none) of the airbags may inflate in a collision. The SRS system senses the force of the collision on the car and adapts accordingly so that one or more airbags is deployed.
- The airbags have a function whereby their capacities are adapted to the collision force to which the vehicle is subjected.

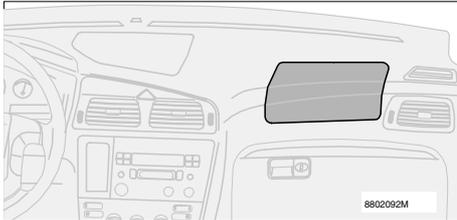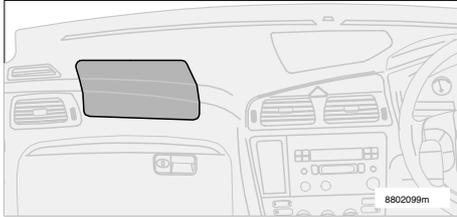


*Location of the passenger airbag in left-hand drive and right-hand drive cars*

**⚠ WARNING!**


Never interfere with SRS components in the steering wheel or the panel above the glovebox.

Objects and accessories must not be positioned or glued on or near the SRS Airbag panel (above the glovebox) or in the area affected by a deployed airbag.

## Activating/deactivating the airbag (SRS)

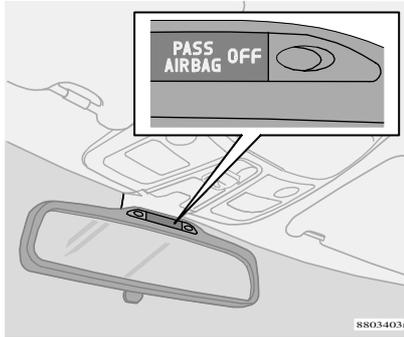

*Indicator showing that the passenger airbag (SRS) is deactivated*

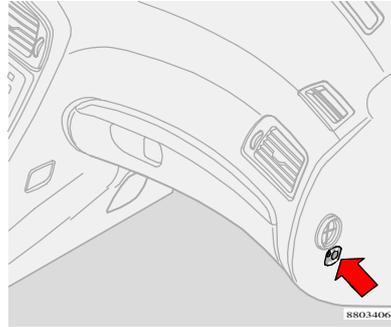

*PACOS (Passenger Airbag Cut-Off Switch)*

### **PACOS (option)**

The airbag (SRS) for the front passenger seat can be deactivated. This is necessary if a child seat is to be placed there.

#### **Indicator**

A text message in the rearview mirror indicates that the passenger airbag (SRS) is deactivated.

### **Activating/deactivating**

The switch is located on the passenger end of the dashboard and is accessible when the passenger door is open. Check that the switch is in the required position. Volvo recommends that the ignition key is used to change position. (Other items with a shape similar to a key can be used).



### **WARNING!**

- **Activated airbag (passenger seat):**  
Never place a child in a child seat or on a booster cushion in the front passenger seat when the airbag is activated. This also applies to anyone shorter than 140 cm (4 ft 7).
- **Deactivated airbag (passenger seat):**  
No one taller than 140 cm (4 ft 7) should sit in the front passenger seat when the airbag is deactivated.

Failure to follow the advice given above can endanger life.



### **WARNING!**

If the car is equipped with a front passenger airbag (SRS), but does not have PACOS, the airbag will always be activated.



### WARNING!

Do not allow anyone to sit in the front passenger seat if the text message in the roof panel indicates that the airbag (SRS) is deactivated and the airbag warning symbol is displayed in the combined instrument panel. This indicates that there has been a severe malfunction. Contact an authorised Volvo workshop as soon as possible.

### Switch position


**ON** = Airbag (SRS) **activated**. With the switch in this position, persons taller than 140 cm (4 ft 7) can sit in the front passenger seat, but **never** children in a child seat or on a booster cushion.

**OFF** = Airbag (SRS) is **deactivated**. With the switch in this position, children in a child seat or on a booster cushion can sit in the front passenger seat, but **never** persons taller than 140 cm (4 ft 7).

## Side airbags



Side airbag locations

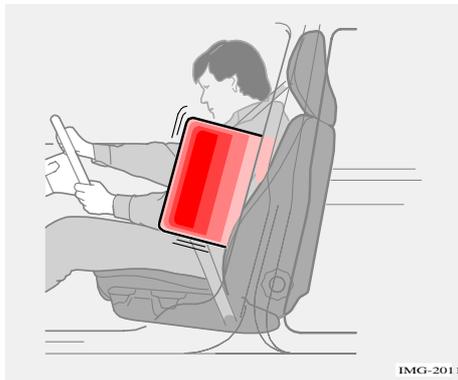

Inflated side airbag

### Side airbags - SIPS bags

A large proportion of the collision force is transferred by the SIPS (Side Impact Protection System) to the floor, roof, beams, pillars, and other structural parts of the body. The side airbags on the driver's and front passenger seats protect the chest area and are an important part of the SIPS. The SIPS bag system consists of two main parts, the side airbags and the sensors. The side airbags are located in the front seat backrests.

#### **WARNING!**

Side airbags are a supplement to the SIPS system. Always wear a seatbelt.

#### **WARNING!**

Repairs must only be performed by an authorised Volvo workshop.  
Work on the SIPS system can cause malfunction and result in serious personal injury.

#### **WARNING!**

Do not put objects in the area between the outside of the seat and the door panel, since this area is required by the side airbag.

#### **WARNING!**

Use only Volvo genuine car seat covers, or seat covers approved by Volvo. Other seat covers may impede the operation of the side air bags.

### Child seats and side airbags


The side airbag does not diminish the protection provided by the car to children seated in a child seat or on a booster cushion.

A child seat or booster cushion can be placed on the front passenger seat provided that the car does not have an activated<sup>1</sup> passenger airbag.

1. For information on activated/deactivated airbag (SRS) see page 16.



*Left-hand drive*


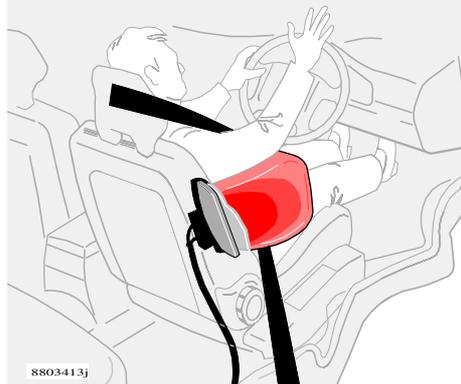


*Right-hand drive*

### **SIPS bag system**

The SIPS bag system consists of a gas generator, side airbag and sensors. A sufficiently violent collision trips the sensors and ignites the gas generator, inflating the side airbag. The airbag inflates between the occupant and the door panel and thereby cushions the initial impact while deflating. The side airbag is only normally deployed on the side of the collision.

## Inflatable Curtain (IC)

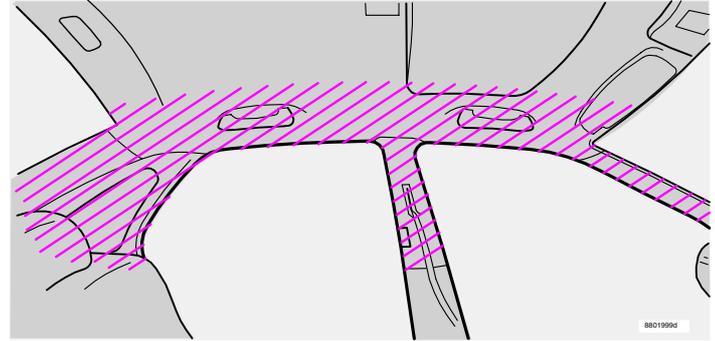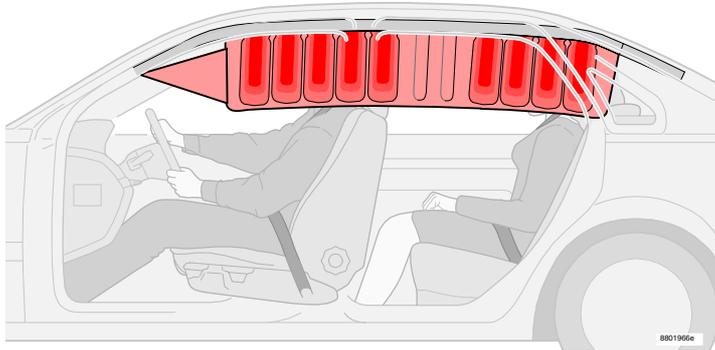

### Properties

The inflatable curtain, IC (Inflatable Curtain), is a supplement to the SIPS system. It is concealed in the headlining along both sides of the roof and protects both front and rear seat passengers. The inflatable curtain is activated by the SIPS collision sensors if the car is hit from the side. When deployed, the inflatable curtain inflates. The inflatable curtain helps to prevent the driver and passengers from striking their heads on the inside of the car during a collision.



### WARNING!


The inflatable curtain is a supplement to the seatbelts. Always wear a seatbelt.



### WARNING!

- Never hang or fasten anything on the roof handles. The hook is only intended for light outer garments (not for hard objects such as umbrellas).
- Do not screw or fit anything to the headlining, door pillars or side panels. This could compromise the intended protection. Only use Volvo genuine parts that are approved for fitting in these areas.
- Do not load the car higher than 50 mm under the top edge of the rear passenger windows to avoid affecting the protection of the inflatable curtain in the event of a side collision.

## WHIPS (Whiplash Protection System)

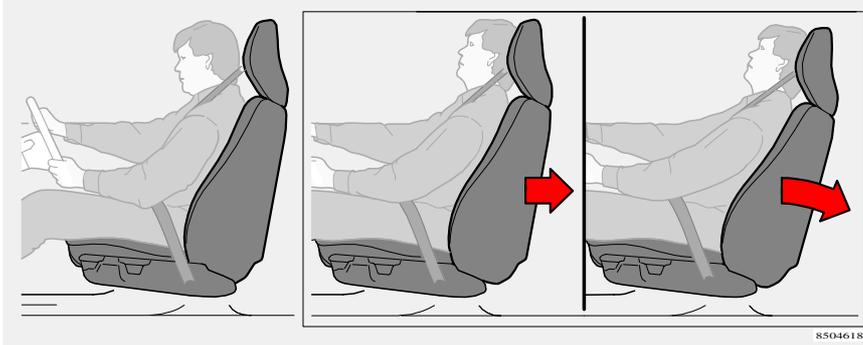

### WHIPS system and child seats/ booster cushions

The WHIPS system does not diminish the protection provided by the car to children seated in a child seat or on a booster cushion.

### Correct seating position

For the best possible protection, the driver and front seat passenger should sit in the centre of the seat with as little space as possible between the head and the head restraint.

### Protection against whiplash injury - WHIPS

The whiplash protection system (WHIPS) consists of energy absorbing backrests and specially designed head restraints for the front seats. The system is actuated by a rear-end collision, where the angle and speed of the collision, and the nature of the colliding vehicle all have an influence.



#### **WARNING!**

The inflatable curtain is a supplement to the seatbelts. Always wear a seatbelt.

### Properties of the seat

When the WHIPS system is deployed, the front seat backrests fall backward to alter the position of the driver and front seat passenger. This diminishes the risk of whiplash injury.



#### **WARNING!**

Never modify or repair the seat or WHIPS system yourself. Contact an authorised Volvo workshop.

## WHIPS (Whiplash Protection System)



### WARNING!

- If a seat has been subjected to extreme forces, such as due to a rear-end collision, the WHIPS system must be checked by an authorised Volvo workshop.
- Part of the WHIPS system's protective capacity may have been lost even if the seats appear to be undamaged. Contact an authorised Volvo workshop to have the system checked even after a minor rear-end collision.

### Do not obstruct the WHIPS system



#### WARNING!

Do not squeeze rigid objects between the rear seat cushion and the front seat backrest. Make sure you do not obstruct the function of the WHIPS system.



#### WARNING!

If a rear seat backrest is folded down, the corresponding front seat must be moved forward so that it does not touch the folded backrest.

## When are the safety systems activated?

System	Triggered
Seatbelt tensioner	In the event of a head-on collision and/or overturning.
Airbags SRS	In the event of a head-on collision <sup>1</sup> .
Side airbags	In the event of a side impact <sup>1</sup> .
Inflatable Curtain IC	In the event of a side impact or if the car overturns <sup>1</sup> .
WHIPS	In a rear-end collision <sup>1</sup> .

1. The bodywork of the car could be greatly deformed in a collision without airbag deployment. A number of factors such as the rigidity and weight of the object hit, the speed of the car, the angle of the collision etc. affects how the different safety systems of the car are activated.

If the airbags have been deployed, the following is recommended:

- Have the car transported to an authorised Volvo workshop. Do not drive with deployed airbags.
- Have an authorised Volvo workshop replace components in the car's safety systems.
- Always contact a doctor.

**NOTE!** The SRS, SIPS, IC and belt tensioner systems are deployed only once during a collision.



### WARNING!

The Airbag control unit is located in the centre console. If the centre console is drenched with water or other liquid, disconnect the battery cables. Do not attempt to start the car since the airbags may deploy. Have the car transported to an authorised Volvo workshop.



### WARNING!


Never drive with deployed airbags. They can make steering difficult. Other safety systems may also be damaged. The smoke and dust created when the airbags are deployed can cause skin and eye irritation after intensive exposure. In case of irritation, wash with cold water. The rapid deployment sequence and airbag fabric may cause friction injury and burns to the skin.

# Inspecting the airbags and inflatable curtains

## Inspection intervals

The decal on the door pillar(s) shows the dates (year, month) when you should contact an authorised Volvo workshop to inspect and, if necessary, replace the airbags, belt tensioners and inflatable curtains. If you have questions concerning the systems, contact an authorised Volvo workshop.

1. Driver airbag
2. Front passenger airbag
3. Side airbag on the driver's side
4. Side airbag on the passenger side
5. Inflatable curtain on the driver's side
6. Inflatable curtain on the passenger side

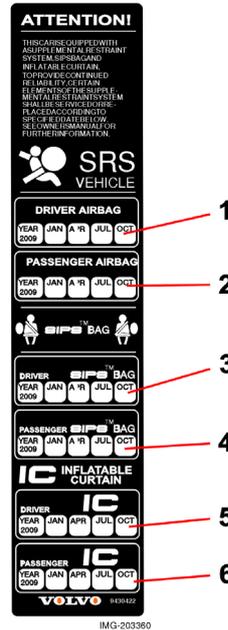


*This decal is located in the rear left door opening*



Volvo's own child safety equipment is designed for your car. Use Volvo genuine equipment to best ensure that the mounting points and attachments are correctly positioned and are sufficiently strong.

### You may place:

- a child seat or booster cushion on the front passenger seat, provided the passenger airbag is not activated<sup>1</sup>.
- a rear-facing child seat in the rear seat that uses the back of the front seat as support.

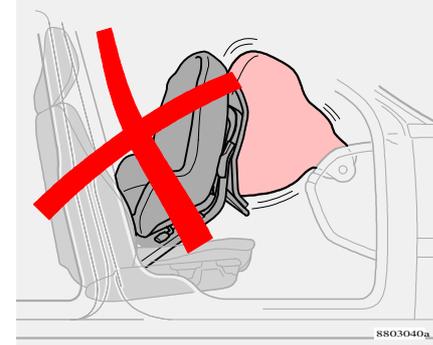

*Child seats and airbags are not compatible*

## Children should sit comfortably and safely

The position of a child in the car and the choice of equipment is dictated by the child's height and weight, for more information see page 27.

Children who are shorter than 150 cm (4 ft 11) must be carried in adequate child protection.

**NOTE!** Regulations regarding the placement of children in cars vary from country to country. Check what laws apply.

Children of all ages and sizes must always sit correctly secured in the car. Never allow a child to sit on the knee of a passenger.

## Child seats and airbags (SRS)


Always place a child in the rear seat if the passenger airbag (SRS) is activated<sup>1</sup>. A child in a child seat on the front passenger seat may suffer serious injury if the airbag deploys.



### **WARNING!**

Persons shorter than 140 cm (4 ft 7) may only sit in the front passenger seat if the passenger airbag is deactivated.

1. For information on activated/deactivated airbag (SRS) see page 16.

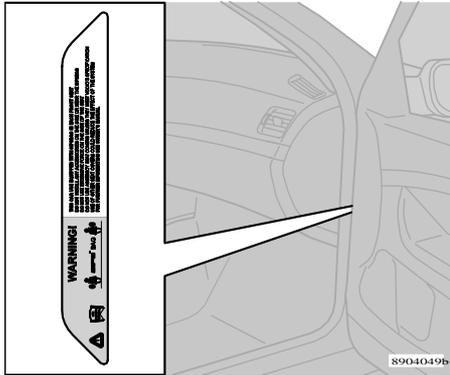

*Decals on the end of the dashboard*



**8903808a**

*Decal located on the car's end cover*



*Decal located on the car's end cover  
(Australia only)*



### **WARNING!**

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated<sup>1</sup>. Failure to follow this advice could endanger the life of the child.

1. For information on activated/deactivated airbag (SRS) see page 16.



### **WARNING!**

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.  
No one shorter than 140 cm (4 ft 7) should sit in the front passenger seat if the airbag (SRS) is activated.  
Failure to follow the advice given above can endanger the life of the child.

Weight / Age	Front seat	Outer rear seats	Centre rear seat
<10 kg (0-9 months)	<ol style="list-style-type: none"> <li>Rear-facing child seat, secured with seatbelt. <i>L: Type approval no. E5 03160</i></li> <li>Rear-facing child seat, secured with ISOFIX mounting. <i>L: Type approval no. E5 03162</i></li> <li>Rear-facing child seat, secured with seatbelt and straps. <i>L: Type approval no. E5 03135</i></li> </ol>	<ol style="list-style-type: none"> <li>Rear-facing child seat, secured with seatbelt and support legs. <i>L: Type approval no. E5 03160</i></li> <li>Rear-facing child seat, secured with ISOFIX mounting and support legs. <i>L: Type approval no. E5 03162</i></li> <li>Rear-facing child seat, secured with seatbelt, support legs and straps. <i>L: Type approval no. E5 03135</i></li> </ol>	<ol style="list-style-type: none"> <li>Rear-facing child seat, secured with seatbelt, support legs and straps. <i>L: Type approval no. E5 03135</i></li> </ol>
9-18 kg (9-36 months)	<ol style="list-style-type: none"> <li>Rear-facing child seat, secured with seatbelt. <i>L: Type approval no. E5 03161</i></li> <li>Rear-facing child seat, secured with ISOFIX mounting. <i>L: Type approval no. E5 03163</i></li> <li>Rear-facing child seat, secured with seatbelt and straps. <i>L: Type approval no. E5 03135</i></li> </ol>	<ol style="list-style-type: none"> <li>Rear-facing child seat, secured with seatbelt and support legs. <i>L: Type approval no. E5 03161</i></li> <li>Rear-facing child seat, secured with ISOFIX mounting and support legs. <i>L: Type approval no. E5 03163</i></li> <li>Rear-facing child seat, secured with seatbelt, support legs and straps. <i>L: Type approval no. E5 03135</i></li> </ol>	<ol style="list-style-type: none"> <li>Rear-facing child seat, secured with seatbelt, support legs and straps. <i>L: Type approval no. E5 03135</i></li> </ol>
15-36 kg (3-12 years)	<ol style="list-style-type: none"> <li>Booster cushion with or without backrest. <i>L: Type approval no. E5 03139.</i></li> </ol>	<ol style="list-style-type: none"> <li>Booster cushion with or without backrest. <i>L: Type approval no. E5 03139</i></li> </ol>	<ol style="list-style-type: none"> <li>Booster cushion with or without backrest. <i>L: Type approval no. E5 03139</i></li> <li>Integrated booster cushion. <i>B: Type approval no. E5 03140</i></li> </ol>



## WARNING!

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.


No one shorter than 140 cm (4 ft 7) should sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger the life of the child.


**L:** Suitable for certain child seats in accordance with the list. Child seats can be vehicle-specific, limited, semi-universal or universal.

**B:** Integrated and approved for this age group.

**NOTE!** For information on activated/deactivated airbag (SRS), see page 16.

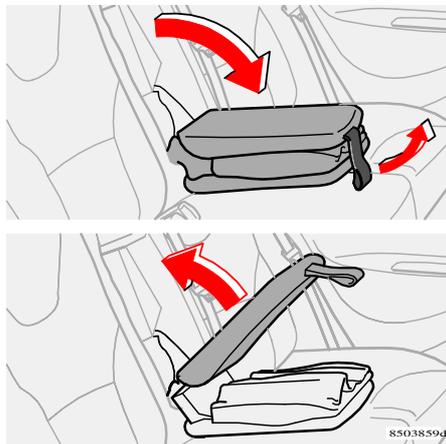

*Folding out the booster cushion*

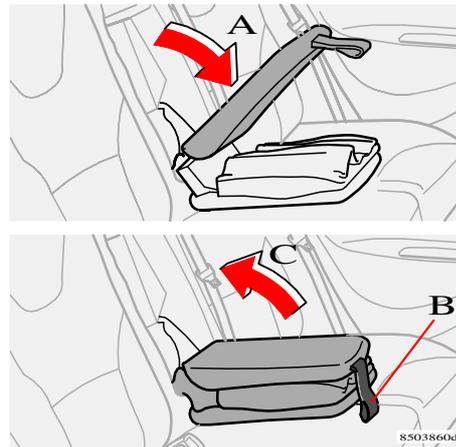

*Folding in the booster cushion*

## Integrated booster cushion (option)

Volvo's integrated booster cushion for the centre seat is specially designed to provide optimum safety for children.

When used with the regular seatbelt, the booster cushion is approved for children weighing between 15 and 36 kg.

### Folding out the booster cushion:

- Fold down the booster cushion.
- Pull apart the Velcro.
- Raise the upper section back into place.

### Check that:

- the seatbelt is in contact with the child's body and is not slack or twisted.
- the belt lies correctly over the shoulder.

- the lap belt is low over the pelvis for optimum protection.
- the belt does not touch the child's throat or lie below the shoulder.
- Carefully adjust the position of the head restraint to suit the child.

### Folding in the booster cushion:

- Fold down the upper section (A).
- Fasten the Velcro (B).
- Raise the booster cushion into the rear seat backrest (C).

**NOTE!** Make sure that both sections of the booster cushion are secured with the Velcro strap (B) before folding in. Otherwise the upper section (A) can become trapped in the rear seat backrest (C) when the booster cushion is folded out again.



## WARNING!

- Repair or replacement should only be performed by an authorised Volvo workshop. Do not make any modifications or additions to the booster cushion.
- If an integrated booster cushion has been subjected to a major load, such as in conjunction with a collision, the entire booster cushion must be replaced. Even if the booster cushion appears to be undamaged, it may not afford the same level of protection. The booster cushion must also be replaced if it is heavily worn.

## Fitting a child seat

Volvo has child safety products that are designed for and tested by Volvo.


When using other products that are available on the market, it is important to read the fitting instructions included with the product.

- Do not attach the straps for the child seat to the horizontal adjustment bar, springs, rails or beams under the seat. Sharp edges can damage the straps.
- Allow the back of the child seat to rest against the dashboard. This applies to cars without a passenger airbag, or where the airbag is deactivated.



### WARNING!

Never place the child seat in the front seat if the car is equipped with an activated<sup>1</sup> front passenger airbag. If problems arise when fitting child safety products, contact the manufacturer for clearer instructions.

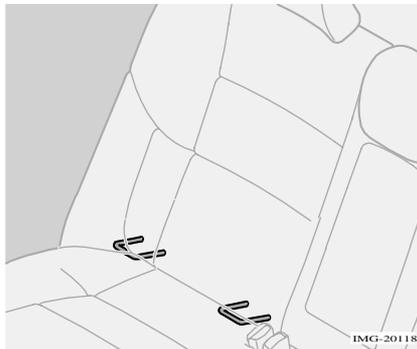

## ISOFIX fixture system for child seats (option)

The outer rear seats have ISOFIX attachment points for child seats. Contact a Volvo dealer for further information on child safety equipment.

1. For information on activated/deactivated airbag (SRS) see page 16.




---

---

## Instruments, switches and controls

Combined instrument panel	32
Indicator and warning symbols	33
Messages in the display	37
Switches in the centre console	38
Trip computer	40
Cruise control	41
Lighting panel	42
Left-hand stalk switch, Steering wheel adjustment	43
Right-hand stalk switch	44
Ignition switch and steering wheel lock	45
Hazard warning flashers, Rear defroster, Heated seats	46
Parking brake, Electrical socket	47
Power windows	48
Rearview mirror/door mirrors	49
Power sunroof	50
Sun screen, Sun blinds	51
Laminated side windows (option), Water-repellent coating (option)	52

## Combined instrument panel

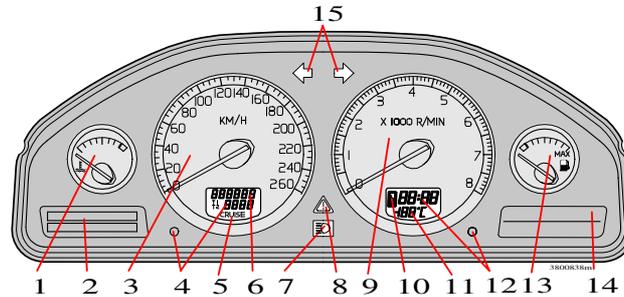

### 1. Temperature gauge

Displays the engine cooling system temperature. If the temperature is abnormally high and the needle enters the red field a message is shown in the display. Remember that extra lamps in front of the radiator grille reduce the cooling capacity with high outside temperatures and high engine loads.

### 2. Display

The display shows information and warning messages.

### 3. Speedometer

Shows the speed of the car.

### 4. Trip odometer, T1 and T2

The trip odometer is used for measuring shorter distances. The right hand digit gives 100 meter units. Depress the button for more than 2 seconds to reset. Change between the trip odometers using one short press on the button.

### 5. Cruise control indicator

See page 41.

### 6. Odometer

The odometer indicates the total mileage of the car.

### 7. Main beam on/off

### 8. Warning symbol

If a fault should occur, the symbol lights and a message is shown in the display.

### 9. Tachometer

Gives engine speed in thousands of revolutions per minute (RPM). The needle on the tachometer must not enter the red field.

### 10. Automatic gearbox indicator

The selected gearshift programme is displayed here. If you have Geartronic automatic transmission and drive in manual mode, the current manual gear is displayed.

### 11. Outside temperature gauge

Displays the outside temperature. When the temperature lies between +2 °C and -5 °C, a snowflake symbol is shown in the display. The symbol warns of slippery road conditions. When the car is or was stationary, the outside temperature gauge may read a higher reading than is actual.

### 12. Clock


Turn the button to set the time.

### 13. Fuel gauge

When the lamp in the instrument panel lights, approximately 8 litres of usable fuel remain in the tank.

### 14. Indicator and warning symbols

### 15. Direction indicators - left /right

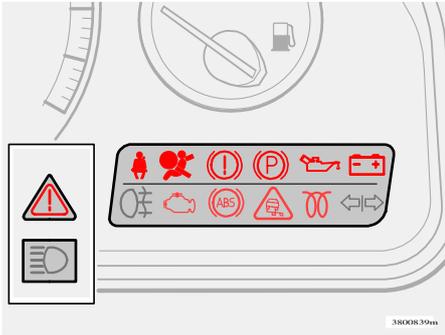

## Warning symbol in centre of dashboard

This symbol shines as an **red** or **yellow** light depending on the severity of the fault discovered. See next page for more information!

### Red symbol

Stop the car. Read the message in the display. Symbol and message text are shown until the error is rectified.

### Yellow symbol

Read the message in the display. Rectify.

The message text is cleared using the READ button, see page 37, or it disappears after 2 minutes.

## NOTE!

When the message text "TIME FOR REGULAR SERVICE" is shown, the symbol lamp and message text are cleared using the READ button, or they disappear after 2 minutes.

The indicator and warning symbols light when the ignition key is turned to driving position (position II) before starting. This shows that the symbols are functioning. When the engine is started all the symbols go out.

If the engine is not started within 5 seconds all the symbols go out except  and . Certain symbols may not have the function indicated, depending on car equipment. The symbol for the parking brake goes out when the parking brake is released.

## Indicator and warning symbols

### **WARNING!**

If both the **BRAKE** and **ABS** warning symbols are lit up there is a risk that the rear end will have a tendency to slide during heavy braking.



If **BRAKE** and **ABS** warning symbols light up at the same time, there may be a problem

in the brake force distribution.

- Stop the car in a safe place and switch off the engine.
- Start the car again.
- If both warning symbols go out the fault was temporary and it is not necessary to visit a workshop.
- If the warning symbols remain lit, check the brake fluid reservoir level first.
- If the reservoir level is below MIN the car should not be driven further. Have it towed to an authorised Volvo workshop to check the brake system.
- If the brake fluid level is normal and the lamps remain lit, carefully drive the car to the nearest authorised Volvo workshop to have the brake system checked.



### **Warning - fault in brake system**

If the **BRAKE** symbol lights up the brake fluid level may be too low.

- Stop the car in a safe place and check the brake fluid reservoir level.
- If the reservoir level is below MIN the car should not be driven further. Have it towed to an authorised Volvo workshop to check the brake system.



### **Warning - fault in ABS system**


If the **ABS** warning symbol lights up the **ABS** system is not functioning.

The car's normal braking system continues to function normally but without the **ABS** function.

- Stop the car in a safe place and switch off the engine.
- Start the engine again.
- If the warning symbol goes out, the fault was temporary and it is not necessary to visit a workshop.
- If the warning symbol remains lit, drive carefully to an authorised workshop to check the **ABS** system.

The indicator and warning symbols light when the ignition key is turned to driving position (position II) before starting. This shows that the symbols are functioning. When the engine is started all the symbols go out. If the engine is not started within 5 seconds all the

symbols go out except  and . Certain symbols may not have the function indicated, depending on car equipment. The symbol for the parking brake goes out when the parking brake is released.

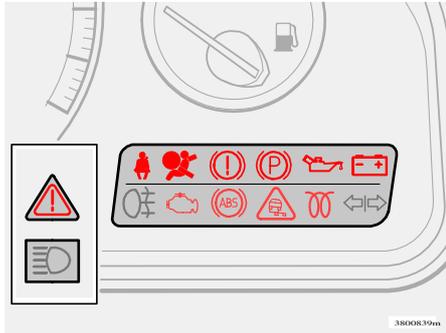

### Stability system STC\* and DSTC\*

The STC/DSTC system comprises several different functions that are described in detail on page 112.

#### The symbol lights and goes out again after approx. two seconds

The symbol lights for a system check when the car is started.

#### The symbol flashes

The SC function acts to prevent the car's drive wheels from spinning. The TC function acts to improve the car's traction.

The AYC function acts to prevent skidding.

#### The warning symbol shines with a steady amber glow

TRACTION CONTROL TEMPORARILY OFF is shown on the information display together with the symbol.

The TC function has been temporarily reduced due to high brake temperature.

The function is automatically reactivated when brake temperature returns to normal.

#### The warning symbol shines with a steady amber glow

ANTI-SKID SERVICE REQUIRED is shown on the information display together with the symbol.

The STC or DSTC system has been deactivated due to a fault.

- Stop the car in a safe place and switch off the engine.
- Restart the engine.

If the warning symbol remains lit, drive to an authorised Volvo workshop to have the system checked.

#### Fault in the STC or DSTC system

If the symbol comes on and the additional text "ANTI-SKID SERVICE REQUIRED" and you have not deactivated any of the system, this indicates a fault in a part of the system.

- Stop the car in a safe place and switch off the engine. Start the car again.
- If the warning symbol goes out this was just a temporary indication fault and you do not need to visit a workshop.
- If the warning symbol remains on, drive to an authorised Volvo workshop to check the system.

\* The STC and DSTC system is an option on some markets

### WARNING!

Under normal driving conditions, the STC/DSTC system improves the car's road safety, but this should not be taken as a reason to increase speed. Always follow the usual precautions for safe cornering and driving on slippery surfaces.

## Indicator and warning symbols

The indicator and warning symbols light when the ignition key is turned to driving position (position II) before starting. This shows that the symbols are functioning. When the engine is started all the symbols go out. If the engine is not started within 5 seconds all the

symbols go out except  and . Certain symbols may not have the function indicated, depending on car equipment. The symbol for the parking brake goes out when the parking brake is released.



### Fault in car emissions systems

Drive to a Volvo workshop to have it checked.



### Rear fog lamp

The lamp lights up when the rear fog lamp is on.



### Trailer indicator lamp

Flashes when the car and trailer direction indicators are in use.

If the lamp does not flash, one of the direction indicators on the trailer or car is defective.



### Fault in SRS

If the symbol remains lit or lights while driving a fault has been found in the SRS system. Drive to a Volvo workshop to have it checked.



### Parking brake applied

Remember that the light only indicates **that** the parking brake is applied, **not how hard**. Check by pulling the lever! **You must always pull it hard enough for the brake to fasten in a “notch”.**



### Generator not charging

If the lamp lights while driving, there is probably a fault in the electrical system. Contact a Volvo workshop.



### Low oil pressure

If the lamp lights while driving, engine oil pressure is too low. Stop the engine immediately and check the engine oil level.




### Seat belt reminder

The lamp shines until the driver connects his/her safety belt.



### Engine pre-heater (diesel)

The lamp lights to inform that the engine is pre-heating. When the lamp goes out, the car may be started. Only applies to diesel-powered cars.

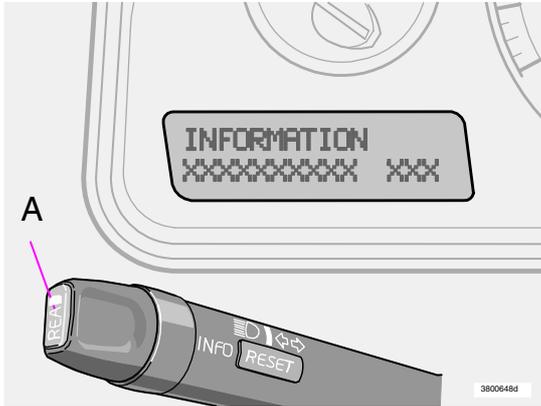

## Messages in the display

Whenever a warning or indicator symbol lights up, a message is displayed. When you have read and understood, press the **READ** button (A). Read messages are then erased from the display and are put into the memory. The message remains in the memory until the fault is remedied.

**Very serious fault messages cannot be erased from the display. They remain in the display until the fault is remedied.**

**NOTE!** If a warning message interrupts when you, for example, are in the trip computer menu or wish to use the telephone, you must first acknowledge the message by pressing the **READ** button (A).

Messages stored in the memory can be read again. Press the **READ** button (A) if you wish to see the stored message. You can scroll through the messages in the memory by pressing the **READ** button (A). Press the **READ** button (A) to return read messages to the memory.


Message	Significance/Action
STOP SAFELY	Stop and switch off the engine. Serious risk of damage.
STOP ENGINE	Stop and switch off the engine. Serious risk of damage.
SERVICE URGENT	Take your car in for service immediately.
SEE MANUAL	Consult your owner's manual.
SERVICE REQUIRED	Take your car in for service as soon as possible.
FIX NEXT SERVICE	Have your car checked at the next service interval.
TIME FOR REGULAR SERVICE	When this message is shown, the car is due for a service. When the message is displayed is affected by the distance travelled, number of months since last service and engine running time.
1) OIL LEVEL LOW - FILL OIL*	Low engine oil level. Check and remedy as soon as possible. See page 149 for more information.
2) OIL LEVEL LOW - STOP SAFELY*	Low engine oil level. Stop the car safely, switch off the engine and check the oil level. See page 149.
2) OIL LEVEL LOW - STOP ENGINE*	Low engine oil level. Stop the car safely, switch off the engine and check the oil level. See page 149.
2) OIL LEVEL LOW - SEE MANUAL*	Low engine oil level. Stop the car safely, switch off the engine and check the oil level. See page 149.

1) Shown together with an **amber** warning triangle.

2) Shown together with a **red** warning triangle.


\* Only applies to engine variants with oil level sensor.

## Switches in the centre console

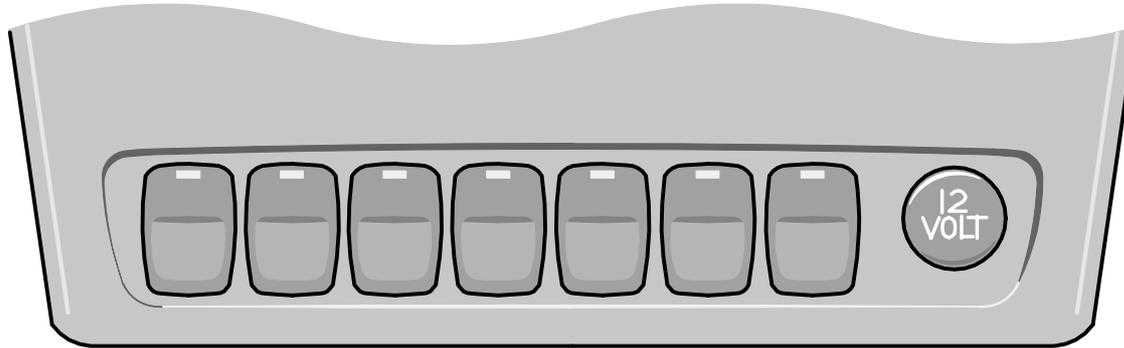

3603559d

*NOTE! The order of the buttons may vary.*

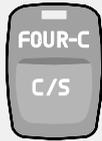

3603554m

### Active chassis, FOUR-C (option)

Press the button to shift between Comfort and Sport mode. See also page 95.



3603680m

### BLIS - Blind Spot Information System (option)

Press the button to deactivate or reactivate the function. See page 113 for further information.



3603546m

### The STC/DSTC system\*

This button is used to reduce or reactivate the functions in the STC/DSTC system. When the LED in the button comes on, the STC/DSTC system is activated (if no fault arises).



3603549m

**NOTE!** Hold the button depressed for at least half a second to reduce the function of the STC/DSTC system. The LED in the button goes out and the text "STC SPIN CONTROL OFF" or "DSTC SPIN CONTROL OFF" is shown in the display.

\* Option on some markets

Reduce the system if you must use a wheel of a different dimension than the other wheels.

The STC/DSTC system is reactivated when the engine is started.



### WARNING!

Remember the driving characteristics of the car change if you deactivate the STC/DSTC system.



### Lowering outer rear seat head restraints (option)

- Turn the ignition key to position I or II.

- Press the button to lower the rear head restraints to improve visibility.

Do not lower the head restraints if either of the outer seats is occupied.

The head restraints must be restored to an upright position manually.

The head restraints must be in an upright position for the rear seat backrests to be lowered.



### Retractable door mirrors (option)

This button is used to retract the door mirrors if they are folded out, or to fold them out

if they are retracted.

Do as follows if a door mirror has been accidentally folded in or out:

- Manually fold the door mirror forward as far as possible.

- Turn the ignition key to position II.

- Fold the door mirror inward and then outward using the button. The door mirrors have now returned to their original fixed positions.



### Parking assistance (option)

The system is always activated when the car is started. Press the button to deactivate/reactivate parking assistance. See also page 96.



### Locking the boot lid

(certain countries)

Press this button in order to lock the boot lid. The boot lid remains locked even if the doors are unlocked manually with the master key, the master key remote control or the service key.



### Deactivating the deadlock function<sup>1</sup> and detectors

Use this button if you wish to switch off the deadlock function (doors cannot be opened from the inside when locked). This button can also be used when deactivating the alarm system movement and tilt detectors<sup>2</sup>. The LED lights when the functions are deactivated.



### Auxiliary lamps (accessory)

Use this button if the auxiliary lamps of the car are to light together with the main beam or if you wish to deactivate this function. The LED in the button is lit when the function is active.




### Electric socket/Cigarette lighter (option)

The electric socket can be used for various 12V accessories, such as mobile phones or coolers. The cigarette lighter is activated by pushing in the button. Once the lighter is heated, the button will pop out. Pull out the lighter to use it. For reasons of safety, always keep the lighter in the socket when it is not in use. The maximum current is 10A.

**NOTE!** The relative positions of the buttons can vary.

## Trip computer

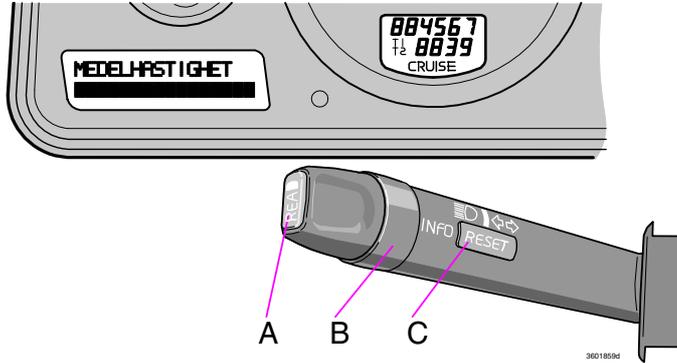

### Trip computer

The trip computer displays the following information:

- AVERAGE SPEED
- SPEED IN MILES PER HOUR<sup>7</sup>
- CURRENT FUEL CONSUMPTION
- AVERAGE FUEL CONSUMPTION
- RANGE TO EMPTY FUEL TANK

**NOTE!** If a warning message interrupts while you are using the trip computer menu, you must acknowledge the warning message. Then press the READ button (A) to return to the trip computer.

7. Certain countries

### Controls

In order to access the trip computer information turn the ring (B) in steps, either forwards or backwards. By turning again you return to the starting point.

### Average speed

The average speed since the last reset (**RESET**). When the ignition is switched off, the average speed is stored and used as the basis of the new value when you continue driving. This can be reset with the **RESET** button (C) on the lever.

### Speed in miles per hour<sup>7</sup>

Current speed is displayed in mph.

### Current fuel consumption

Continuous information on current fuel consumption. Fuel consumption is calculated every second. The figure in the display is updated every few seconds. When the car is stationary “----” is displayed.

**NOTE!** The displayed value may be slightly off if a fuel-driven heater is used.

### Average fuel consumption

The average fuel consumption since the last reset (**RESET**). When the ignition is switched off, the average fuel consumption is stored and remains until reset with the **RESET** button (C) on the lever.

**NOTE!** The displayed value may be slightly off if a fuel-driven heater is used.

### Range to empty fuel tank

Displays the range available with the remaining fuel, calculated using the average fuel consumption over the last 30 km (18 miles) and the quantity of fuel remaining. When the range to empty is less than 20 km (12 miles) “----” is displayed.

**NOTE!** The displayed value may be slightly off if a fuel-driven heater is used.




### Activating

The controls for cruise control are to the left in the steering wheel.

#### Setting desired speed:

- Press the CRUISE button. “CRUISE” is shown on the combined instrument panel.
- Touch + or - to lock the vehicle speed. CRUISE ON appears on the combined instrument panel.

Cruise control cannot be engaged at speeds below 30 km/h or above 200 km/h.

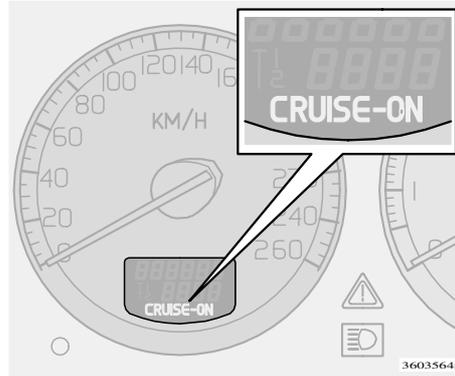

### Increasing or decreasing speed

- Increase or decrease the speed by pressing and holding + or - . The speed of the car when the button is released is set as the new speed.
- A brief press (less than half a second) on +
- A temporary increase in speed (less than one minute) using the accelerator, such as while overtaking, does not affect the cruise control setting. When you release the accelerator, the car will return to the programmed speed.

### Temporary disengagement

Press 0 to disengage the cruise control temporarily. CRUISE will be shown on the combined instrument panel. The speed set earlier is stored in the memory.

The cruise control is also temporarily disengaged when:

- the brake pedal or clutch pedal is depressed
- speed falls below 30 km/h when travelling uphill
- the gear selector is moved to position N
- wheel spin or wheel lock-up occurs
- a temporary increase in speed lasts longer than one minute.

### Return to a speed


When  is pressed, the car resumes the previously set speed.

“CRUISE ON” is displayed on the combined instrument panel.

### Disengagement

Press CRUISE to disengage the cruise control. CRUISE ON goes out on the combined instrument panel.

## Lighting panel

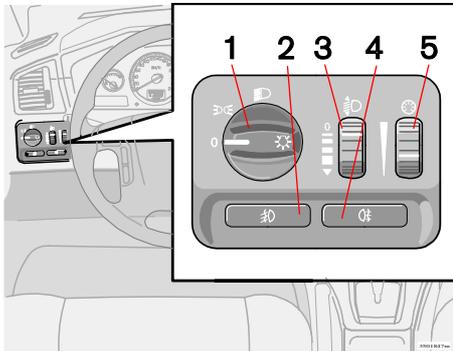

### Headlamp levelling

The load in the car changes the vertical alignment of the headlamp beam, which could dazzle oncoming motorists. Avoid this by adjusting the height of the beam.

- Turn the ignition key to position II.
- Turn the headlamp control (1) to one of the end positions.
- Roll the control up or down (3) to raise or lower beam alignment.

Cars with Bi-Xenon headlamps (option) have automatic headlamp levelling, so there is no control (3).

### Position lamps/parking lamps

The position lamps/parking lamps can be switched on irrespective of ignition key position.

- Turn the headlamp control (1) to the centre position. In ignition key position II the position lamps/parking lamps are always on. The number plate lighting is switched on at the same time as the position lamps/parking lamps.

### Headlamps

#### Automatic dipped beam

Dipped beam comes on automatically when the ignition key is turned to position II, except when the headlamp control (1) is in the centre position. If necessary, the automatic dipped beam can be deactivated by an authorised Volvo workshop.

#### Manual dipped beam

If necessary, the automatic dipped beam can be deactivated by an authorised Volvo workshop.

- Turn the ignition key to position II.
- Turn the headlamp control (1) clockwise to the end position.

#### Main beam

- Turn the ignition key to position II.
- Turn the headlamp control (1) clockwise to the end position.
- Move the left-hand stalk switch towards the steering wheel to the end position and release it, see page 43.

### Fog lamp

**NOTE!** Regulations for use of fog lamps vary from country to country.

#### Front fog lamps

The front fog lamps (option) can be switched on along with the headlamps or the position lamps/parking lamps.

- Press the button (2).
- The LED in the button (2) lights when the front fog lamps are switched on.

#### Rear fog lamp


The rear fog lamp can only be switched on with the headlamps or the front fog lamps (option).

- Press the button (4).
- The rear fog lamp indicator symbol in the combined instrument panel and the LED in the button (4) come on when the rear fog lamp is switched on.

### Instrument lighting

The instrument lighting is switched on when the ignition key is in position II and the headlamp control (1) is in one of the end positions. The lighting is automatically dimmed during the day and can be controlled manually at night.

- Roll the control up or down (5) for brighter or dimmer lighting.

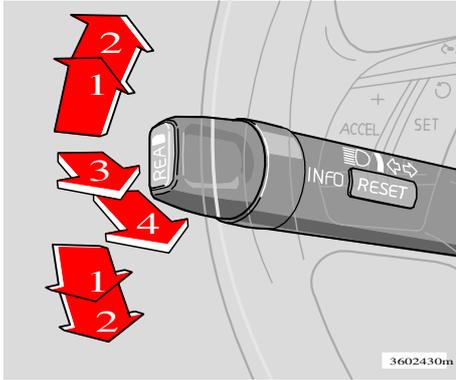

### Stalk switch positions

1. Single flash, direction indicators
2. Continuous flashing, direction indicators
3. Main beam flash
4. Switching, main and dipped beam, and home safe lighting

### Direction indicators

#### Single flash

- Move the stalk switch up or down to position (1).

When the stalk switch is released it returns to its start position and the direction indicators are switched off.

#### Continuous flashing

- Move the stalk switch up or down to end position (2).

The stalk switch remains in its end position and is moved back manually, or automatically by steering wheel movement.

### Switching, main and dipped beam

The ignition key must be in position II for main beam to be switched on.

- Turn the headlamp control clockwise to the end position, see page 42.
- Move the stalk switch towards the steering wheel to the end position (4) and release.

#### Main beam flash


- Move the stalk switch gently towards the steering wheel to position (3).

Main beam comes on until the stalk switch is released.

### Home safe lighting

Some of the exterior lighting can be kept switched on and works as home safe lighting after the car has been locked. The time delay is 30 seconds (factory setting), but can be changed to 60 or 90 seconds by an authorised Volvo workshop.

- Remove the key from the ignition switch.
- Move the stalk switch towards the steering wheel to the end position (4) and release.
- Get out of the car and lock the door.

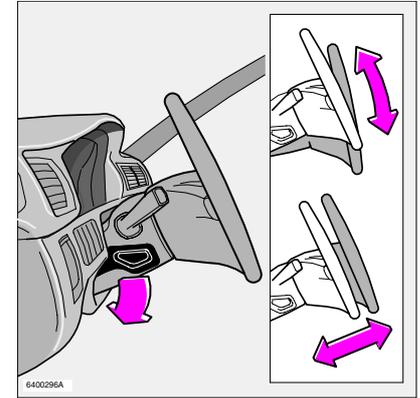

### Steering wheel adjustment


The steering wheel can be adjusted both vertically and front-rear.

Push down the control on the left-hand side of the steering column. Then adjust the steering wheel to the position that suits you best. Ensure that the steering wheel fastens in a determined position (notch). Press the control back into place to lock the steering wheel.

### WARNING!

Adjust the steering wheel before driving, never while driving. Ensure that the steering wheel is locked.

## Right-hand stalk switch

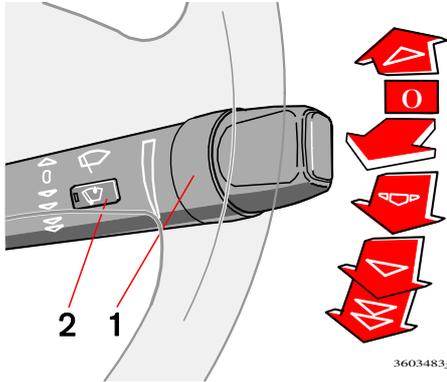

### Windscreen wipers/washer

**0** - The windscreen wipers are off when the lever is in position 0. If the lever is moved upward, the wipers swipe one stroke at a time for as long as the lever is held up.

 - **Intermittent wiping.** The speed of the intermittent wipe can be adjusted and set. Twist the ring (see 1 in illustration) upwards to increase the wiper stroke frequency. Twist the ring downwards to decrease the wiper stroke frequency.

 - Wipers operate at normal speed

 - Wipers operate at high speed

### Rain sensor (option)

The rain sensor automatically increases or decreases the speed of the windscreen wipers based on how much water it detects on the windscreen.

The sensitivity of the rain sensor can be adjusted using the ring (1).

- Turn the ring upward to increase sensitivity or down to decrease sensitivity (there is an extra swipe when the ring is turned upward).

### On/Off

When activating the rain sensor, the ignition key must be in at least position **I** and the windscreen wiper lever must be in position **0**.

To activate the rain sensor:

- press the button (2). An LED illuminates in the button to indicate the rain sensor is active.

To turn the rain sensor off:

- press the button (2) or
- move the lever downward to another wiper program. If the lever is raised, the rain sensor will remain active; the wipers make an extra sweep and then return to rain sensor mode when the lever is released to position **0**.

### Important!

In an automatic car wash:

Turn off the rain sensor by pressing the button (2) while the ignition key is in at least position **I**. Otherwise, the windscreen wipers may start and be damaged.

The rain sensor is automatically deactivated when the key is removed from the ignition switch or five minutes after the ignition is switched off.

### Windscreen washer

Pull the lever towards the steering wheel to activate the windscreen washer.

### Headlamp washer

(option in certain markets)

Use of the windscreen washer automatically activates the headlamp washer.

High-pressure wash of the headlamps consumes a great deal of washer fluid.

To save fluid, the headlamps are only washed every fifth time (within a ten minute period). If ten minutes have elapsed since the last windscreen washing, the headlamps receive a high-pressure wash the next time the windscreen is washed.

### Important!

Use plenty of washer fluid when the wipers are cleaning the windscreen. The windscreen must be wet when the windscreen wipers are operating.

### Reduced washing

If only approx. one litre of washer fluid remains in the reservoir, the supply to the headlamps is cut off in order to prioritise cleaning of the windscreen.



## Ignition and steering wheel lock

### 0 Locked position

The steering wheel locks when the ignition key is removed.



### I Intermediate position - "radio position"

Certain electrical components can be connected. The engine electrical system is not connected.



### II Drive

The key position when driving. The car's entire electrical system is connected. Diesel: Wait until pre-heating is finished. See page 88.



### III Start position

The starter motor is connected. Release the key when the engine has started. The key springs back to the driving position automatically.

If the key is difficult to turn the front wheels are positioned so that there is tension in the steering wheel lock. Turn the steering wheel back and forth while turning the key.

**Ensuring that the steering wheel is locked when you leave the car minimises the risk of theft.**




## Ignition keys and electronic immobilizer

The ignition key must not hang with other keys or metal objects on the same key ring. The immobilizer could be inadvertently triggered, preventing the car from being started.

### **WARNING!**

Never switch off the ignition (key in the position 0) or pull out the ignition key while the car is moving. This can activate the steering lock, which makes the car impossible to drive.

## Hazard warning flashers, rear window defroster, heated front seats

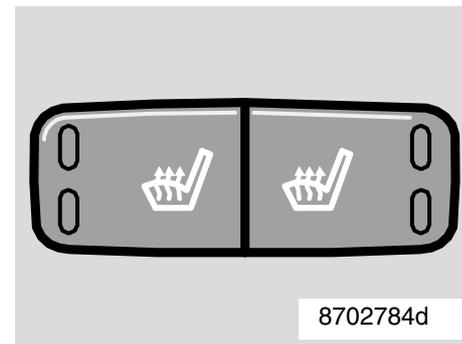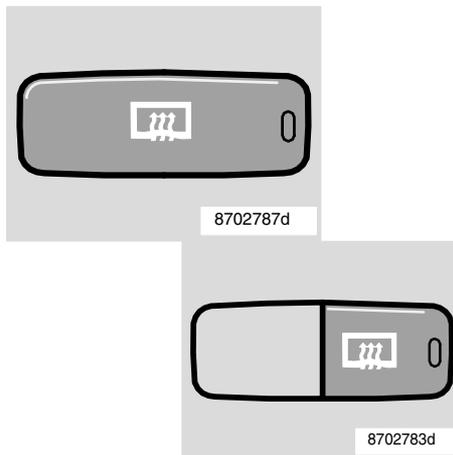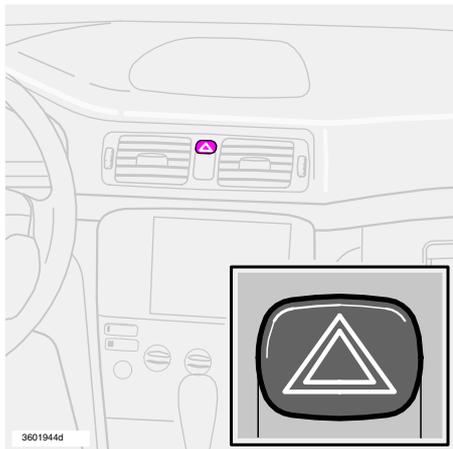

*Front seat heater switch*

### Hazard warning flashers

The hazard warning flashers (all direction indicators flash) should be used when you are forced to stop or park the car where it is a hazard or hindrance to traffic.

**Please remember:** Regulations for using hazard warning flashers vary from country to country.

### Heated door mirrors Rear defroster


Use the defroster to remove ice and misting from the rear window and door mirrors. Pressing the switch starts heating the rear window and the door mirrors at the same time. The LED in the switch lights. A built-in timer automatically deactivates the door mirror defroster after about 4 minutes and the rear window defroster after about 12 minutes.

### Heated front seats


If you wish to have extra heat in the front seat(s) carry out the following:

- Press **once**: High heat - both LEDs in the switch light up.
- Press **once again**: Low heat - one LED in the switch lights.
- Press **once again**: heating switched off (no LEDs are lit).


Your Volvo workshop can adjust the temperature.

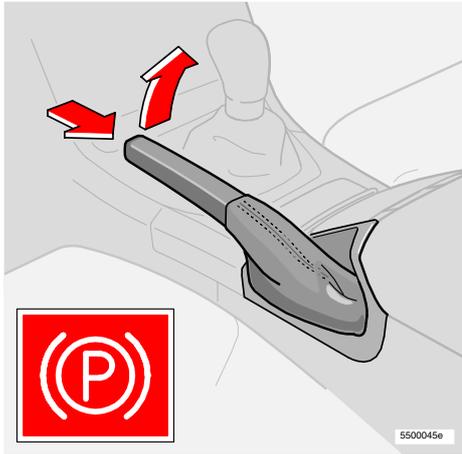

*Parking brake lever*

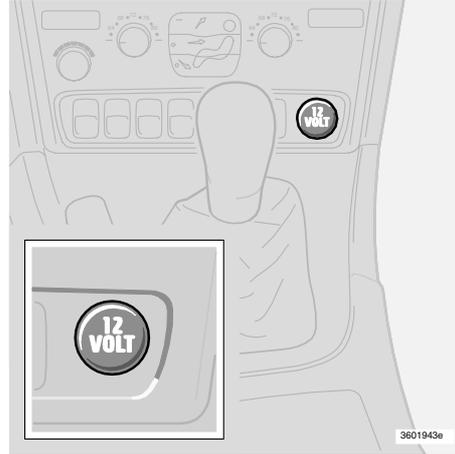

*Electrical socket at the front seat*

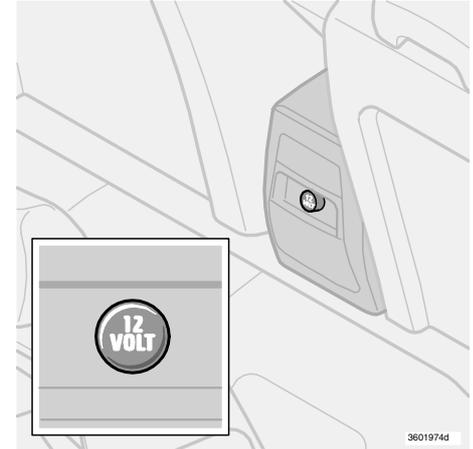

*Electrical socket for the rear seat*

### Parking brake (handbrake)


The lever is located between the front seats. The parking brake operates on the rear wheels. The warning symbol in the combined instrument panel lights when the brake is applied. Pull up the lever slightly and press in the button to release the brake.

Remember that the warning symbol in the combined instrument panel lights even if the parking brake is only “slightly” applied. Check that the brake is applied correctly. **Pull the brake hard and make sure it fastens in a “notch”**

### Electrical socket/ cigarette lighter

The cover should always be in position if the socket is not being used as a power source or as a cigarette lighter socket. The maximum current is 10A.

## Power windows

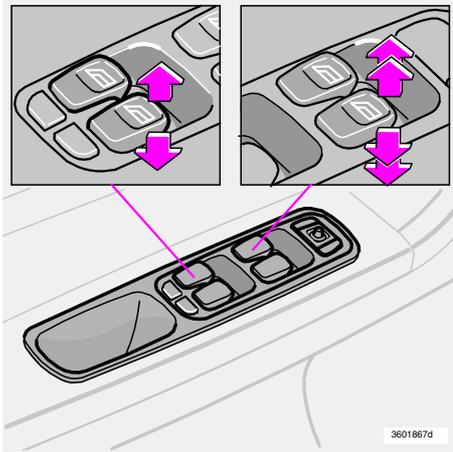

The power windows are operated using the switches in the door armrests. The ignition key must be turned to the radio or driving position\* for the power windows to function. The window opens when you **depress** the front section of the switch and closes when you **pull up** the front section of the switch.

Windows can be opened or closed from the front seat two ways.

1. Press the switch **gently** downwards or pull it **gently** upwards. The power windows go up or down as long as the switch is affected.
2. Press the switch **all the way** down, or pull it **all the way** up, and **then release it**. In this

position (AUTO-DOWN - AUTO-UP\*), the power windows open or close automatically.

If you close the front windows using the AUTO function an integrated clamp protection is activated if the window is blocked by any object.

**NOTE!** The AUTO-UP function on the **passenger side** is only available on some markets.

### **WARNING!**


If there are children in the car:

- Remember to switch off the supply to the power windows by removing the ignition key if the driver leaves the car.
- Make sure that children's and other passengers' hands are clear when closing the windows.

If the rear door windows are operated from the driver's door or with the remote control:

- Check that none of the rear seat passengers are in danger of getting their hands caught when closing the windows.

\*When you have finished your trip and removed the ignition key, you can still close or open the windows **as long as you have not opened either of the front doors**.

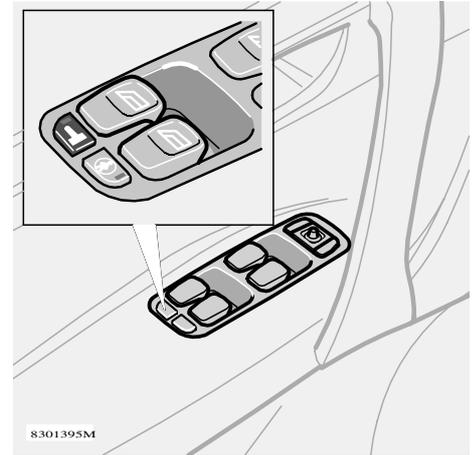

*Rear power window switches*


The power window switches in the rear seat can be blocked from the switch on the driver's door switch panel. Always remember to break the current to the power windows (that is to say remove the ignition key and open one of the front doors) when you leave children in the car unattended.

### **LED in the switch unlit:**

The rear door windows can be operated both by the switch in each door but also by the switch in the driver's door.

### **LED in the switch lit:**

The rear windows can **only** be operated from the driver's door.

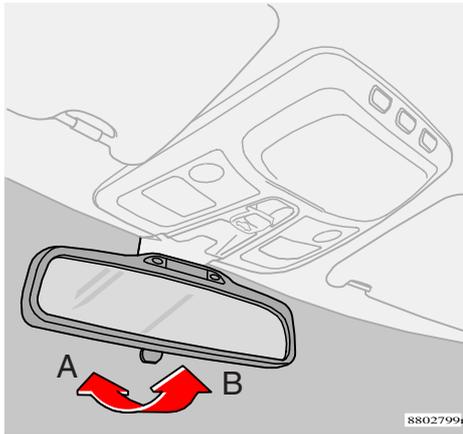


## Rearview mirror

- A. Normal position.
- B. Dimming position. Use this if headlamps from the cars behind irritate you.

Certain models have an **autodim** function, which leads to an automatic dimming based on current light conditions.

## Seat belt reminder

The seat belt warning symbol above the rearview mirror flashes as long as the **driver's** seat belt has not been connected.

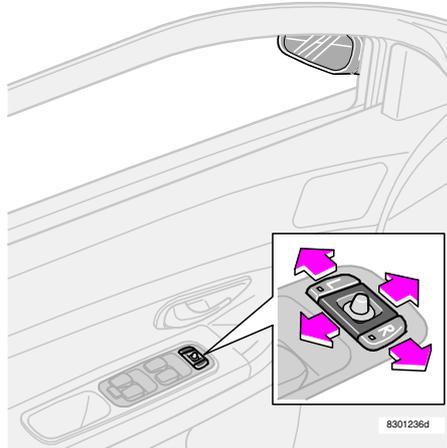

*Switches, power door mirrors*

## Door mirrors

The switches for setting the two outer door mirrors are furthest forward on the driver's door armrest.

Press the switch. L = left door mirror.

R = right door mirror. LED in the switch lit: Adjust the position with the adjustment control. When you have set the position press the switch once. The LED should no longer be lit.

### Important!

Use the defroster (see page 46) to remove ice from the mirrors, not an ice scraper. The scraper could scratch the mirror glass.

## Door mirrors with memory function (option)

If the car has door mirrors with memory function, they work together with the memory setting of the seat, see page 68.

**NOTE!** The above only applies if your Volvo is equipped with a driver's power seat.

## Memory function in the remote control



When you unlock the car with the remote control and change the setting of the door mirrors, these new settings are saved in the remote control. The next time you unlock the car with the same remote control and open the driver's door within two minutes, the mirrors will assume their stored positions.



### WARNING!

Adjust the door mirrors before starting off! The outer half of each door mirror is a wide-angle mirror that provides a better overview. This may make objects appear farther away than they really are.

## Power sunroof (option)

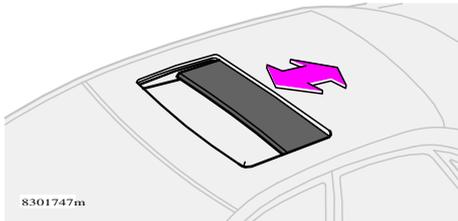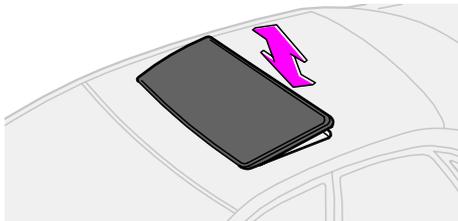

8301747m

### Power sunroof (option)

Sunroof controls are located in the headlining. The sunroof can be opened in two different ways:

- Raise/lower trailing edge (ventilation position)
- Rearwards/forwards (opening position/comfort position\*)

The ignition key must be in position I or II.


#### Ventilation position

**Open:** Push the trailing edge of the switch (5) upwards.

**Close:** Pull the trailing edge of the switch (6) downwards.

It is possible to switch directly from the **ventilation position** to **comfort position\***: pull the control backwards to its end position (4) and release.

\* In comfort position, the sunroof is not completely open in order to reduce the level wind noise.

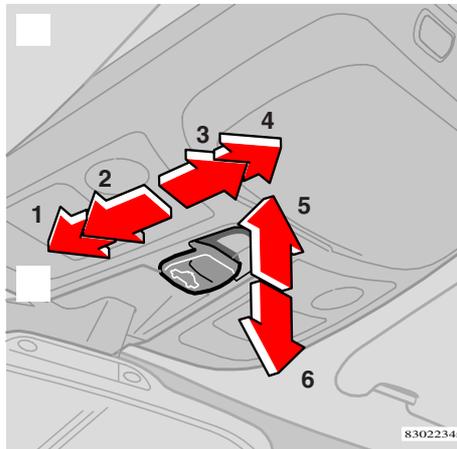

8302234e

1. Automatic closing
2. Manual closing
3. Manual opening
4. Automatic opening
5. Opening ventilation position
6. Closing ventilation position

#### Opening position/comfort position\*

##### Automatic control

Move the control over the resistance point position (3) to the rearmost end position (4) or over the resistance point position (2) to the front end position (1) and release. The sunroof will open to the **comfort position\*** or will close completely.

Open from **comfort position\*** to max. opening: pull the control to the rear once more to the end position (4) and release.

#### Manual control

**Open:** Pull the switch rearwards to the resistance point position (3). The sunroof will move towards maximum opening position as long as the switch is held in this position.

**Close:** Press the switch forwards to the resistance point position (2). The sunroof will move towards its closing position as long as the switch is held in this position.

#### Pinch protection

**NOTE!** The sunroof pinch protection function is activated if the hatch is blocked by an object. If blocked, the sunroof will stop and automatically open to the previous open position. This function will be activated only when the sunroof is in the open position.



**WARNING!**

Pinch protection functions only in the opening position - not in ventilation position.

**Make sure the sunroof is properly closed before leaving the car.**




**WARNING!**

- Make sure that the hands of children and passengers are clear when closing the sunroof.


If there are children in the car:

- Remember to switch off the supply to the sunroof (remove the ignition key) if the driver leaves the car.

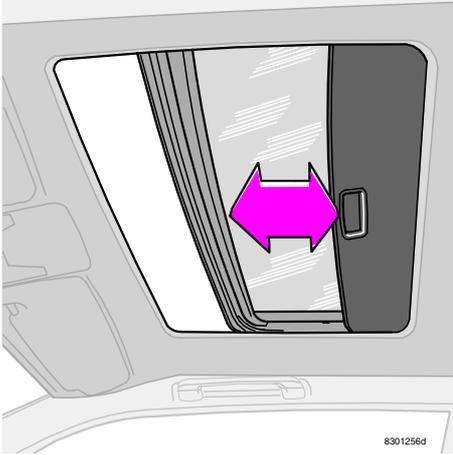


### Sun screen

The sunroof also has an inner manually sliding sun screen. The sun screen slides back automatically when the sunroof is opened.

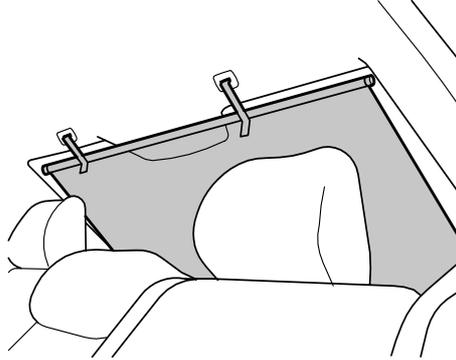

### Sun blind - rear window

Pull the sun blind up from the parcel shelf and hook it into the holes above the rear window, as illustrated.

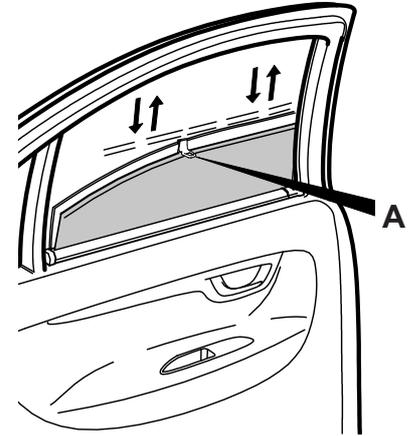

### Sun blinds - rear side windows

Lower the window slightly. Hook the sun blind (A) onto the top edge of the window. You can now raise and lower the window as you wish.

### Laminated side windows (option)

The laminated windows in the front and rear doors improve sound insulation in the passenger compartment and provide better protection against unauthorised entry.

### Water and dirt-repellent coating on the front windows and/or door mirrors (option)

The front windows and/or door mirrors are treated with a coating that ensures that visibility through the windows or in the mirrors is good even if it is raining. For information on glass care, see page 142.



Side windows and mirrors treated with the water and/or dirt-repellent coating are marked with a little symbol.

### Rearview mirror/door mirrors

In certain weather conditions, the function of the dirt-repellent coating is improved if the door mirror defroster is used, see page 46.

Defrost the door mirrors:

- if they are covered with ice or snow
- in heavy rain and dirty road conditions
- if they are misted.

#### **Important!**

- Do not use a metal ice scraper to remove ice from the windows. The water and dirt-repellent coating could be damaged.
- Use the defroster to remove ice from the mirrors.


---

---

# Climate control

Air distribution	54
Your climate control system - useful hints	55
Electronic Climate Control ECC	56
Electronic Climate Control ECC with Interior Air Quality system	57
Electronic Climate Control ECC - manual settings	59
Manual climate control with air conditioning (AC)	60
Fuel-driven parking heater (option)	62

## Air distribution

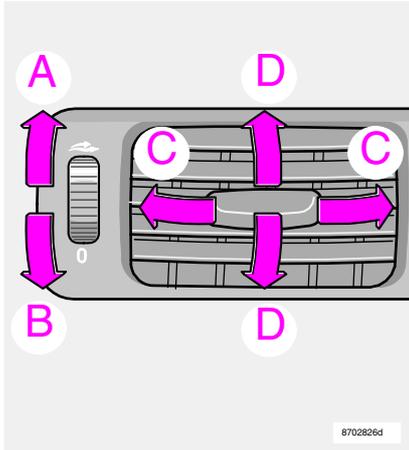


*Air vents in the dashboard*

### Air vents in the dashboard


- A Open
- B Closed
- C Directing airflow laterally
- D Directing airflow vertically

- Aim the outer vents towards the side windows to remove misting.
- In cold climates: close the centre vents for the most comfortable climate and best demisting.

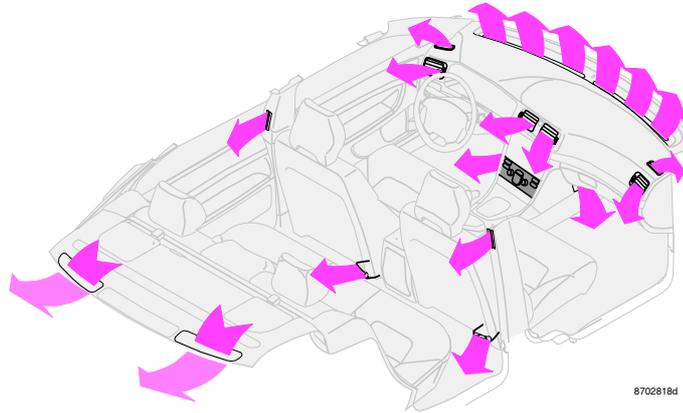

### Air distribution

The incoming air is distributed through 14 different air vents located in different parts of your car.

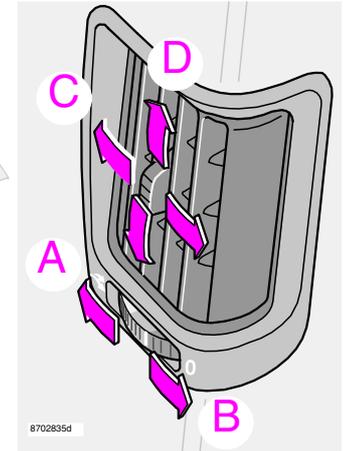

*Air vents in the door pillars*

### Air vents in the door pillars

- A Open
- B Closed
- C Directing airflow laterally
- D Directing airflow vertically

- Aim the vents toward the rear side windows to remove misting.
- Aim the vents inwards into the car if you wish to have a comfortable climate in the rear seat.
- Bear in mind that small children are sensitive to airflow and draughts.

### **Misting on window interiors**

A good way to reduce the problem of misting on the insides of the windscreen and other windows is to clean them. Use a normal window cleaner. Bear in mind that you must clean them more often if someone smokes in the car.

### **Ice and snow**

Remove ice and snow from the climate control air intake (the grille between the bonnet and the windscreen).

### **Particle filter**

Make sure the particle filter is replaced regularly. Consult your Volvo workshop.

### **Actual temperature - ECC**

The temperature you select corresponds to the physical experience with reference to air speed, humidity, exposure to sun, etc. which affect the interior and exterior of the car.

### **Sensors - ECC**

The sun sensor is on the upper portion of the dashboard. Remember not to cover it. Do not cover the passenger compartment temperature sensor on the climate control panel.

### **Side windows and sunroof**

For the air conditioning (A/C) system to operate satisfactorily the side windows and sun roof should be closed. Also, remember not to block the evacuation channels in the parcel shelf.

### **Acceleration**

The air conditioning system switches off temporarily at full acceleration. You may feel a temporary rise in temperature.

### **Condensation**

In warm weather conditions condensation from the air conditioning (A/C) system may drip under the car. This is completely normal.

### **Fault tracing**

Your Volvo workshop has the instruments and tools required for any fault tracing or repair of your climate control system. Entrust checks and repairs only to trained personnel.

### **Refrigerant**

Refrigerant R134a is in the air conditioning system. This contains no chlorine, which means it is harmless to the ozone layer.

Use only R134a when topping up/refilling refrigerant. This work should be performed by an accredited workshop.

### **Fuel economy - Electronic Climate Control (ECC)**

With ECC, the air conditioning system is controlled automatically and is used just enough to cool the passenger compartment and dehumidify the incoming air.


This provides better fuel economy compared to conventional systems where the air conditioning cools the air to just above freezing point.

### **Ventilation fan function**

When the engine is off (and if the ignition key is in position I or II), the ventilation fan is automatically switched off. This is to prevent the battery from becoming discharged.

To activate the ventilation fan, turn the fan control and set the desired speed.

# Electronic Climate Control ECC

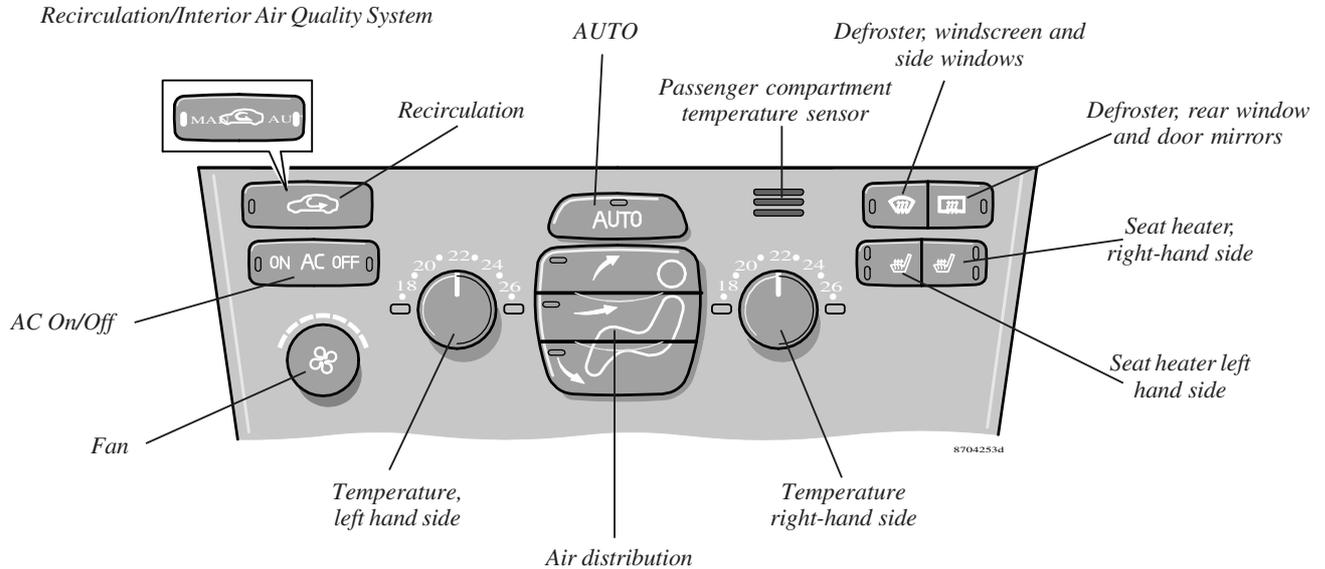


### Multifilter with Air quality sensor (option)

Some cars are equipped with a multifilter and air quality sensor. The multifilter separates gases and particles, thus reducing the volume of odours and contaminants entering the car. The air quality sensor detects increased levels of contaminants in the outside air. When the air quality sensor detects contaminated outside air, the air intake is closed and the air inside the compartment is recirculated. The multifilter also cleans the air recirculating in the compartment.

When the air quality sensor is connected, the

green *AUT* LED lights in .

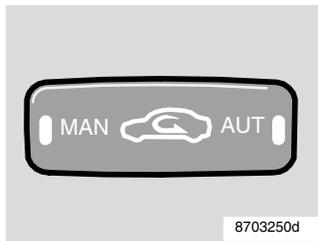

### Operation:

Press  to activate the air quality sensor (normal setting).

Or select one of three functions by

pressing .

**1. Press  :** the LED *AUT* lights. The air quality sensor is now activated.

**2. Press  :** no LED lights. Recirculation is not activated unless needed to cool.

**3. Press  :** the LED *MAN* lights. Recirculation is now activated.

You can switch between these three functions

by repeatedly pressing .

### Keep in mind the following:

- Make it a rule to have the air quality sensor activated at all times.
- Recirculation is limited in cold climates to avoid misting.
- In the event of misting, you should disconnect the air quality sensor.
- In the event of the windows misting up you can use the windscreen and side window defroster functions. See next page.
- Follow the Volvo service programme for the recommended interval for multifilter replacement. The Multifilter may need to be changed more often if you drive in heavily polluted environments.



### AUTO

The **AUTO function** regulates climate control so that the selected temperature is attained. The automatic function controls heating, air conditioning, fan speed, recirculation and air distribution. If you select one or more functions manually, the


other functions continue operating automatically.

All manual settings are switched off when **AUTO** is switched on.




### Temperature

The two knobs can be used to set the temperature for the passenger and driver's sides of the car. Remember that it will not heat or cool any quicker even if you select a higher or lower temperature than you wish to have in the passenger compartment.

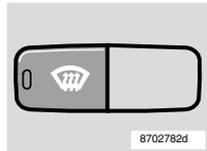

### Defroster - windscreen and side windows

Use this button to quickly remove misting and ice from the windscreen and side windows. The air flows to the windows at high fan speed. The LED in the defroster button lights when this function is activated. The air conditioning system is now controlled so that the air is maximally dehumidified. The air is not recirculated.

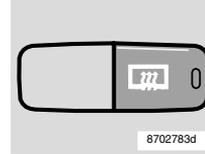

### Defroster - rear window and door mirrors

Use this button to quickly remove ice and misting from the rear window and door mirrors. See page 46 for more information about this function.

## Recirculation



8702776d

(see also page 60)

The best cooling in warm climates is achieved by selecting the **AUTO** function.

The recirculation is then controlled automatically. Manual recirculation can be selected if you wish to shut out bad air, exhaust fumes etc. The air in the passenger compartment is recirculated; no air from outside the car is taken into the car when  is activated. The LED in the switch is lit.

If you allow the air in the car to recirculate there is a danger of misting and icing in the car, especially during the winter.

**The timer function (cars with multifilters and air quality sensors have no timer function)** minimises the risk of ice, misting and bad air. Carry out the following to activate it. Press  for more than 3 seconds. The LED flashes for 5 seconds. The air in the car recirculates for 3-12 minutes depending on the outer temperature. Each time you press  the timer function is activated. If you wish to switch off the timer function, press  again for more than 3 seconds. The LED lights for 5 seconds to confirm your selection.

If you select **Defroster** , recirculation is always disconnected.

## Air distribution



8702781d

Air to windows.

Air to head and body.

Air to legs and feet.

Press **AUTO** to return to automatic air distribution.



8703250d



8702777d

## AC - On/Off

When the ON LED lights the air conditioning (A/C) system is controlled automatically by the system. In this way incoming air is cooled and moderately dehumidified. When AC OFF is selected and the OFF LED lights the air conditioning (A/C) system is always disconnected, other functions are still controlled automatically. The air conditioning (A/C) system operates down to approximately 0 °C.

When you select **Defroster**  the air conditioning system is controlled so that air is maximally dehumidified.




8702778d

## Fan

Fan speed can be increased or decreased by turning the knob. If **AUTO** is selected, fan speed is controlled automatically. The previously set fan speed is disconnected.

**NOTE!** If the knob for the fan has been turned so far that the left LED above the knob lights up with an orange light, the fan and the air conditioning (A/C) system are switched off.

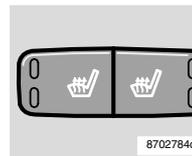

8702784d

## Heating the front seats

See page 46 for more information.

# Manual climate control with air conditioning (AC)

## Recirculation



8702776d

Recirculation, together with your air conditioning (A/C) control, helps to cool a warm cabin more quickly. This function can also be used to exclude bad air, exhaust fumes etc. The air in the passenger compartment is recirculated; no air from outside the car is taken into the car when the button  is activated. The LED in the switch is lit. If you allow the air in the car to recirculate there is a danger of misting and icing in the car, especially during the winter.

The **timer function** minimises the risk of ice, misting and bad air. To activate the function: press  for more than 3 seconds. The LED flashes for 5 seconds. The air in the car recirculates for 3-12 minutes depending on the outer temperature. Every time you press  the timer function is activated. If you wish to switch off the timer function, press  again for more than 3 seconds. The LED lights for 5 seconds to confirm your selection.

Recirculation is always disconnected when you select **Defroster** .

## AC - On/Off (ON/OFF)




8702777d

The air conditioning is connected to the **cooling and dehumidification function**

when the ON LED lights. The air conditioning is disconnected with the OFF LED lights.

When you select Defroster , the air conditioning is always connected, unless the fan is set at position 0.

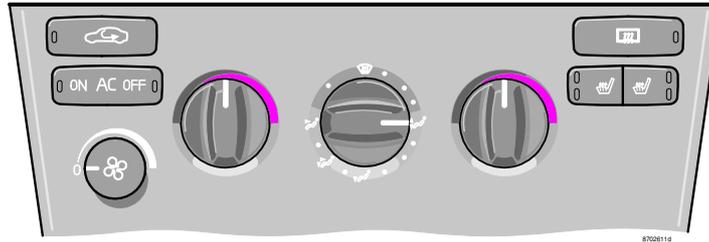

8702811d


## Fan



8702831d

Fan speed can be increased or decreased by turning the knob. If the knob is set to 0, the air conditioning is disconnected.


## Heating/Cooling - left side

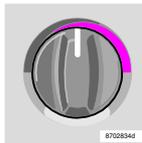

8702834d

Turn to adjust the heating or cooling of the incoming air. The air conditioning must be connected to receive cooled air.


## Heating/Cooling - right side

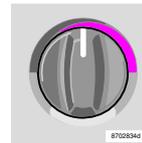

8702834d

Turn to adjust the heating or cooling of the incoming air. The air conditioning must be connected to receive cooled air.

# Manual climate control with air conditioning (AC)

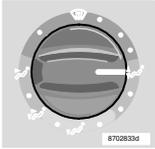

Use the air distribution control positions (marked with dots) between the different symbols to fine-tune air distribution for maximum comfort.

## Air distribution

## Use...



Air through front and rear air vents.

When you want good cooling in a warm climate.



Air to windows In this position the air does not recirculate. The air conditioning (A/C) system is always connected. There is a certain amount of airflow to the vents.

When you want to remove ice and misting. High fan speed is good for this.



Air to both floor and windows. There is a certain amount of airflow to the air vents.

When you want comfortable conditions and good demisting in a cold climate. Not too low a fan speed.



Air to floor. There is a certain amount of airflow to the air vents and the defroster vents for the windscreen and side windows.

When you want to warm your feet.



Air to floor and air vents.

In sunny weather with cool outside temperature.


## Here is some supplementary advice and information:

- You must turn the fan knob (from the 0 position) to connect the air conditioning.
- Use the air conditioning at low temperatures (0 - 15 °C) to dehumidify incoming air.



## Defroster - rear window and door mirrors


Use this button to quickly remove ice and misting from the rear window and door mirrors. See page 46 for more information about this function.

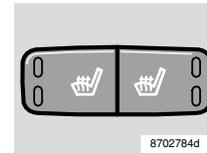

## Heating the front seats

See page 46 for more information.

## Fuel-driven parking heater (option)

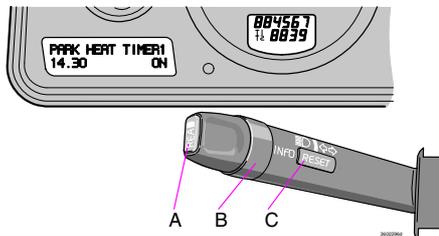

At temperatures of  $-10\text{ }^{\circ}\text{C}$  and below, the parking heater runs a maximum of 60 minutes. If the parking heater does not start despite repeated attempts, a message is shown on the display. Contact an authorised Volvo workshop.

### **WARNING!**

- Switch off the fuel-driven heater before refuelling. Spilled fuel could be ignited by the exhaust gases.
- Check the information display to ensure the heater is off (PARK HEAT ON is shown on the display when the parking heater is active).

### **WARNING!**

The car must be outdoors when the petrol or diesel heater is used.

## General

The electrical system must be "awakened" before the parking heater can be programmed.


This is most easily done by:

- pressing the READ button or
- pressing the main beam flash or
- turning on the ignition.

The parking heater can be started immediately or set with two different start times using TIMER 1 and TIMER 2.

Here, start time refers to the time point the car should be completely warmed up.

Vehicle electronics calculates start time based on current outside temperature. If the outside temperature exceeds  $25\text{ }^{\circ}\text{C}$ , heating is not switched on.

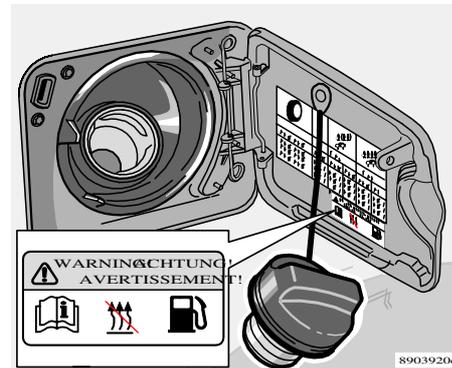

*Warning decal on fuel filler flap*

## Messages on the display

Once the settings for TIMER 1, TIMER 2 and DIRECT START are activated, the amber warning symbol in the combined instrument panel lights and explanatory text is shown on the display.


When you leave the car, you will receive a message regarding the current settings of the system.

## Parking on a hill

If you park your car on a steep incline, the front of the car should be facing up the slope to ensure the supply of fuel to the parking heater.

## Car clock/timer

For safety reasons, all timer settings will be cleared if the car clock is reset after timer settings have been made.

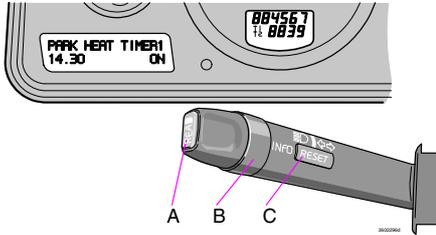

### Setting TIMER 1 and 2

For reasons of safety, you can only programme times for the following 24 hours, not several days in a row.

1. Use the ring (B) to toggle to TIMER 1.
2. Briefly press the RESET button (C) so that the hours setting starts to flash.
3. Use the thumb wheel to set the desired number of hours.
4. Briefly press the RESET button so that the minutes setting starts to flash.
5. Use the ring (B) to set the desired minutes.
6. Briefly press the RESET button to confirm your setting.
7. Press the RESET button to activate the timer.

After setting TIMER 1, toggle to TIMER 2. Settings are made the same way as for TIMER 1.

### Deactivating timer-started heating

Do as follows to manually switch off the heater before the set time has elapsed:

1. Press the READ button (A).
2. Use the ring (B) to toggle to PARK HEAT TIMER 1 (or 2). The text ON flashes.
3. Press the RESET button (C). The text OFF is displayed with a steady glow and the heater is switched off.

### Direct start of heater

1. Use the ring (B) to toggle to DIRECT START.
2. Press the RESET button (C) to make ON and OFF selections available. Select ON.

The heater will now run for 60 minutes. Heating of the passenger compartment will begin as soon as the engine coolant has reached an adequate temperature.

### Deactivation of heater after direct start

1. Use the ring (B) to toggle to DIRECT START.
2. Press the RESET button (C) to make ON and OFF selections available. Select OFF.

### Battery and fuel

If the battery is not sufficiently charged or the petrol tank is close to empty, the parking heater will be switched off.

If this is the case, a message will appear on the display. Confirm the message using the READ button (A).

### Important!

Repeated use of the parking heater combined with only short journeys can discharge the battery and impair starting.

In order to ensure that the generator receives sufficient time to produce the amount of energy needed without discharging the battery as a result of regular heater use, drive the car for a period equalling the time during which the heater has been active.

### Auxiliary heater (diesel)

(certain countries)

Extra heat from the additional heater may be required in cold weather to reach the correct temperature in the passenger compartment.

The additional heater starts automatically when extra heat is required if the engine is running. It is switched off automatically when the correct temperature is reached or when the engine is switched off.



---

---


## Interior

Front seats	66
Interior lighting	69
Storage compartments	70
Centre console storage compartments, Load curtain	71
Spare wheel, Warning triangle	72
Coat hanger, Cup holders in armrest	73
Long loads	74

## Front seats

The driver's and passenger seats can be adjusted to the optimum sitting and driving positions.

1. Forward/rearward: Lift the handle to adjust the distance to the steering wheel and pedals. Check that the seat is locked after changing position.
  2. Raise/lower front edge of seat cushion: pump up/down.\*
  3. Raise/lower seat: pump up/down.
  4. Adjust lumbar support: turn the wheel.
  5. Adjust backrest rake: turn the wheel.
  6. Power seat control panel.
- \* The control panel (2) is not available with certain upholstery alternatives.

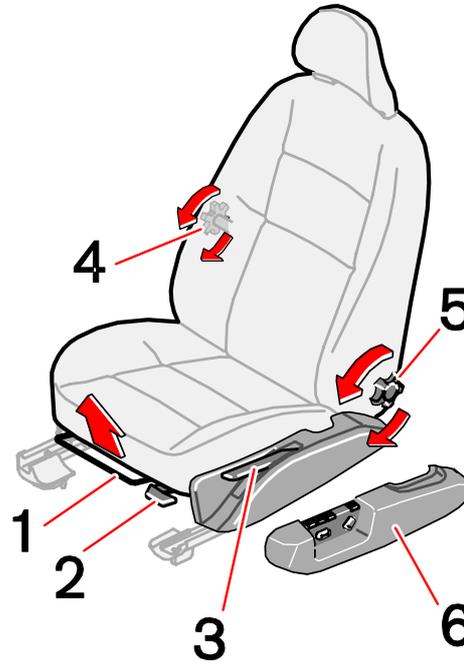


8504932r

### **WARNING!**

- Adjust the position of driver's seat before setting off, never while driving.
- Check that the seat is locked in position.


## Folding the front passenger seat, Rear seat head restraints

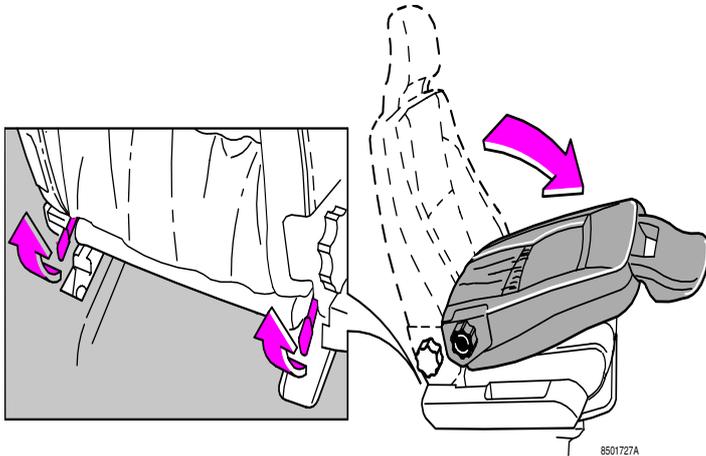

### Folding the front passenger seat

The front passenger seat backrest can be folded to a horizontal position to make room for a long load. Fold the backrest as follows:

- Move the seat as far back as possible.
- Adjust the backrest to the upright position.
- Lift the catches on the rear of the backrest.
- Fold the backrest forward.
- Slide the seat forward so that the head restraint is “locked in place” under the glovebox.

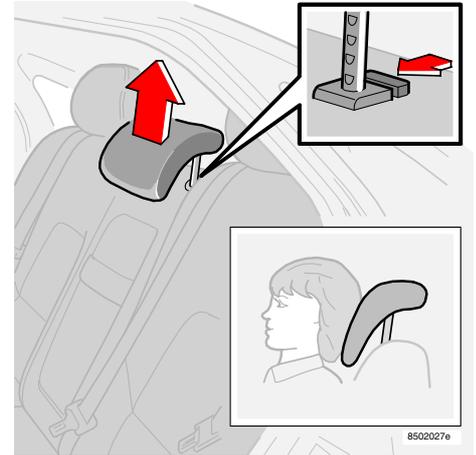

*Adjust the head restraint vertically*

### Rear seat head restraints

**The centre seating position** head restraint is adjusted vertically according to the height of the passenger. Press the head restraint up or down as necessary. To move the head restraint up or down, you must press the release button behind the left-hand support. See illustration. If the integrated booster cushion is used, the head restraint must be carefully positioned to suit the child.


### Power seat (option)

#### Preparations

The seat is usually adjusted with the ignition key in position I or II. It can also be adjusted within 4.5 minutes of unlocking the door with the key or remote control. If the door is closed but the ignition key has not yet been inserted in the ignition switch or is in position 0 in the ignition switch, settings can be made within 40 seconds of closing the door.

#### Memory function in the remote control (option)

If the setting of the seat is changed, the new setting is saved in the remote control used to lock the car. The next time the car is unlocked using that remote control and the driver's door is opened within five minutes, the driver's seats and door mirrors assume the stored positions.

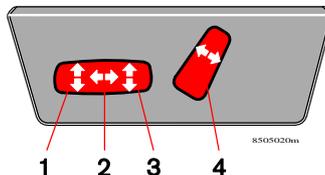

#### Seat adjustment

The switches can be used to make the following adjustments:


1. Front edge of seat cushion up/down
2. Seat forward/rearward
3. Seat up/down
4. Backrest rake

The seat can be moved in one direction at a time.

The power seats have an overload protector that activates if a seat is blocked by an object. If this occurs, switch off the ignition (position 0) and wait 20 seconds before operating the seat again.

#### **WARNING!**

- Ensure that there is nothing in front of, behind or under the seat during adjustment.
- Make sure that none of the backseat passengers will be trapped.
- Make sure that children do not play with the switches, to avoid the risk of getting trapped.

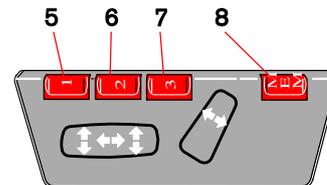

#### Seat with memory function (option)

5. Setting seat and door mirrors, program 1
6. Setting seat and door mirrors, program 2
7. Setting seat and door mirrors, program 3
8. Storing preset positions


Three positions can be stored. After adjusting the seat, hold the MEM (8) button depressed while pressing the button (5). Further seat and door mirror settings can be stored using memory buttons (6) and (7).

#### Setting preset positions

Press and hold one of the memory buttons (5), (6) or (7) until the seat stops. If you release the button, the seat stops immediately for safety reasons.

#### Emergency stop


If the seat accidentally begins to move, press one of the buttons to stop the seat.

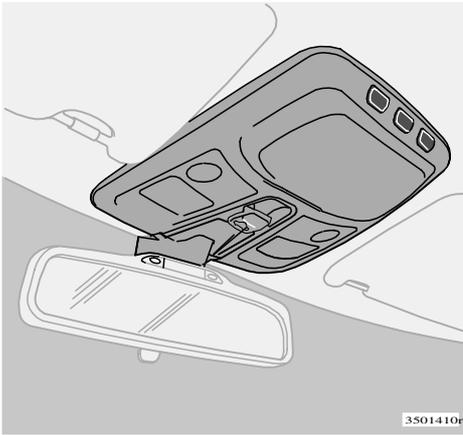

*General lighting and front reading lamps*



*Rear reading lamps*

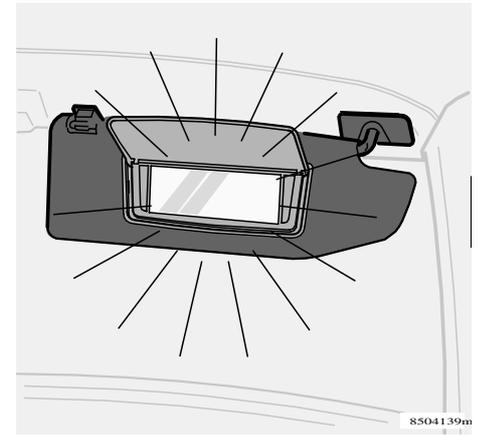

*Vanity mirror in the sun visor*

## General lighting

General lighting lights up and goes out when you press the button. General lighting comes on automatically\* and remains lit for 30 seconds:

- When you unlock the car from the outside using the key or remote control.
- When you have stopped the engine and turned the ignition key to position 0.

General lighting lights up and remains lit for 10 minutes:

- When one of the doors is open.

\* The function is light-dependent and is only activated when it is dark.

General lighting goes out:

- When the engine is started.
- When you lock the car from the outside using the key or remote control.

General lighting can be switched off or on in all situations by briefly pressing the button.

When you switch the light on, it remains lit for 10 minutes.

You can disconnect the automatic function by pressing the button for more than 3 seconds.

When you then briefly press the button, the automatic function reconnects.

The pre-programmed times of 30 seconds and 10 minutes can be changed. Contact an authorised Volvo workshop.


## Front and rear reading lamps

Reading lamps in the front and rear seats can be switched on or off by pressing the respective button. Reading lamps are switched off automatically after 10 minutes if not switched off manually.

## Vanity mirror




The lamps come on when you open the cover.

## Storage compartments

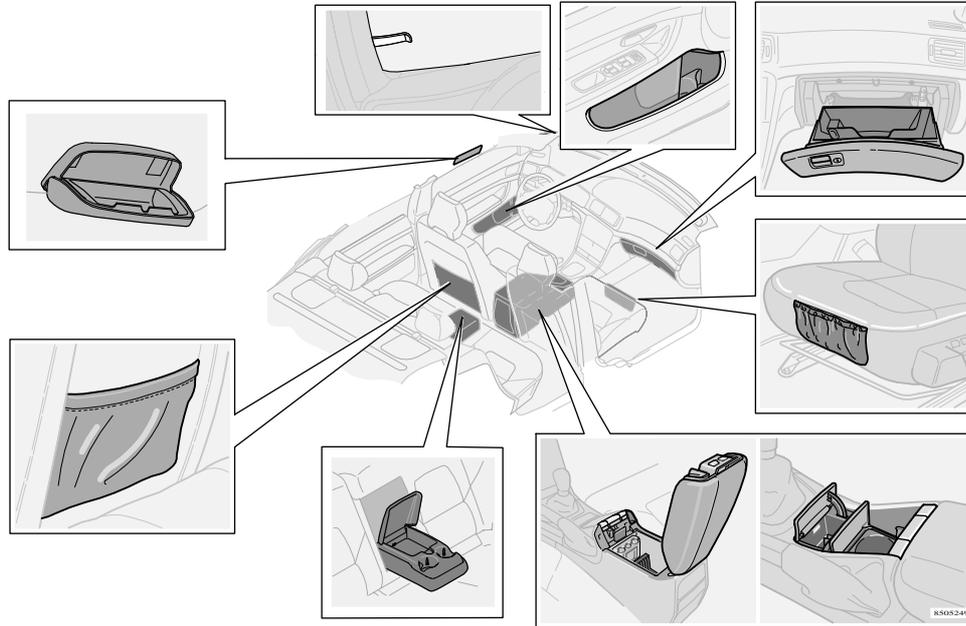

### **WARNING!**

Make sure that no hard, sharp or heavy objects lie on or in (or protrude from) the parcel shelf, map pocket or other storage compartments where they might cause injury during heavy braking. Always fasten large heavy objects with one of the seat belts.

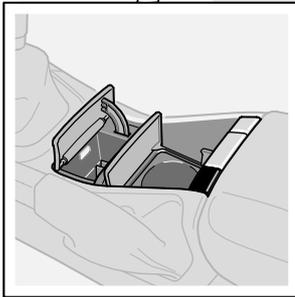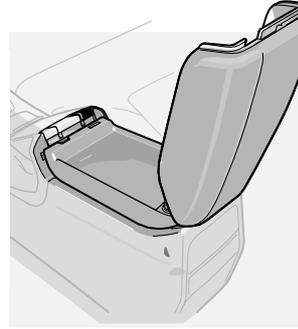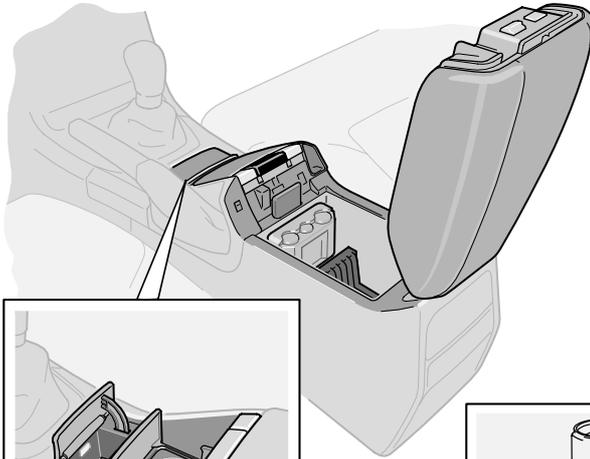


8502003d

### Ashtray (option)

To empty the ashtrays:

Front seat: pull the ashtray straight upwards.

Rear seat: press the ashtray downwards and remove.

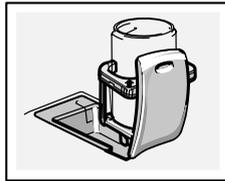

### Cup holder (option)

Some models are equipped with cup


holders for the front and rear seat occupants.

To open the cup holders in the front seats,

press the left-hand button in the centre console

to open the driver's cup holder and the cover below to open the passenger-side cup holder.

To close the passenger-side holder after use, the arms must be pressed inwards as indicated by the arrows on the holder. You can also use the storage compartment in the centre console for cassette tapes and the like.

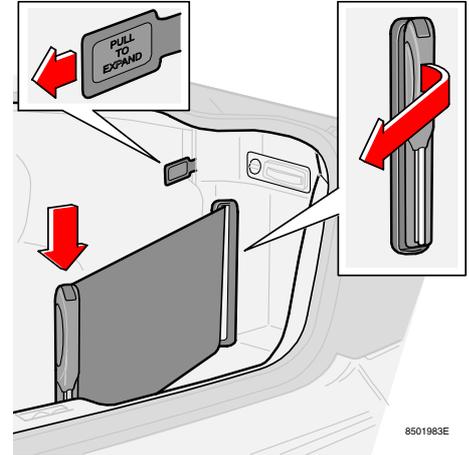

8501983E

### Retaining strap in cargo compartment (option)


The retaining strap can be used to secure lighter objects, such as grocery bags or hand luggage. Pull it out. It works like a seat belt and has a locking function.

Pull the release tab to release the retaining strap from its locked position and pull it out further.

The retaining strap can be fixed in two positions. When securing the strap in position, press until there is an audible click.

**NOTE!** If you have an extra plastic mat with edges that go up along the sides of the cargo compartment, you must cut a groove in the mat so that the retaining strap can run freely.


## Spare wheel, Warning triangle

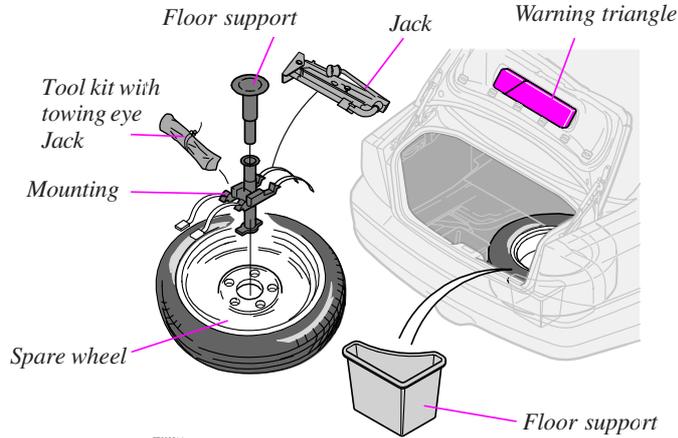

### Spare wheel, tools, jack

The spare wheel with the jack and tool kit can be found under the floor of the cargo compartment. Carry out the following to remove the spare wheel:

- Fold the floor inwards.
- Lift and remove the floor support that sits in the spare wheel mounting. Cars with a “Temporary Spare” also have a floor support in the rear left-hand corner of the cargo compartment. Pull the support upwards to facilitate removing the spare wheel.
- Lift out the jack and tool kit.
- Unscrew the mounting and lift out the spare wheel.
- Return and secure everything in the reverse order. Make sure that the spare wheel is fixed in place and that the jack and tool kit are properly secured with the straps on the mounting.

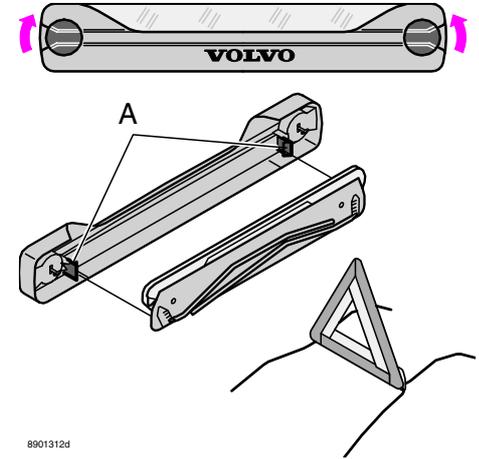


### Warning triangle (certain countries)

Follow the regulations concerning warning triangles of the country you are in. Carry out the following when the warning triangle is required for use:

- Turn both attachment screws to the vertical position.
- Carefully remove the warning triangle case.
- Remove the warning triangle from its case (A).
- Fold out the four support legs on the warning triangle.
- Fold out and secure the two remaining sides of the warning triangle.
- Place the warning triangle in a suitable position. Think about the position of the car and the traffic.

After use:

- Pack everything in reverse order.
- Make sure the warning triangle and its case are properly secured in the boot lid.



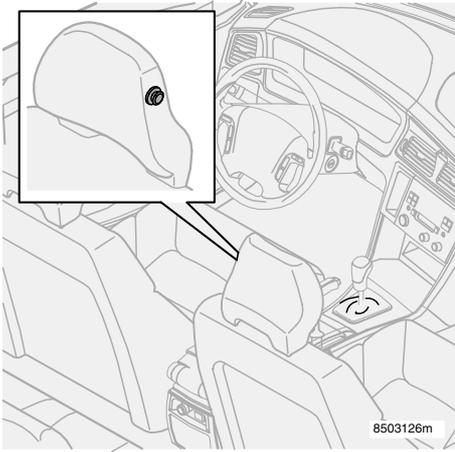


### Coat hanger

The coat hanger is only intended for light garments.



### Cup holders in the rear seat armrest

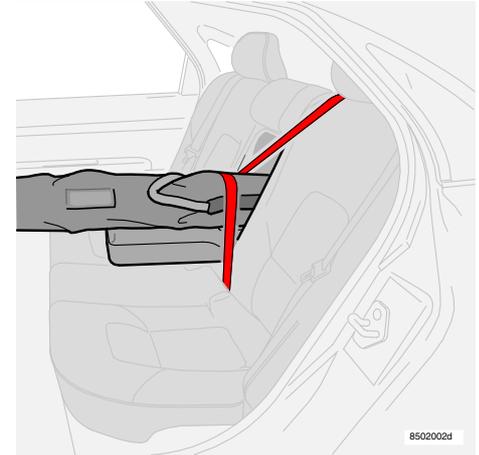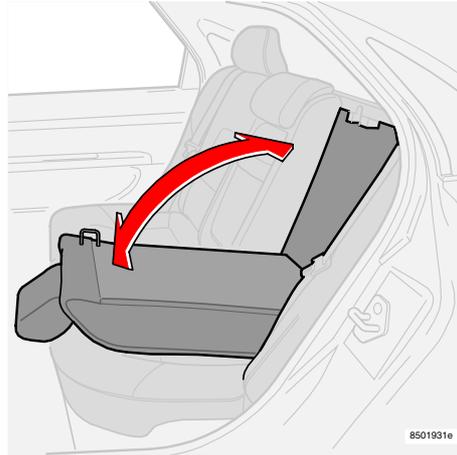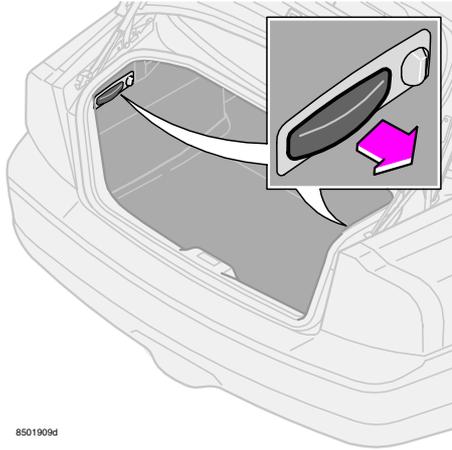

*Always secure long loads!*

### Tipping the backrests forward

One or both of the rear seat backrests can be folded down from the cargo compartment for transporting long objects. Pull the handle(s) in the cargo compartment. The head restraints must be in the upright position. Then tip the backrest or backrests forward. The centre head restraint may need to be adjusted. When raising the backrests, ensure that they are properly secured and locked.

### Hatch for long objects

A hatch in the right-hand rear backrest allows you to transport long objects such as skis and planks.

Open the hatch as follows:

- Fold the left-hand backrest and centre armrest forwards.
- Release the hatch by pushing the catch upward while folding the hatch forward.
- Tip the backrest back into position with the hatch open.

Use the seatbelt to secure the load.

### **WARNING!**

Always secure the load. During heavy braking the load may otherwise shift, causing personal injury. Cover sharp edges with something soft. Turn off the engine and apply the parking brake when loading or unloading long objects! You may accidentally knock the gear lever or gear selector with the load and cause a gear to engage and the car to move off.

**NOTE!** If your Volvo is equipped with an integrated booster cushion, you must fold this out first.

The cover on the rear seat armrest/child seat has no hinge. The cover must be removed before the ski hatch is used.

When removing:

- Open the cover 30°
- pull straight up.

When fitting:

- move the cover back in the grooves behind the upholstery
- close the cover





---

---



## Locks and Alarm

Immobilizer, remote control	78
Locking and unlocking	79
Replacing the battery	80
When it is dark, deadlocks	81
Child safety lock, Service locking	82
Alarm	83

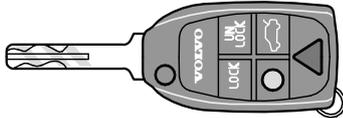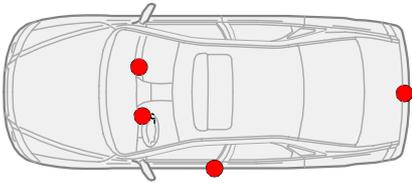

### Master key

This key operates all locks

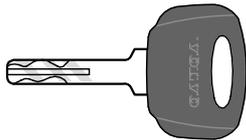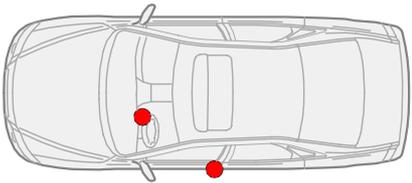

### Service key\*

For driver's door, ignition switch and steering wheel lock only.

8302498d

\*: certain markets only

## Keys - Immobilizer

Your car is delivered with two master keys and one service key\*. One of the master keys is foldable and equipped with an integrated remote control.

### Loss of key

If you should lose one of your keys, bring the remaining keys to an authorised Volvo workshop. As a crime prevention measure, the code for the lost key is erased from the system and the other keys must be re-coded in the system.

The key blades' unique code is available at authorised Volvo workshops, which can produce new key blades.

A maximum of six remote controls/key blades can be programmed and used for one single car.

### Immobilizer

Each key has an integrated coded chip. The code must be the same as the code in the ignition switch receiver. The car can only be started if the correct key with the correct code is used.

### Ignition keys and electronic immobilizer

The ignition key must not hang with other keys or metal objects on the same key ring. The immobilizer could be inadvertently triggered, preventing the car from being started.



8302187e

1. Unlock
2. Open boot lid
3. Alarm function
4. Approach lighting
5. Lock
6. Fold/open key

## Remote control functions

### 1. Unlocking

Press button (1) to unlock all doors, the boot lid and the fuel filler flap.

### 2. Boot lid

Press button (2) twice to unlock the boot lid only.

### 3. Alarm function

The alarm function can be used to attract attention during emergency situations. If the red button (3) is held for at least 3 seconds or is

pressed twice in succession during the same amount of time, the direction indicators and horn will be activated. The alarm is deactivated automatically after 25 seconds or by pressing any of the buttons on the remote control.

#### 4. Approach lighting

Do the following when you approach the car: Press the yellow button (4) on the remote control.

The interior lighting, parking lamps, number-plate lighting and the lamps in the door mirrors (option) will switch on. If a trailer is attached to the car, the trailer lights will also be switched on. These lights will remain lit for 30, 60 or 90 seconds. An appropriate time setting for your car can be performed at an authorised Volvo workshop.



In order to switch off Approach lighting: press the yellow button again.

#### 5. Locking

Lock all doors, boot lid and fuel filler flap with button 5. There is a delay of approx. 10 minutes for the fuel filler flap.

#### 6. Folding/opening key

The key can be folded by pressing button 6 while folding the key blade into the keypad. The folding key will open automatically with one press of the button.

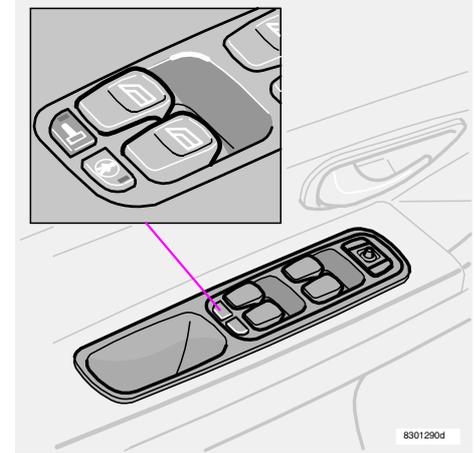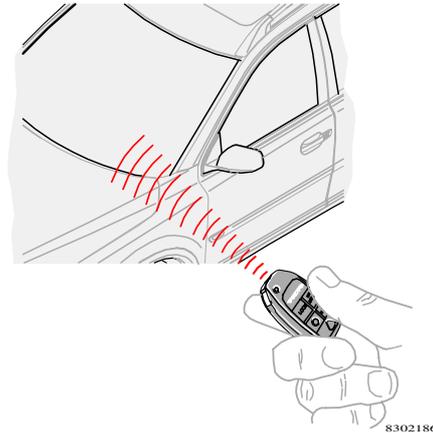

### Locking and unlocking the car from the outside

Using the master key or its remote control, all the doors and the boot lid can be locked or unlocked from the outside at the same time. When the vehicle is locked, the door locking buttons and interior door handles are disconnected.

Using the master key or its remote control, all the doors and the boot lid can be unlocked from the outside at the same time.

If the car is locked from the outside, the fuel filler flap locks after a 10-minute delay.

### Locking and unlocking the car from the inside

All doors and the boot lid can be locked and unlocked at the same time using the switches in the door panel (applies if the vehicle is opened with the master key).

Additionally, each door can be locked with the lock button and unlocked by opening the door using the handle.

The above situation is valid, as long as you haven't locked the car from the outside!

## Locking and unlocking, Replacing battery

### Automatic relocking

If none of the doors or the boot lid is opened within two minutes of being unlocked **with the remote control from the outside**, all locks will be automatically relocked. This function prevents you from inadvertently leaving the car unlocked.

For cars with an alarm, see page 83.

**NOTE!** If the boot lid was opened with the button on the remote control, it will not automatically relock.



### Automatic locking

The doors lock automatically when vehicle speed exceeds 7 km/h and remain locked until a door is opened from the inside or are unlocked using a central locking button.

### Unlocking/locking the boot lid with the remote control



Do as follows to unlock the boot lid only:

- Press the remote control button for the boot lid two times. The boot lid is unlocked and opens slightly.

If all doors are locked when you close the boot lid, it locks automatically.

### Unlocking the boot lid with the master key

Normally the boot lid is locked or unlocked when you lock or unlock the car using the master key in the driver's door or the remote control. The boot lid can be opened by **slowly** pressing the button on the remote control twice within three seconds, or by pressing the boot lid opener. The master key should only be used to unlock the boot lid in emergency situations (if the remote control is broken or if the car is without power). In such cases: insert the master key into the upper or lower part of the plug covering the lock. Twist the key upwards or downwards and remove the plug. Then unlock the boot lid.

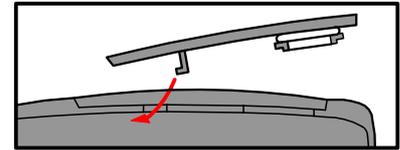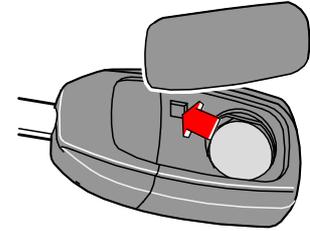

8302195r

### Replacing the battery

If the locks repeatedly fail to react to signals from the remote control at a normal distance, the battery should be replaced at the next service interval or within the course of a couple of weeks.

- Remove the cover by carefully prising up the rear edge with a small screwdriver.
- Change the battery (type CR 2032, 3 volt), the plus side should be up. Avoid touching the battery and its contact surfaces with your fingers.
- Refit the cover. Make sure the rubber seal is properly fitted and free from damage to prevent water from entering.
- Turn the old battery in to your Volvo workshop so that it is disposed of in an environmentally friendly way.

### When it is dark

#### Approach lighting

Carry out the following **when you approach** the car:

- Press the yellow button on the remote control.

The interior lighting, parking lamps, number-plate lighting and lamps in the door mirrors now light (certain models).

### Deadlocks\*

Your car has a special deadlock position which means that the doors cannot be opened from the inside if they are locked. Deadlocks can only be activated from the outside by the driver's door being locked with the key or remote control. All doors must be closed before deadlocks can be activated.


The doors then cannot be opened from the inside. The car can only be unlocked from the outside via the driver's door or by using the remote control (this only applies to cars that are equipped with deadlocks). The car cannot be opened by manipulating the door buttons from the outside.

Deadlocks are engaged after a 25 second delay once the doors have been closed.



#### **WARNING!**


Do not allow anyone to remain in the car without deactivating the deadlock

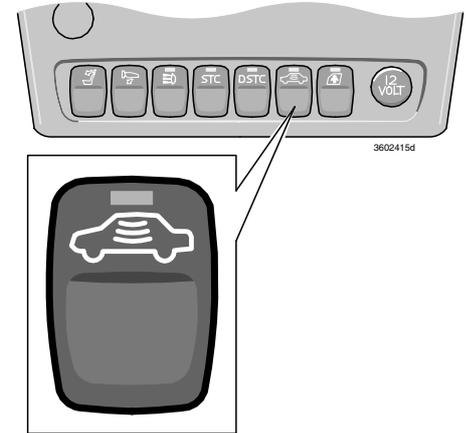

### Deactivating deadlocks

If someone wishes to remain in the car but you still wish to lock the doors from the outside the deadlocks can be disconnected. From the time the key is turned from position II until you lock the car, or as long as the centre console is supplied with current, you can press the button. The LED in the button then comes on and stays on until you lock the car using the key or remote control. A message is displayed as long as the key remains in the ignition switch. The deadlock is now disconnected. The deadlocks will be re-activated the next time the ignition is switched on.

\* Certain countries

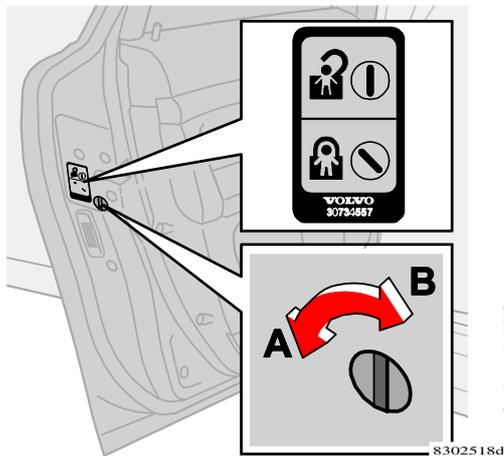


Control for child safety lock - left-hand rear door.

### Mechanical child safety locks - rear doors

The controls for the child safety locks are in the rear edge of each rear door and are only accessible when the door is open. Use a flat metal object, such as a screwdriver, to turn the control and thus activate or deactivate the child safety lock.


- A. Child-safe position - the doors cannot be opened from inside; turn outwards.
- B. Not child-safe position - the doors can be opened from inside; turn inwards.

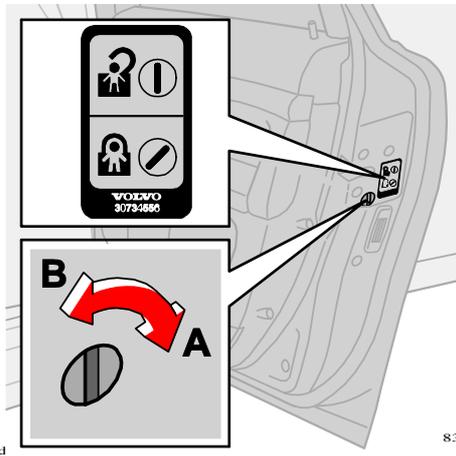

Child safety lock controls - right-hand rear door.

### **WARNING!**

Remember that in the event of an accident, rear seat passengers cannot open the rear doors from the inside if the child safety locks are activated. Therefore, keep the doors unlocked while driving! In the event of an accident, rescue personnel will then be able to enter the car from the outside

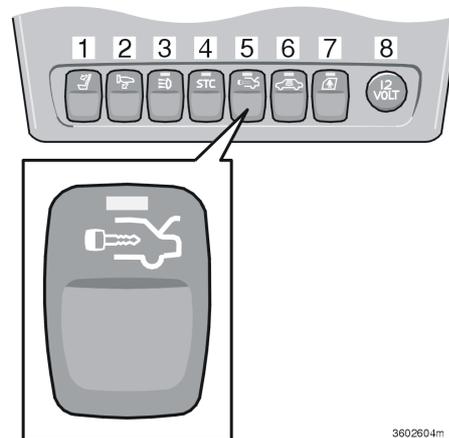

### Service locking\*, boot lid

This function is beneficial if the car is left for service, with a hotel parking valet or the like. The service key is left with the staff, who can open and drive the car but do not have access to the boot lid (or the glovebox if it is locked with the master key).

To activate service locking:

- Turn the master key to position II.
- Press the button. An LED in the button lights when the function is activated and a message is shown on the display.

To deactivate service locking:

- Turn the master key to position II and press the button again.

\* Certain countries

## The alarm system (option)

When the alarm is connected, it continually monitors all alarm points. The alarm is triggered if:

- the bonnet is opened.
- the boot lid is opened.
- a side door is opened.
- the ignition switch is turned with a non-approved key or subjected to force.
- a movement is detected in the passenger compartment (if a movement detector is installed - extra equipment).
- the car is lifted or towed away (if it is equipped with a tilt detector - extra equipment).
- the battery cable is disconnected.
- anyone tries to disconnect the siren.

## Activating the alarm

Press the LOCK button on the remote control. A long flash signal from the car's direction indicators confirms that the alarm is active and that **all** doors are closed. In certain markets the key or the switch in the driver's door can be used to alarm the car.

## Automatic arming of the alarm

In certain countries (Belgium, Israel etc.) the alarm is automatically armed after a slight delay if the driver's door is opened and closed but the car is not locked.

## Deactivating the alarm

Press the UNLOCK button on the remote control. Two short flash signals from the direction indicators of the car confirm that the alarm is deactivated. In certain markets, the key can be used to deactivate the alarm.

## Deactivating a triggered alarm

Press the UNLOCK button on the remote control if the alarm sounds and you wish to deactivate it. Two short flashes of the direction indicators are given as confirmation.

## Alarm signals

The audio signal is given from a siren with a reserve battery. Each alarm signal lasts 25 seconds.

If the alarm is triggered, all direction indicators flash for 5 minutes or until you deactivate the alarm as described above.

## Automatic alarm reset

If neither the side doors or rear door are opened within two minutes of the alarm being disarmed, and the car is unlocked with the remote control, the car automatically rearms the alarm. The car is simultaneously locked. This function prevents you from accidentally leaving the car unalarmed.


## Status indicator lamp on the dashboard

An indicator lamp (LED) at the top of the dashboard gives a description of the alarm system status:

- Lamp not lit: Alarm is deactivated.
- Lamp flashes once every 2 seconds: alarm is armed.
- Lamp flashes quickly, after deactivating the alarm and until the ignition is switched on: The alarm has been triggered.
- If a fault has occurred in the alarm system, a message is shown in the display with instructions for appropriate measures.

### IMPORTANT!

Do not attempt to repair or modify alarm system components. All such attempts can affect terms of insurance.

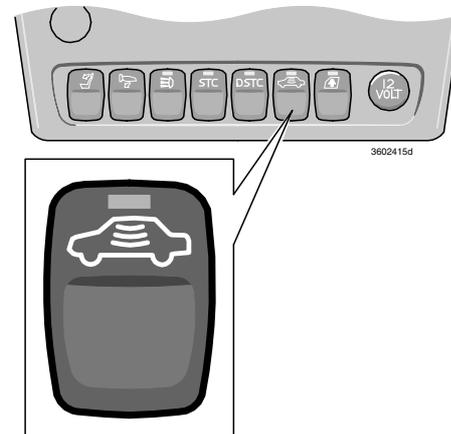

## Temporary deactivation of detectors

To avoid triggering the alarm inadvertently, for example when leaving a dog in the car or during a ferry crossing, the movement and tilt detectors can be temporarily deactivated. The button can be pressed at any time between the key being turned from position II to the car being locked, or as long as the power to the centre console is on. The LED in the button lights until you lock the car with your key or remote control. A message is displayed as long as the key remains in the ignition lock. The detectors will be reactivated the next time you switch on the ignition. If your car is equipped with deadlocks, these will be simultaneously activated. See page 81.

## Testing the alarm system

### Testing the movement detector for the passenger compartment:

1. Open all windows.
2. Activate the alarm. Alarm activation is confirmed by the LED flashing slowly.
3. Wait 30 seconds.
4. Test the movement detector in the passenger compartment by lifting a bag or similar from the seat. The alarm should now sound and flash.
5. Deactivate the alarm by unlocking with the remote control.

### Testing the doors:

1. Activate the alarm.
2. Wait 30 seconds.
3. Unlock with the key on the driver's side.
4. Open one of the doors. The alarm should now be triggered.
5. Repeat the test for the other door.
6. Deactivate the alarm by unlocking with the remote control.

### Testing the bonnet:

1. Get into the car and deactivate the movement detector as described on page 80.
2. Deactivate the alarm (remain in the car and lock the doors with the button on the remote control).
3. Wait 30 seconds.
4. Open the bonnet with the handle under the dashboard. The alarm should now sound and flash.
5. Deactivate the alarm by unlocking with the remote control.

### Testing the boot lid:

1. Activate the alarm.
2. Wait 30 seconds.
3. Unlock with the key on the driver's side.
4. Open the boot lid. The alarm should now sound and flash.
5. Deactivate the alarm by unlocking with the remote control.

If the alarm system does not work correctly, have the car examined by an authorised Volvo workshop.




---

---

## Starting and driving

Starting the engine	88
Economical driving	89
Manual gearbox	91
Automatic gearbox	92
All-Wheel Drive (AWD)	94
Active chassis FOUR-C	95
Parking assistance	96
Towing	98
Jumpstarting	99
Driving with trailer	100
Towing bracket	102
Detachable towbar	104
Loading	106
Adjusting headlamp pattern	107
Brake system/ABS/EBD	110
Stability system	112
BLIS (Blind Spot Information System)	113

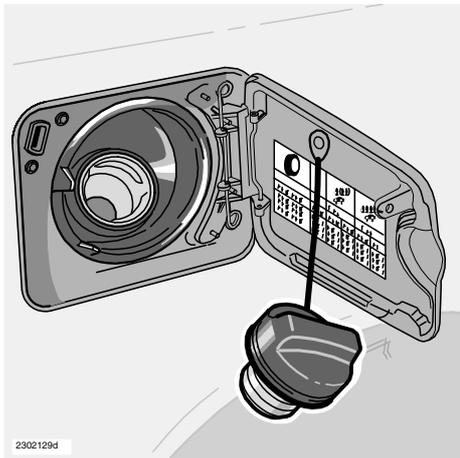

### Refuelling

The fuel cap is inside the fuel filler flap on the right rear wing.

In high exterior temperatures there can be overpressure in the fuel tank. Open the filler cap slowly.

Do not overfill the fuel tank. **A maximum of one automatic cut out by the fuel pump nozzle is recommended!** Too much fuel at high outside temperatures can cause the tank to overflow!

After refuelling, replace the fuel cap and turn until one or more clicks is heard.

#### Opening fuel tank

The fuel filler flap is unlocked and can be opened when the car is unlocked.

**NOTE!** When the car is locked from outside, the fuel filler flap remains unlocked for a further 10 minutes.

### Start the engine as follows (Petrol)

- 1 Apply the parking brake (handbrake).
- 2 **Automatic gearbox:** Gear selector in P or N position.

**Manual gearbox:** Gear lever in neutral and the clutch pedal completely depressed. This is especially important in severe cold.

- 3 Turn the ignition key to the start position. If the engine does not start within 5-10 seconds, release the key and try again.

### Refuelling

**NOTE!** Never add cleaning additives yourself unless specifically recommended to do so by a Volvo workshop.

#### Important!

Petrol-powered cars must always be refuelled with unleaded petrol so as not to damage the catalytic converter.

#### **WARNING!**

Always **switch off** your mobile telephone during refuelling - the ring signal can cause sparks which may ignite petrol fumes and lead to fires or personal injury.

### Start the engine as follows (Diesel)

- 1 Apply the parking brake (handbrake).
- 2 **Automatic gearbox:** Gear selector in P or N position.  
**Manual gearbox:** Gear lever in neutral and the clutch pedal completely depressed. This is especially important in severe cold.
- 3 Turn the ignition key to the driving position. A control symbol in the combined instrument panel shows that the engine is pre-heating. Turn the key to the start position when the indicator symbol has gone out.

### Refuelling with diesel oil

At low temperatures ( $-5^{\circ}\text{C}$  to  $-40^{\circ}\text{C}$ ) the diesel oil can precipitate paraffin, which makes the engine difficult to start. Make sure that special winter fuel is used during the cold period of the year.

**NOTE!** Depending on the engine temperature when starting, the idling speed with a cold start is - for a short period - higher than normal for some engine types.

The reason for this is Volvo's ambition to minimise exhaust emissions by bringing up the engine's exhaust purification system to its correct working temperature as quick as possible.

### Drive with anticipation

Economical driving results from driving gently with anticipation and adapting your driving style and speed to the situation.

Keep in mind the following:

- Drive the engine to operating temperature as soon as possible! That is to say: do not let the engine idle, but drive with a light load as soon as you can.
- A cold engine consumes more fuel than a warm one.
- Avoid driving short distances where the engine never has time to reach operating temperature.
- Drive gently! Avoid unnecessary quick accelerations and heavy braking.
- Do not drive with unnecessary, heavy loads in the car.
- Do not drive with winter tyres when the roads are clear and dry.
- Remove the load carrier when it is not in use.
- Do not open side windows unnecessarily.

### Your new car - slippery road surfaces

Driving on a slipper road surface may feel different depending on whether you have chosen a car with manual gearbox or automatic gearbox.

Practice handling skids under controlled conditions so that you know how your new car reacts.

### Do not overload the battery

The electrical functions in the car load the battery to varying degrees.

Avoid having the ignition key in position II when the engine is off.

Use position I instead, as less power is consumed. The 12-volt socket in the cargo compartment supplies power even when the ignition key is removed.

Examples of functions which consume a lot of power:

- ventilation fan
- windscreen wipers
- audio system
- parking lamps.

Also take note of different accessories that load the electrical system.

Do not use functions that consume a lot of current when the engine is switched off.

A text is shown on the display in the combined instrument panel if battery voltage is low.

The message in the display remains until the engine has started.

The energy economy function shuts down certain functions or reduces the load on the battery, e.g. by lowering ventilation fan speed and switching off the audio system.

Charge the battery by starting the engine.

### Do not allow the engine and cooling system to overheat

Under certain conditions, e.g. when driving in hilly terrain and with a heavy load, especially in warm weather, there is a risk of the engine and cooling system overheating.

To prevent the cooling system from overheating:

- Drive at low speeds if driving with a trailer up a long incline.
- Switch off the air conditioning temporarily.
- Avoid letting the engine idle.
- Do not turn the engine off immediately you stop, if the car has been driven hard.
- Remove any auxiliary lamps from in front of the grille if driving in extremely high temperatures.

#### To prevent the engine from overheating:

Do not exceed engine speeds of 4500 rpm (diesel engine: 3500 rpm) if driving with a trailer or caravan in hilly terrain. The oil temperature can become too high.

### Automatic gearbox

#### Adaptive system

The gearbox is controlled by what is known as an adaptive system. The system continually monitors how the gearbox is behaving senses every gear change for optimum shift quality.

#### Lock-up function

The gears have a lock-up function (locked gears), which gives better engine braking and lower fuel consumption.

### Safety systems

Cars with automatic gearbox have special safety systems:

#### Keylock

To remove the ignition key, the gear selector must be in the P position. The key is locked in all other positions.

#### Park position (P)

Stationary car with engine running: Hold your foot on the brake pedal when moving the gear selector to another position.

### Shiftlock

#### Park position (P)

The brake pedal must be depressed to move the gear selector from position P to other gear positions when the ignition key is in position I or II.

#### Neutral position (N position)

The brake pedal must be depressed to move the gear selector from position N to other gear positions when the ignition key is in position I or II.

### Cold start

When starting in cold temperatures, gear shifts may feel harder.

This is due to the viscosity of the transmission fluid at low temperatures.

To **minimise** engine emissions, the gearbox shifts up later than normal if the engine has been started at low temperatures.

When the engine is cold, the gearbox shifts gears at higher revs.

This allows the catalytic converter to reach normal operating temperature more quickly.

### ”Kick-down”

When the accelerator is pressed all the way to the floor, beyond the position normally regarded as full acceleration, a lower gear is immediately engaged. This is known as kick-down.


When maximum speed for this gear is reached, or if the accelerator is released from the kick-down position, the gearbox automatically changes up.

Kick-down is used when maximum acceleration is needed, such as for overtaking.

To prevent over-revving, the gearbox control program has a protective downshift inhibitor.

The kick-down function cannot be used in the manual\* positions. Return to automatic position D.


\* Refers to Geartronic.

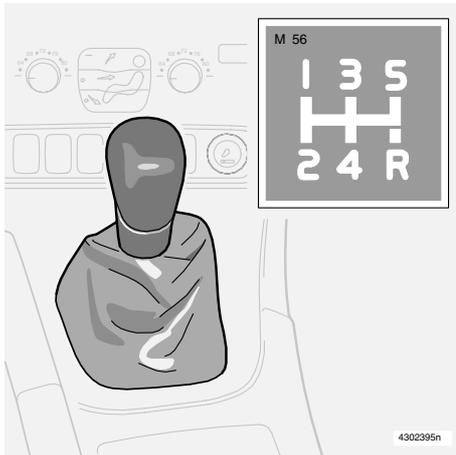

## Gear positions, 5-speed

Depress the clutch pedal fully with each gear change. Remove your foot from the clutch pedal between gear changes! Follow the appropriate shifting pattern.


For the best possible fuel economy, use the highest gear possible as often as possible.

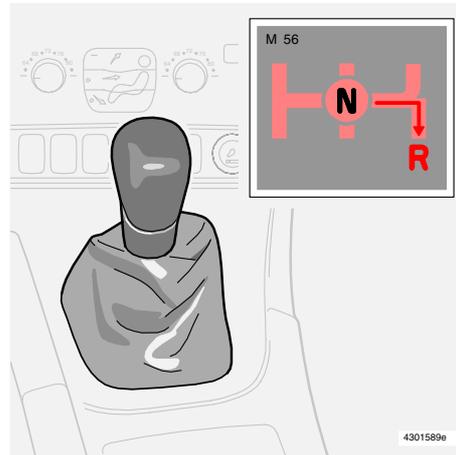

## Reverse gear inhibitor

**Only engage reverse gear when the car is stationary.**

To put the car in reverse, the gear lever must first be moved to neutral (between 3rd and 4th gear). Thus, reverse cannot be directly selected from 5th gear due to the reverse gear inhibitor.

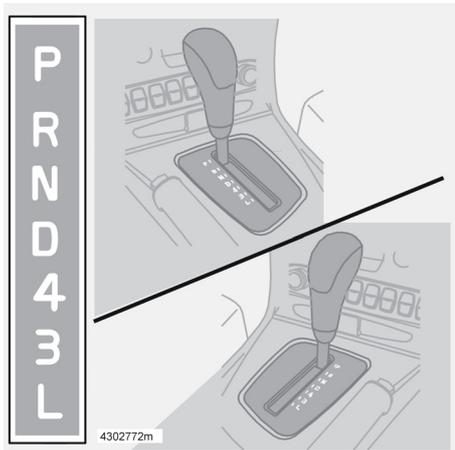

*Gear selector positions*

## P – Parking

Select this position when you wish to start the engine or park the car.

**The car should be stationary when you select P!**

In the P position the gearbox is mechanically locked. Always apply the parking brake when parking!

## R – Reversing position

**The car should be stationary when you select R!**

## N – Neutral position

N is the neutral position. The engine can be started, but no gear is selected. Apply the

parking brake when the car is stationary with the **gear lever in N.**

## D – Driving position

D is the normal driving position. The car automatically shifts between the different gearbox gears based on the level of acceleration and speed. The car should be stationary when selecting D from position R.

## 4 – Low gear

Shifting up and down between the 1st, 2nd, 3rd, and 4th occurs automatically.

**The 5th gear will not be engaged.**

Position 4 can be used:

- for mountain driving
- when driving with a trailer
- to increase engine braking

## 3 – Low gear

Shifting up and down between 1st, 2nd and 3rd occurs automatically.


**The 4th gear will not be engaged.**

Position 3 can be used:

- for mountain driving
- when driving with a trailer
- to increase engine braking


## L – Low gear position

Select L if you wish to drive in 1st or 2nd. Position L gives the best engine braking for mountain driving, etc.

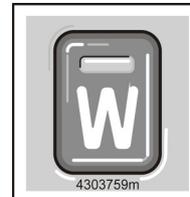


## W – Winter


The W button by the gear selector engages and disengages the winter programme W. The symbol W is shown in the combined instrument panel when the winter programme is activated. The Winter programme starts the gearbox in 3rd gear to make it easier to pull off on slippery roads. When the programme is engaged, lower gears are activated only by kick-down. The W programme can only be selected in position D.

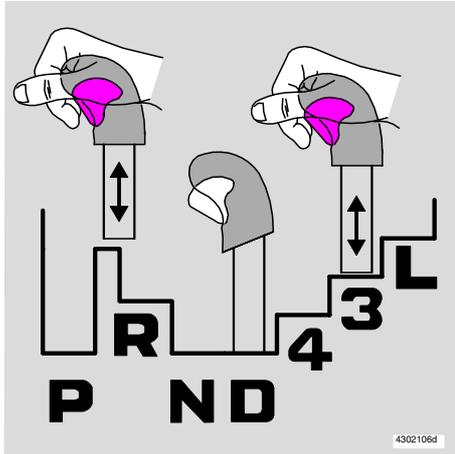

*Gear selector, automatic gearbox*

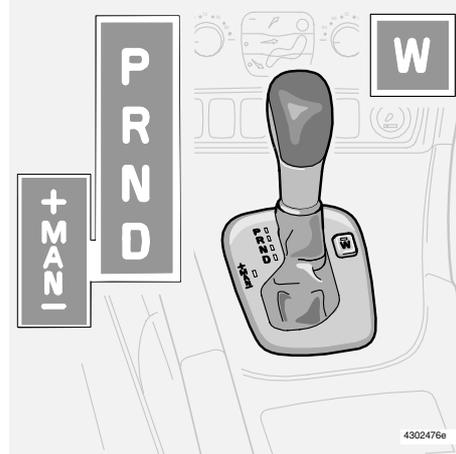

*Geartronic*

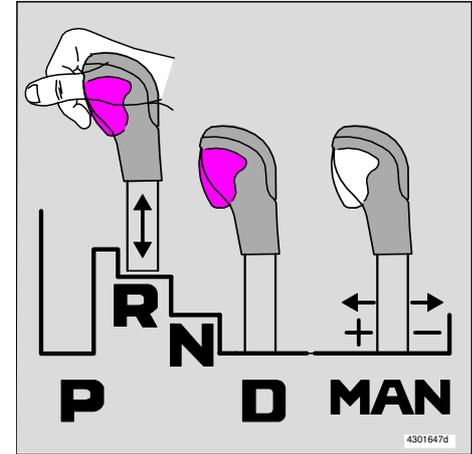

*Gear selector, Geartronic*

## Mechanical gear selector inhibitor

The gear selector can be moved freely between N and D. Other positions are locked with a latch that is released with the inhibitor button on the gear selector.

Press the inhibitor button to move the lever forward or back between the different gear positions.

## Manual positions, Geartronic

Move the gear selector to the right to shift from automatic driving position D to manual mode. To shift from the MAN position to automatic driving position D, move the gear selector left to position D. 3rd gear is the highest gear that can be used when starting.

## While driving

The manual gearshift mode can be selected at any time while driving. The engaged gear is locked until you choose another gear. The car will only shift down automatically if you slow down to a very low speed. If the gear selector is moved to - (minus) the car changes down a gear and engine brakes at the same time. If the gear selector is moved to + (plus) the car changes up a gear. The kick-down function cannot be used in manual mode.

### All-Wheel Drive (AWD) (option)

All-wheel drive is always engaged.

All-wheel drive means that the vehicle is driven by all four wheels at the same time.

The power is distributed automatically between the front and rear wheels.

An electronically-controlled clutch system distributes the power to the pair of wheels which have the best grip in the road conditions.

This is to get the best possible grip and to avoid wheelspin.

Under normal driving conditions, the majority of power is transmitted to the front wheels.

The greater traction improves driving safety in rain, snow and icy conditions.

### Speed-dependent power steering (option)

If the car is equipped with speed-dependent power steering it is more easily steered at low speeds to facilitate parking or the like.

When speed is increased, steering force is adapted to provide the driver increased road sensitivity.

### Do not drive with an open boot lid!

If you drive with the boot lid open, some of the exhaust gases and poisonous carbon monoxide can be sucked into the car through the cargo compartment. If you must drive a short distance with the boot lid open, do as follows:

- Close all windows.
- Distribute the air between the windscreen and floor and while running the fan at high speed.

## Active chassis FOUR-C (option)

The car is equipped with an extremely advanced active chassis system - Continuously Controlled Chassis Concept - that is regulated electronically.

The FOUR-C control unit analyses data from the sensors and performs the necessary shock absorber setting adjustments up to 500 times per second. This results in extremely fast and accurate individual shock absorber control, which contributes to variations in chassis characteristics.

Chassis characteristics can be modified at any time while driving, when the nature of the road changes or when you desire a change in driving style. This change occurs in a matter of milliseconds. The effect produced by pressing the accelerator is linked to your choice of chassis characteristics.



### Comfort

Comfort mode adjusts the chassis setting so that the body is insulated from uneven sections of the road surface, which allows for better glide. Shock absorption

is softer and body movements are minimal.


This setting is recommended for long-distance driving or driving on slippery road surfaces.

If the chassis is in Comfort mode when the ignition is switched off, it will resume this mode the next time it is started.

### Sport

In Sport mode, steering responses are quicker than in Comfort mode. Damping is harder and the body follows the road surface to minimise rolling during quick cornering. The car feels sportier. If the chassis is in Sport mode when the ignition is switched off, it will resume this mode the next time it is started.

## Parking assistance

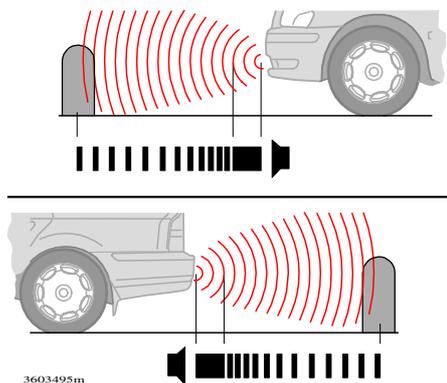

*Parking assistance, front and rear*

### General

Parking assistance is used as an aid to parking. A signal indicates the distance to an object. The frequency of the signal increases as you come closer to an object in front of or behind the car. The tone becomes constant at a distance of about 30 cm. If there are objects within this distance both behind and in front of\* the car, the signal alternates between front and rear speakers.

If the volume of another sound source from the audio system is high, this is automatically lowered.

The system is always activated when the car is started.

\*Provided that parking assistance is mounted both front and rear.

### **WARNING!**

Parking assistance does not relinquish the driver's own responsibility during parking. The sensors have blind spots where objects cannot be detected. Be aware of children and animals near the car.

### Front parking assistance

The measurement area straight in front of the car is approx. 0.8 m.

The text message PARK ASSIST ACTIVE appears in the audio display when the sensors react to an obstacle in front of the car.

Auxiliary lamps cannot be installed together with parking assistance because the sensors will react to the auxiliary lamps.


### Rear parking assistance

The measurement area straight behind the car is approx. 1.5 m.

The text message PARK ASSIST ACTIVE appears in the audio display when reverse gear is engaged.

The system must be deactivated when driving with a trailer, bike carrier on the towbar or the like as this would trigger the sensors.

Rear parking assistance is deactivated automatically when towing a trailer if a Volvo genuine trailer cable is used.

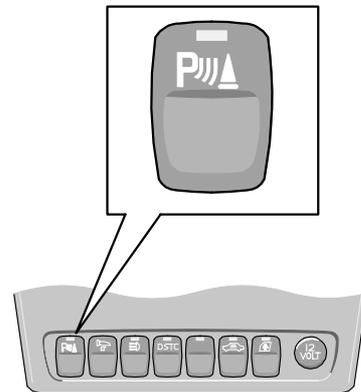

### Deactivating and reactivating parking assistance

Parking assistance can be deactivated with the button in the switch panel. The LED in the switch goes out. Parking assistance is reactivated when the switch is turned on and the LED illuminates.

### Front parking assistance

Front parking assistance is active at speeds of below 15 km/h, even when reversing.

The signal comes from the front speakers.


## Rear parking assistance

Rear parking assistance is activated when reverse gear is engaged. The signal comes from the rear speakers.

## Fault indicator



The information symbol shines with a steady glow PARK ASSIST SERVICE REQUIRED is shown in the information display in the centre of the combined instrument panel together with the symbol.

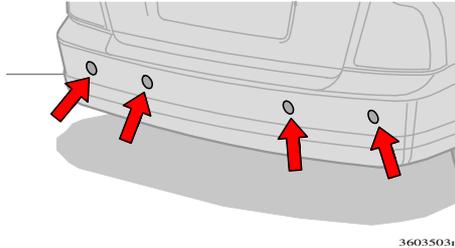


*Parking assistance sensors*

## Cleaning the sensors


The sensors must be cleaned regularly in order for them to function properly. Clean them with water and car shampoo. The sensors may react if covered by ice and snow.

# Towing

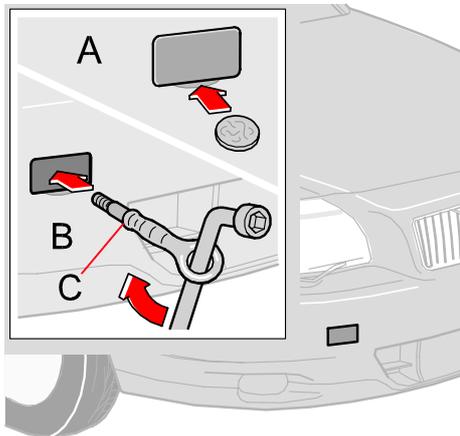

8600309e

*Towing eye, front*

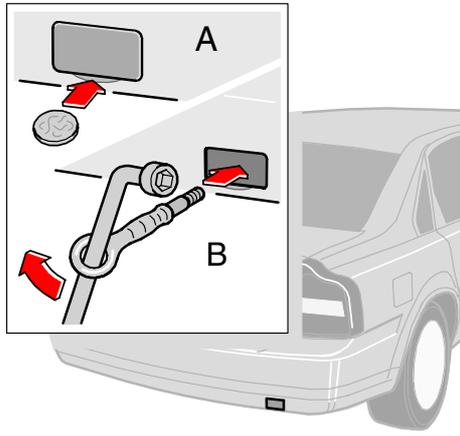

8600307e

*Towing eye, rear*

## If you need to be towed

- Unlock the steering wheel lock so that the car can be steered.
- **Keep in mind the highest permitted legal towing speed.**
- Remember that the brake and power steering servos do not function when the engine is switched off! You must exert approximately five times more pressure on the brake pedal and steering is considerably harder than usual.
- Drive gently. Keep the towline taut to avoid unnecessary jerking.

## For automatic gearboxes

- The gear selector should be in position N.
- Maximum permitted speed for cars with an automatic gearbox: 80 km/h (50 mph).  
Maximum permitted distance: 80 km (50 miles).
- Cars equipped with an automatic gearbox must only be towed face forward.
- The engine cannot be towed to start (bump started). See “Jumpstarting” on the next page.

## Bump starting (tow starting) the engine

If you bump start (tow start) a car with manual gearbox, the catalytic converter may be damaged. Cars with automatic gearbox cannot be bump started (tow started). Use a booster battery if the battery is flat.

## Towing eye

The towing eye is located in the tool kit in the cargo compartment. You must screw the towing eye into place before towing. The sockets and covers for the towing eye are located on the right-hand side of each bumper.


Remove the cover as follows:

- A. Loosen the bottom edge of the cover with a coin.
- B. Screw the towing eye securely into place up to the flange (C). You can use a wheelbrace.

After use, unscrew the towing eye and refit the cover.

## Towing

**NOTE!** The towing eye may only be used for towing on the road, not for salvage after driving into a ditch or similar. Professional help should be called for salvage towing.

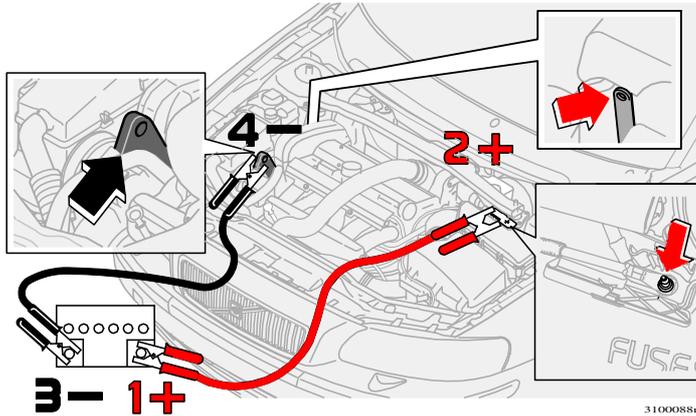

## Jumpstarting with a booster battery is as follows:

If for some reason the battery in your car is discharged, you can “borrow” current from a spare battery or another car’s battery to start the engine.

Always check that the clamps are secure so that there are no sparks during the start attempt.

To avoid the risk of explosion, we recommend you do exactly as follows.

- Turn the ignition key to position 0.
- Ensure that the booster battery has **12 volt current**.
- If the booster battery is in another car, stop the engine of that car and make sure the cars are not touching.
- Connect the red cable to the booster battery’s positive terminal (1+ in the illustration) and the connection in your cars engine compartment (2+ in the illustration).

The clamp should be attached to the contact point located under a little black cover with a plus sign on it. The cover is connected to the cover of the fuse box.

### ⚠ WARNING!

Remember that batteries, especially the booster battery, contain oxyhydrogen which is highly explosive. A spark, which can be caused if you incorrectly install the jump leads, is enough to cause the battery to explode and both damage the car and injure you. The battery also contains sulphuric acid, which can cause serious corrosive damage. If the acid comes into contact with your eyes, skin or clothes, flush with large quantities of water. If acid splashes into your eyes contact a doctor immediately.

- Connect one end of the black cable to the booster battery’s negative terminal (3– in the illustration).
- Connect the other end of the black cable to a grounding point on your car (4– in the illustration).
- Start the engine of the “booster car”. Let the engine run a few minutes at a speed slightly higher than idle, 1500 rpm.
- Start the engine of the car with the discharged battery.
- **NOTE! Do not move the clamps during the start attempt (risk of spark buildup).**
- Remove the clamps in reverse order.

**NOTE!** If you need to help another car, connect the red cable as shown in the illustration above. Connect the black cable between two grounding points as also shown in the illustration. **Do not connect the black cable to the negative pole of another battery!**

### Driving with trailer

- The towing bracket on the car must be of an approved type. Your Volvo dealer can advise you as to which towing bracket to use.
- Distribute the load in the trailer so that the weight on the towing bracket is approximately 50 kg for trailer weights under 1200 kg and approximately 75 kg for trailer weights over 1200 kg.
- Increase tyre pressure to correspond to the pressure for full load. See the tyre pressure table!
- Clean the towing bracket regularly and grease the towball\* and all moving parts to prevent unnecessary wear.
- Do not drive with a heavy trailer when your car is brand new! Wait until it has gone at least 1000 km (620 miles).
- The brakes are loaded much more than usual on long and steep downhill slopes. Downshift to a lower gear and adjust your speed.
- If the car is driven with a heavy load in a hot climate, the engine and gearbox may overheat. The temperature gauge in the combined instrument panel goes into the red zone when the car overheats. Stop and let the engine idle a few minutes.
- If the car overheats, the air conditioning system can be temporarily switched off.
- The gearbox reacts with a built-in protection function if the car overheats. See the message in the display!
- The engine is loaded more heavily than usual when driving with a trailer.
- For reasons of safety, you should not drive faster than 80 km/h (50 mph), even if the laws of certain countries permit higher speeds.
- The highest permissible trailer weight for a trailer without brakes is 750 kg.
- If you park with a trailer, always move the gear selector to the P position (automatic transmission), or engage a gear (manual gearbox). If you park on steep hills always put chocks under the wheels.

\* Does not apply to ball hitch with vibration damper.

- Avoid driving with trailer weights above 1200 kg on inclines greater than 12%. You should not drive with a trailer on inclines above 15%.


### Driving with trailer - automatic transmission

- When parking on a slope you should apply the parking brake before moving the gear selector to the P position. When starting on a slope you should first move the gear selector to the driving position and then release the parking brake.
- Select an appropriate low gear position on the gearbox when driving on steep slopes or if driving slowly. In doing so, you prevent the gearbox from changing up if you have an automatic transmission. The gearbox oil will be cooler.
- If you have a Geartronic transmission, do not use a higher manual gear than what the engine can "handle". It is not always economical to drive in high gears.

**NOTE!** Some models must be fitted with an oil cooler for the automatic transmission when driving with a trailer. You should therefore check with your closest Volvo dealer about just your car if a towbar has been fitted at a later date.

**NOTE!** The maximum permitted trailer weights stated are the ones that the Volvo Car Corporation allows. Remember that national vehicle regulations may further limit the trailer weight and speed. The towbars can be certified for higher towing weights than what the car may tow.

The highest permitted trailer weight for a trailer with brakes	Recommended ball pressure
0-1200 kg.....	50 kg
1201-1600 kg.....	75 kg
1601-1800 kg.....	75 kg

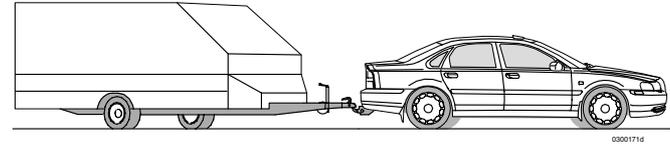





## Level control

If your car is equipped with automatic level control, the rear end will always have the right height **while driving** irrespective of the load. The rear end drops when the car is at a standstill, which is quite normal. When starting with a load, the level is pumped up after a certain distance.

### WARNING!

If you do not follow the given recommendations, the trailer and car may be difficult to control during evasive manoeuvres and braking, which can be dangerous to you and others on the road.

## Towing bracket

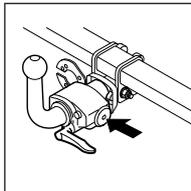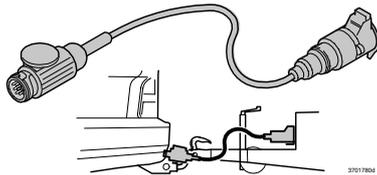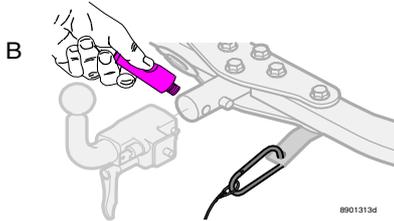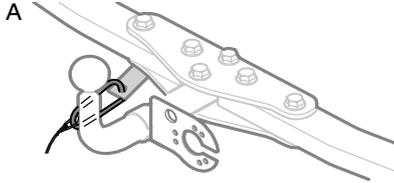

### Fixed towbar (A)

Always remember to fasten the trailer's safety cable to the attachment. See the illustration.

### Detachable towbar (B)

Always follow installation instructions carefully.

Always remember to fasten the trailer's safety cable to the attachment. See the illustration.

**Always remember to clean and grease the connector pin regularly.** Use the recommended grease 8624203.



**NOTE!** Your car may have a towing bracket with a 13-pin electrical connector, which you need to connect to a trailer with a 7-pin electrical connector. If this is the case, use only an original Volvo Genuine adapter cable. Ensure that the cable does not drag on the ground.

### **WARNING!**

If your car is fitted with Volvo's detachable towbar: Make sure that the towbar is locked before you drive off.

- The red signal pin (see the arrow in the illustration to the left) should not be visible!
- Use the key to lock it.

See the description on page 104.

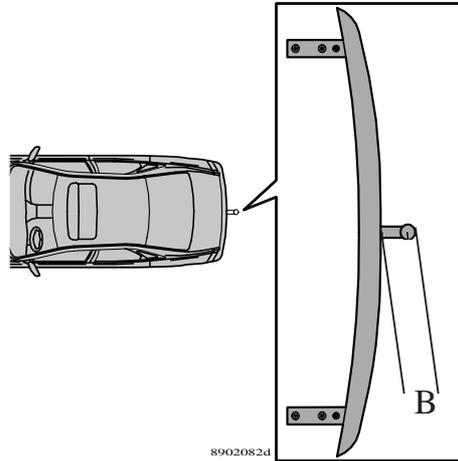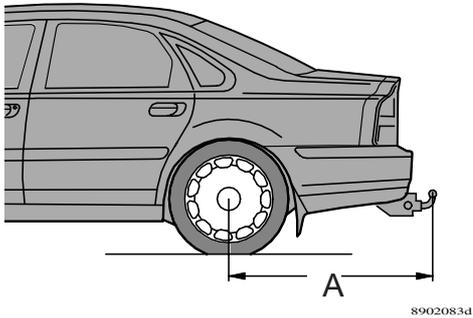

**Distance A above:**


Fixed: 1152 mm  
 Detachable: 1152 mm

Max. ball pressure: 75 kg

**Distance B above:**


Fixed: 65 mm  
 Detachable: 65 mm

## Detachable towbar - mounting the ball section

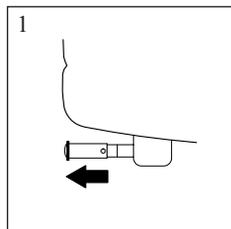


8902079M

Remove the connector pin cover.

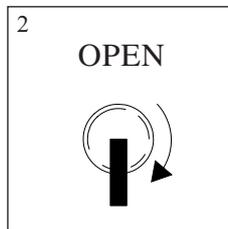


8902078M

Insert the key and turn it clockwise to the unlocked position.

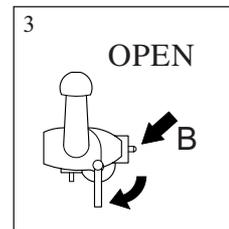


8902074M

Hold the towball and turn the lever clockwise to the locked position. Release the lever.

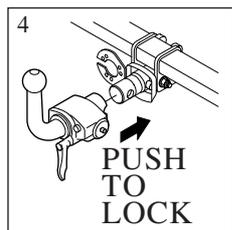


8902075M

Grasp the towbar.  
Push the part with the ball in until it locks.  
NOTE! The lever changes position quickly.

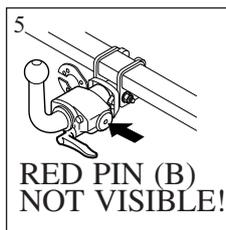

8902076M


Check that the signal pin (B) is pushed in.

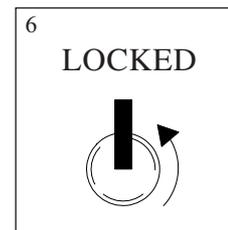


8902076M

Turn the key anticlockwise to the locked position and remove it from the lock.


## Detachable towbar - removing the ball section

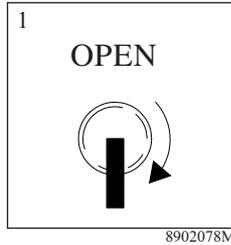

Insert the key into the detachable part and turn it clockwise to the unlocked position.

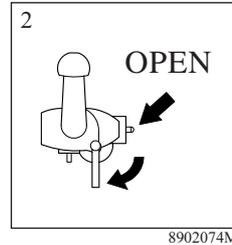


Turn the lever clockwise to the locked position and grip the towball.

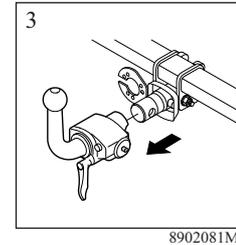


Grasp the towbar. Pull the towball section from the connector pin. Do not hold the lever.

### IMPORTANT!

The lock on the towball can only be locked when the red plastic pin is not visible

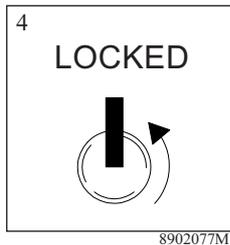


Turn the key anticlockwise to the locked position and remove it from the lock.

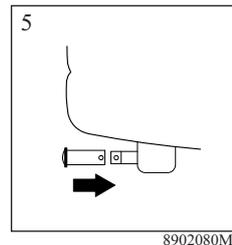

Refit the connector pin cover as in the illustration.

## Loading

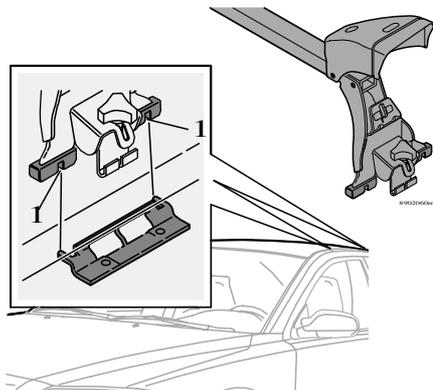

Load carrier attachment points

## Loading

### General

Load capacity is affected by extra accessories mounted on the car, such as a towbar, the load on the towball (75 kg with trailer hitched), load carriers and roof box, as well as the passengers' combined weight. The load capacity of the car is reduced by the number of passengers and their weight.

### **WARNING!**

The car's driving characteristics change depending on how heavily it is loaded and how the load is distributed.

### Fitting the load carrier

1. Make sure the load carrier is placed in the right direction (see the marking on the decal under the cover).
2. Fit the guide pins into the guide holes (1).
3. Carefully lower the bracket on the other side to the roof.
4. Screw the knob up a bit.  
Press the knob against the roof bracket and catch the hook in the roof bracket **under the roof rail.**
5. Screw the load carrier in place.
6. Fit the guide pins of the other brackets into the guide holes.
7. Screw the load carrier in place.
8. Check that the hook is properly secured in the roof bracket.
9. Tighten the knobs alternately until the carrier feels secure.
10. Refit the cover.
11. **Check the knobs regularly to see that they are properly tightened.**

### If using load carriers


- To avoid damaging your car and to achieve the best level of safety when driving, we recommend that you only use load carriers that Volvo has specially designed for your car.
- **Check periodically that the load carriers and load are properly secured.** Lash the load securely with retaining straps!
- Distribute the load evenly over the load carriers. Do not load lopsidedly! Place the heaviest items at the bottom.
- Keep in mind that the car's wind resistance and fuel consumption increase in proportion to the size of the load.
- Drive gently. Avoid quick accelerations, heavy braking and taking curves hard.

### **WARNING!**

Load no more than 100 kg on the roof, inclusive of the load carriers or roof box. The car's centre of gravity and driving characteristics are altered by roof loads.

## Floor mats

Volvo offers custom made floor mats for your car. They must be properly placed and secured in the mat clips so that they do not become entangled in the pedals at the driver's seat or get caught at other seats.

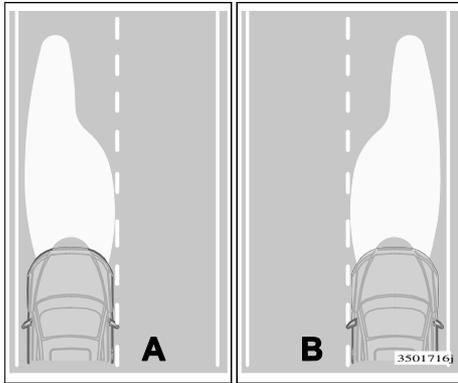


A. Headlamp pattern for left-hand traffic  
B. Right-hand traffic

## Correct light pattern for left or right-hand traffic

So as not to dazzle oncoming drivers, the headlamp beam pattern can be altered by masking the headlamps. The quality of the beam pattern may not be as good.

### Headlamp masking

Copy the templates, which are reversed for RHD variants, and transfer the pattern to a self-adhesive, waterproof material such as opaque tape or similar. The mask is positioned using the rectangle in the headlamp lens. The reference measurements (X, Y) are for obtaining the distance from the rectangle to the corner of the mask. After copying the templates, check the measurements so that the reference measurements cover enough of the beam pattern.

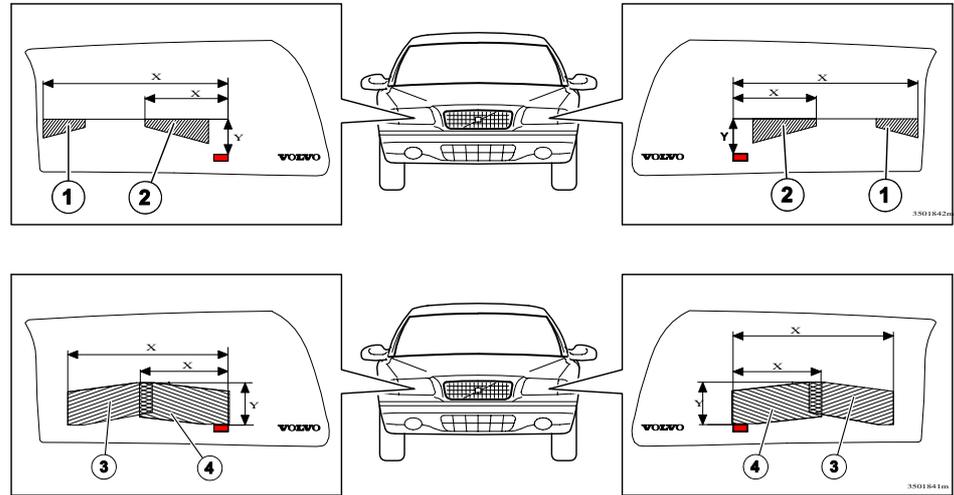

Fitting the mask to the headlamps. The upper illustration is for halogen headlamps and the lower illustration is for Bi-Xenon headlamps.

### Reference measurements for halogen headlamps:

Template 1. (1) = 21 mm, (2) = 46 mm  
Reference measurements to the rectangle in the headlamp lens: (3) = 158 mm, (4) = 39 mm.

Template 2. (5) = 70 mm, (6) = 27 mm  
Reference measurements to the rectangle in the headlamp lens: (7) = 22 mm, (8) = 39 mm.


### Reference measurements for Bi-Xenon headlamps:

Template 3. (1) = 93 mm, (2) = 37 mm  
Reference measurements to the rectangle in the headlamp lens: (3) = 84 mm, (4) = 47 mm.

Template 4. (5) = 101 mm, (6) = 37 mm  
Reference measurements to the rectangle in the headlamp lens: (7) = 2 mm, (8) = 2 mm.

## Adjusting headlamp pattern

### Masking templates for halogen headlamps

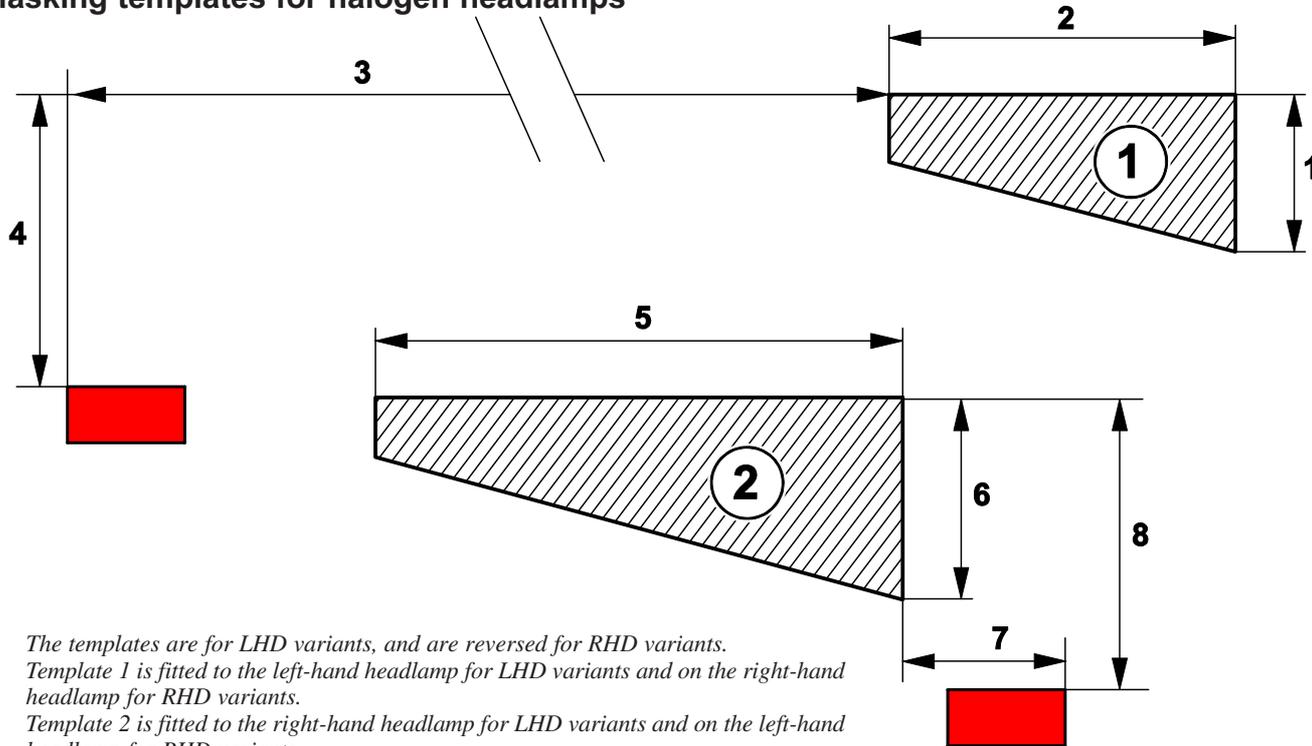


*The templates are for LHD variants, and are reversed for RHD variants.  
Template 1 is fitted to the left-hand headlamp for LHD variants and on the right-hand headlamp for RHD variants.  
Template 2 is fitted to the right-hand headlamp for LHD variants and on the left-hand headlamp for RHD variants.*

Copy templates 1 and 2. Check the measurements to ensure they are correct. Reverse the templates for RHD variants. Transfer the template to a self-adhesive, waterproof material and cut it out.

3501843m

Masking templates for Bi-Xenon headlamps

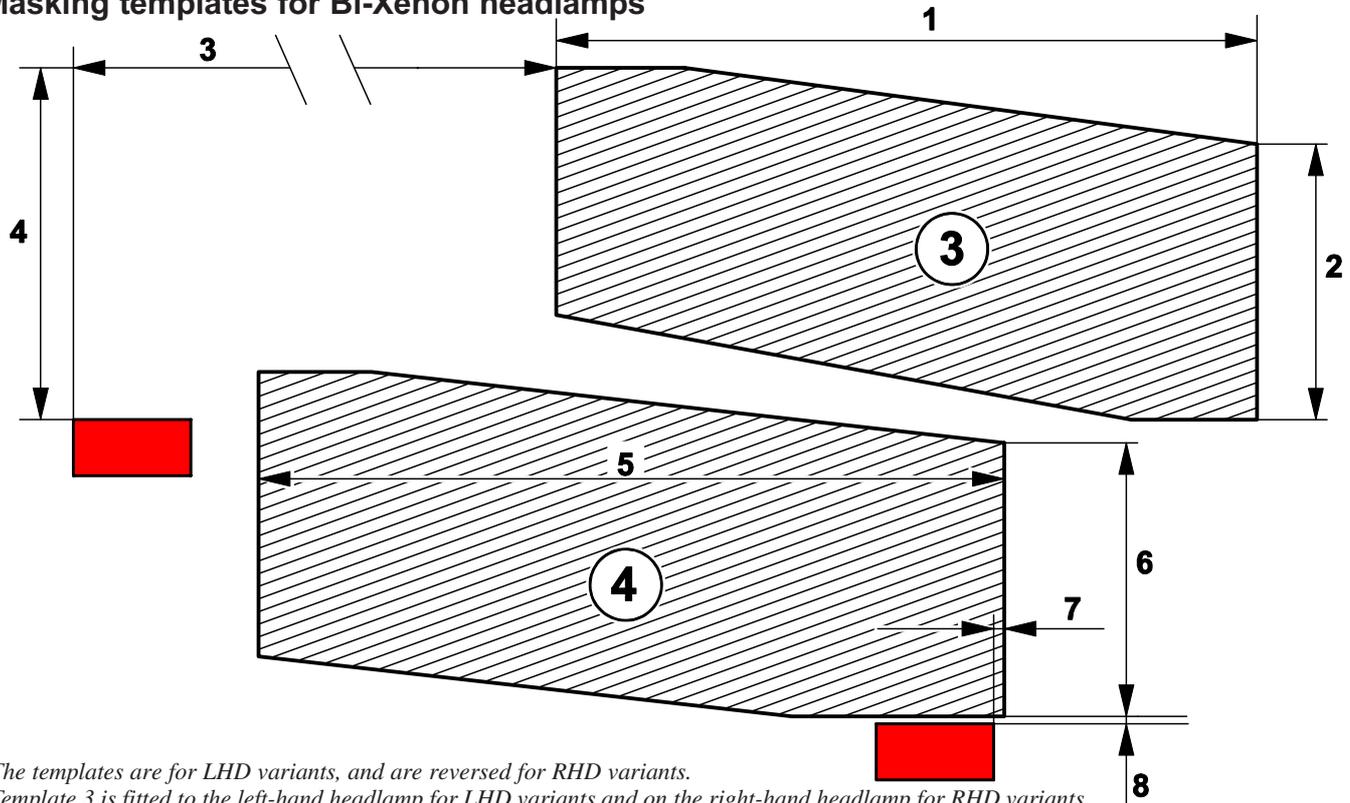

The templates are for LHD variants, and are reversed for RHD variants.

Template 3 is fitted to the left-hand headlamp for LHD variants and on the right-hand headlamp for RHD variants.

Template 4 is fitted to the right-hand headlamp for LHD variants and on the left-hand headlamp for RHD variants.

3501844m

Copy templates 3 and 4. Check the measurements to ensure they are correct. Reverse the templates for RHD variants. Transfer the template to a self-adhesive, waterproof material and cut it out.

### **If a brake circuit fails**

If a fault should occur in one of the circuits it is still possible to stop the car. Press the pedal hard once - not repeatedly. The brake pedal can be depressed further and feels a little softer than usual. It also requires more pressure on the pedal to achieve a normal braking effect.

### **The brake servo only works when the engine is running**

If the car is rolling or being towed with the engine switched off you must apply approximately five times more pressure on the brake pedal than when the engine is running.

### **The brake pedal feels rigid and hard.**

### **Moisture on the brake discs and brake lining alter braking characteristics!**

The brake components become wet when the car is driven in heavy rain, through pools of water, or when the car is washed. This alters brake pad friction characteristics so that there is a delay before braking effect is noticed. Depress the brake pedal lightly from time to time when driving long distances in rain or slush or before parking the car in such conditions. The brake pads are thus able to warm up and dry out. You should also do this when driving after washing the car or when starting in very damp or cold weather conditions.

### **If the brakes are heavily loaded**

When driving in the Alps or other roads with similar characteristics, the brakes are heavily loaded even if you are not pressing the pedal

particularly hard. Because the speed is often low the brakes are not cooled as effectively as when driving on flat roads.

So as not to overload the brakes **shift down** and use the same gear both uphill and downhill instead of using the brake (manual transmission). In this way engine braking is used more effectively and the brake is only required for short periods.

Keep in mind that the brakes are even more heavily loaded when driving with a trailer.

### **ABS - Anti-lock brakes**

The ABS system (Anti-lock Braking System) is designed so that the wheels do not lock when braking. This retains the best possible steering response when braking. This improves your ability to swerve to avoid obstacles. The ABS system does not increase your total braking capacity. However, as the driver you have increased ability to steer and thus better control over the car, which in turn increases safety. After the engine has started and reached a speed of about 20 km/h (12 mph), a short self-test can be both heard and felt. When the ABS system functions, you can hear and feel pulses in the brake pedal. This is completely normal.

**NOTE!** You must depress the brake pedal fully

to take maximum advantage of the ABS system. Do not release the pedal when the ABS pulses are felt and heard. Practice braking with the ABS system in a suitable place.

### **The ABS symbol is lit and shines with a constant glow:**

- For approximately two seconds when you start the car to test the system.
- If the ABS system has shut down due to a fault.

## Electronic Brakeforce Distribution (EBD)

The EBD system (Electronic Brakeforce Distribution) is an integrated part of the ABS system. The EBD system controls the brake force to the rear wheels so that the best possible braking force is always available. Pulses in the brake pedal can be felt and heard as the system controls the brake force.

### **WARNING!**

If both the **BRAKE**  and **ABS**  warning symbols are lit, there is a risk that the rear end will have a tendency to slide during heavy braking.

If the level in the brake fluid reservoir is normal, drive carefully to the nearest authorised Volvo workshop to have the brake system checked.

If the level of brake fluid in the reservoir is below the MIN mark, the car should not be driven until the brake fluid has been topped up.

The reason for the loss of brake fluid must be investigated.

## Emergency Brake Assistance (EBA)

The Emergency Brake Assistance function is integrated in the DSTC system.

The system is designed to provide maximum brake force immediately whenever rapid braking is necessary. The system detects the need for heavier braking by registering how quickly the brake pedal is applied.

The EBA function is active at all speeds. For safety reasons, it cannot be switched off.

When the EBA function is activated, the brake pedal sinks while maximum braking force is applied.

Continue braking without releasing the brake pedal.

The EBA function disengages when the pressure on the brake pedal is relieved.

## Stability system

When the stability system is in action, it may seem like the car does not respond normally to acceleration. This is because the system detects the amount of friction on the road surface and allows the different stability system functions to operate.

The car is equipped with either **STC** (Stability and Traction Control) or **DSTC** (Dynamic Stability and Traction Control).

Function/system	STC	DSTC*
TC	X	X
SC	X	X
AYC		X

### Traction Control (TC)

The Traction Control function transfers power from the spinning drive wheel to the drive wheel which has grip by braking the spinning drive wheel. To increase forward traction in this situation, it may be necessary to depress the accelerator more than usual. A pulsing sound is heard when Traction Control is working. This is completely normal. The TC function is most active at low speeds. It cannot be deactivated.

### Spin Control (SC)

The Stability Control function prevents the drive wheels from slipping during acceleration. This improves road safety on slippery surfaces. Under certain conditions, such as when driving with snow chains or in deep snow or sand, it may be beneficial to deactivate the SC function to increase traction. This is done with the STC/DSTC button.

### Active Yaw Control (AYC)

The Active Yaw Control function automatically brakes one or more wheels to stabilise the car in the event of a skid. If the brake pedal were to be depressed in this situation, it would feel more rigid than usual and a pulsing sound would be heard.


The AYC function is always active and cannot be deactivated.



### WARNING!

The driving characteristics of the car may change if the STC or DSTC is reduced. Always follow normal safety precautions for cornering and driving on slippery surfaces.

\* Option on certain markets

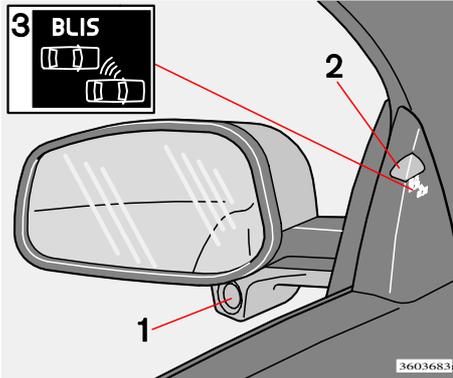


1 - BLIS camera, 2 - Indicator lamp,  
3 - BLIS symbol

## BLIS

BLIS is an information system which indicates whether there is another vehicle moving in the same direction in the so-called "blind spot".

### WARNING!

The system is a supplement to, and not a replacement for, the existing rearview mirrors. It can never replace the awareness and responsibility of the driver. The responsibility for changing lanes safely rests with the driver.

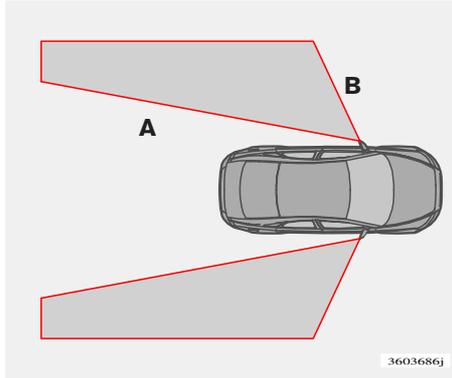

"Blind spots" covered by BLIS  
Distance A = approx. 9.5 m  
Distance B = approx. 3 m

The system is designed to work most effectively when driving in dense traffic on multi-lane highways. BLIS is based on digital camera technology. The cameras (1) are fitted under the door mirrors.

When a camera has detected a vehicle inside the blind spot zone then an indicator lamp is lit in the door panel (2). The light comes on with a constant glow to draw the driver's attention to a vehicle in the blind spot.

**NOTE!** The lamp comes on on the side of the car where the system has detected the vehicle. If the car is overtaken on both sides at the same time then both lamps come on.

BLIS also has an integrated function which warns the driver if a fault should arise in the system. If, for example, the system's cameras are obscured then the BLIS indicator lamp flashes and a message is shown in the dashboard display (see the table on page 115). In such cases, check and clean the lenses. If necessary, the system can be switched off temporarily by pressing the BLIS button (see page 114).

### When BLIS operates

The system operates when the car is driven at a speed above 10 km/h.

#### When you overtake another vehicle:

- The system reacts if you overtake another vehicle at a speed of up to 10 km/h faster than the other vehicle.

#### When you are overtaken by another vehicle:

- The system reacts if you are overtaken by a vehicle travelling up to 70 km/h faster than you are travelling.

### WARNING!

- BLIS does not work in sharp bends.
- BLIS does not work when the car is reversing.
- A wide trailer coupled to the car can conceal other vehicles in adjacent lanes. It can prevent the vehicle in the screened area from being detected by BLIS.

# BLIS (Blind Spot Information System)

## System function in daylight and darkness

### Daylight

In daylight the system reacts to the **shape** of the surrounding vehicles. The system is designed to detect motor vehicles such as cars, trucks, buses and motorcycles

### Darkness

In darkness the system reacts to the **headlamps** of surrounding vehicles. If its headlamps are not switched on then the system does not detect the vehicle. This means for example that the system does not react to a trailer without headlamps which is towed behind a car or truck.

## Cleaning

In order to work most effectively the BLIS camera lenses must be clean. The lenses can be cleaned with a soft cloth or damp sponge. Clean the lenses carefully so that they are not scratched.

## Important!

The lenses are electrically heated to melt ice or snow. If necessary, brush snow away from the lenses.



## WARNING!



- The system does not react to bicycles or mopeds.
- The BLIS cameras can be disrupted by intensive light or when driving in the dark when there are no light sources (e.g. street lighting or other vehicles). The system may then interpret the lack of light as if the cameras have been blocked.

In both cases a message is shown in the dashboard display.

When driving in such conditions the system can be temporarily switched off (see the information to the right).

When the text message has faded the system returns to full functionality.

- The BLIS cameras have the same limitations as the human eye, i.e. they "see" worse in heavy snowfall or thick fog for example.

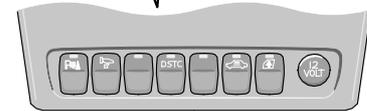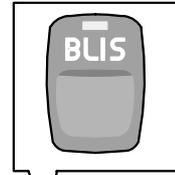

3603682r

## Deactivating and reactivating BLIS

- BLIS is activated automatically each time the ignition is switched on. The indicator lamps in the door panels flash three times when the ignition is switched on.
- The system can be switched off by pressing the BLIS button in the switch panel in the centre console (see illustration above). The LED in the button goes out when the system is switched off and a text message is shown in the dashboard display.
- BLIS can be reactivated by pressing the button. An LED in the button then lights, a new text message is shown in the display and the indicator lamps in the door panels flash three times. Press the READ button, see page 37, to clear the text message.

**BLIS system messages**

<b>System status</b>	<b>Text in the display</b>
BLIS system not functioning	BLIND-SPOT SYST SERVICE REQUIRED
Right-hand camera blocked	BLIND-SPOT SYST R CAMERA BLOCKED
Left-hand camera blocked	BLIND-SPOT SYST L CAMERA BLOCKED
Both cameras blocked	BLIND-SPOT SYST CAMERAS BLOCKED
BLIS system off	BLIND-SPOT INFO SYSTEM OFF
BLIS system on	BLIND-SPOT INFO SYSTEM ON
BLIS function reduced	BLIS FUNCTION REDUCED

The messages above are only shown if the ignition key is in position II (or if the engine is running) and BLIS is active (i.e. if the driver has not switched off the system).



---

---

## Wheels and tyres

General about wheels and tyres	118
Tyre pressures	120
Wear, Changing the tyres, Spare wheel	121
Changing wheels	122

### General wheels and tyres

All tyres have a dimension designation, such as 215/55R16 93W.

These tyre size designations, which are used by all tyre manufacturers, can be interpreted as follows:


215	section width (mm)
55	relationship between the section height and breadth (%)
R	means radial tyre
16	wheel rim diameter in inches (")
93	code digits for maximum permissible tyre load, in this case 650 kg
W	specifies that the tyre is manufactured for speeds up to 270 km/h (167 mph)

Your car is fully approved, which means that you may not deviate from those dimensions and performance ratings indicated in the vehicle registration. The only exception from these regulations concerns winter tyres and studded tyres, which may have different dimensions and a different speed rating than indicated in the registration. If you select tyres with different dimensions, do not drive at speeds faster than those permitted. The most common speed ratings are indicated in the following table:

Note: maximum permissible speeds indicated.

Q	160 km/h, used most often with studded tyres
T	190 km/h
H	210 km/h
V	240 km/h
W	270 km/h

When you change tyres: be sure to use the same type (radial), dimension, designation, and brand on all four wheels. Otherwise, there is a risk that the handling characteristics of the car could change. Check with your dealer regarding dimensions which are available for your car. Keep in mind that the road surface can determine how fast you may drive, not the tyre speed rating.

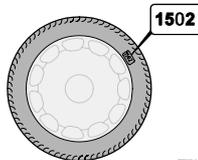

### New tyres

Bear in mind that tyres are perishable goods - after a few years they begin to harden while their friction properties deteriorate little by little. Try to use fresh tyres when changing.

This is especially important for winter tyres. The week and year of manufacture is indicated with 4 digits (e.g. 1502 indicates tyres manufactured week 15, 2002).

### Tyre age

All tyres older than six years should be checked by an expert even if they seem undamaged. The reason for this is that tyres age and decompose, even if they are hardly ever or never used. The function can therefore be affected due to the tyre's constituent materials being broken down, and it should then not be used.

This also applies to spare tyres, winter tyres and tyres saved for future use.

Examples of external signs which indicate that the tyre is unsuitable for use are cracks or discolouration.

The age of the tyre can be determined by the marking, see illustration.

## Winter tyres

We recommend the use of winter tyres, size 195/65 R15 except for cars with turbo engines. For these cars we recommend tyre size 205/55 R16.

**Always use winter tyres on all four wheels!**

**NOTE!** Always consult your Volvo dealer as to which wheel and tyre type is appropriate for your car.

### Studded winter tyres

Studded winter tyres should be run in for 500-1000 kilometres (300-600 miles), softly and gently so that the studs sit in the tyre correctly. This extends the service life of both the tyres and the studs while making the drive a bit quieter. Ensure that the studded tyres have the same direction of rotation throughout their lifetime. If you wish to shift wheels, see to it that they remain on the same side as previously. Please remember: The regulations for using studded tyres vary from country to country.

### Snow chains

Snow chains may only be used on the front wheels. This also applies to all-wheel drive cars. Avoid driving on bare surfaces unnecessarily as this generates much wear on both the snow chains and the tyres.

### Important!

Only Volvo-approved snow chains are permitted. Use of other snow chains could damage your car.


Never drive faster than 50 km/h when snow chains are fitted!

Never use "quick links" because the space between the disc brakes and the wheels is too small.

## Locking wheel bolts

Locking wheel bolts can be used on both aluminium and steel rims. If steel rims with locking wheel bolts are used in combination with wheel covers then the locking wheel bolts must be fitted furthest from the air valve. Otherwise the wheel cover cannot be fitted on the rim.

# Tyre pressures

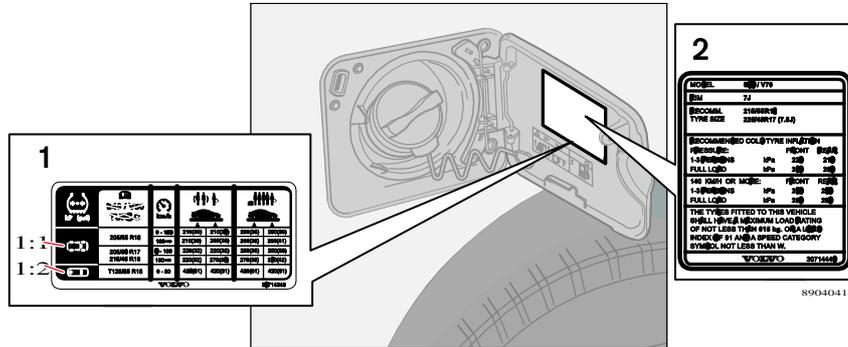

- Other markets (not USA, Canada)
  - 1:1. Volvo original tyre
  - 1:2. Spare tyre
- Australia

## Driving characteristics and tyres

Tyres affect driving characteristics greatly. Tyre type, size and pressure are important to how the car performs. When you change tyres, be sure to use the same type, size and brand on all four wheels. Follow the recommendations regarding tyre pressure.

## The tyre pressure is important!

Check the tyre pressure regularly. The correct pressure is listed in the adjacent table and on the decal on the inside of the fuel filler flap.

**If you drive with tyres at the wrong pressure, the car's handling will be markedly impaired and tyre wear will increase.**

Note that the values in the table refer to cold tyres (outside temperature). Tyres get warm and pressure increases after just a few kilometres driving. This is normal, so do not let out air if you check the pressure when the tyres are warm. However, you should increase pressure if it is too low.

Remember that tyre pressure can vary depending on exterior temperature. Therefore check the tyres outdoors when the tyres are cold.

## Tyre pressure table


The tyre pressure decal on the inside of the fuel filler flap shows what pressure the tyres should have with different load and speed conditions.

### WARNING!

The only Volvo approved "special wheel rims" are those tested by Volvo and are **Volvo Genuine accessories**.

## Tyres with tread wear indicators

Tread wear indicators are narrow, raised areas across the tread that have approximately 1.6 mm less tread depth than the remainder of the tyre (the letters TWI are on the side of the tyre). When this bar is visible, only 1.6 mm of tread remains and the tyre should be replaced **immediately**. Bear in mind that road grip and the tyre's ability to push water out of the way is already affected markedly when there is 3-4 mm of remaining tread.

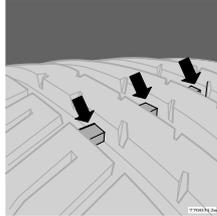

## Changing the tyres - summer/winter

When you change between summer and winter tyres; mark on the tyre which side they were fitted: For example, L = left, R = right.

**NOTE!** Tyres should have the same direction of rotation throughout their life. Tyres with tread designs that are made to roll only in one direction, have the direction of rotation marked with an arrow on the tyre. If the tyres are fitted incorrectly this will impair the car's braking characteristics and the ability to disperse rain, snow and slush.

### **IMPORTANT!**

Tyres with the greatest tread depth should always - irrespective of rear or front wheel drive - be fitted at the rear.

Contact your closest Volvo dealer to check if you are unsure.

## Storage

Wheels should be stored horizontally or suspended, not vertically.

## Spare wheel “Temporary Spare” (certain variants and markets)

The “Temporary Spare” should only be used for the short time it takes to repair or replace the normal tyre.


**By law it is only legal to temporarily use the spare wheel/tyre in connection with tyre damage. A wheel/tyre of this type should therefore be replaced by a normal wheel/tyre.**

Bear in mind that this tyre combined with the other normal tyres may cause different driving characteristics.


**The maximum speed with a “Temporary Spare” is therefore 80 km/h (50 mph).**

**NOTE!** Only use the car's original spare wheel! Tyres of other dimensions may damage your car. Only **one** spare wheel may be used at a time.


## Changing wheels

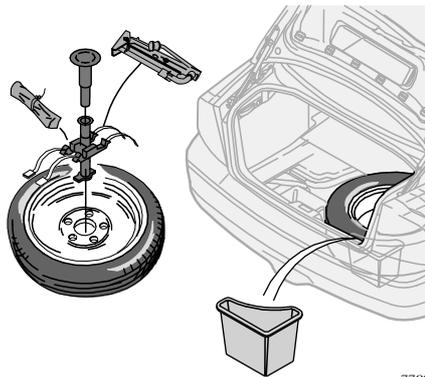

770K

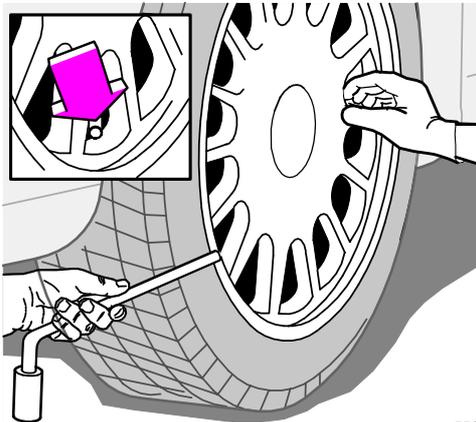

7700

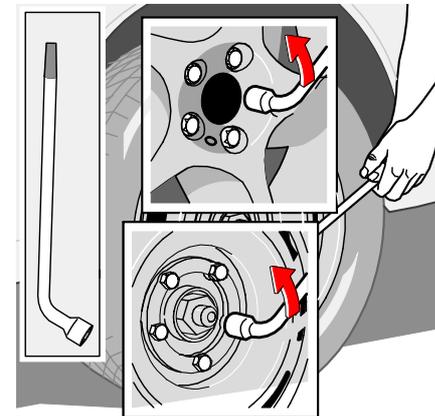


7700401r

*Remove wheel studs*

**The spare wheel is stored under the carpet in the cargo compartment.**

Remember to set out the warning triangle.

- Apply the parking brake and put into first gear on cars with manual transmission - position P on cars with automatic transmission. Put chocks in front and behind of the wheels that are to remain on the ground.
- Cars with **steel wheel rims** have removable wheel covers. Prise off the wheel cover with a thick screwdriver or the like. If tools are not available, the wheel cover can be prised off by hand. Use protective gloves. When you reinstall the wheel covers: ensure that the wheel cover valve hole is opposite the wheels air valve.
- Cars with aluminum rims with a cover: remove the cover using the socket wrench.
- Loosen the wheel nuts 1/2-1 with the socket wrench. The nuts are loosened by turning anticlockwise. There are two jacking points on each side of the car. The jacking points are marked on the door sill trims.

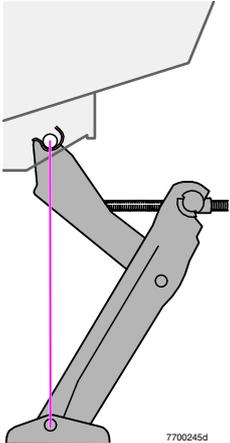

7700245d



7700244d

*The jack should be located so*

- Hold the jack against the pin in the jacking point as illustrated and wind down the jack foot so that it is pressed **flat against the ground**.
- **Check again that the jack is mounted correctly according to illustration and that the foot is positioned vertically under mounting.**
- Lift the car so that the wheel is free.
- Remove the wheel studs and lift off the wheel.

## **WARNING!**

- **Never crawl under the car when it is raised on a jack!**
- The car and the jack should be on a solid **horizontal** surface.
- The car original jack should be used for wheel changing. All other work on the car should be carried out using workshop jacks and axle stands under the part of the car which is raised.
- Apply the parking brake, put into 1st gear or back up (reverse) on manual transmission and position P on the automatic transmission.
- Put chocks in front of and behind the wheels to remain on the ground.
- Use large wooden blocks or large stones.
- The jack screw should be kept well lubricated.

## Fitting

- Clean the contact surfaces on the wheel and hub.
- Mount the wheel and tighten the wheel bolts.
- Lower the car so that the wheels cannot rotate. Tighten the wheel studs crosswise and in torque steps. Tightening torques: 140 Nm (14.0 kpm). It is important that they are tightened to the correct torque. Tightening should be checked with a torque wrench.
- Fit the hub cap.
- Screw the jack together before returning it to the cargo compartment.
- Ensure that the jack and tool kit are properly secured and do not cause any rattling.




---

---

## Fuses, bulb replacement

Fuses	126
Relay/fuse box in the engine compartment	127
Fuses in the passenger compartment at dashboard end on driver's side	128
Fuses in the passenger compartment within the sound barrier on the driver's side	129
Fuses in the cargo compartment	130
Bulb replacement	131

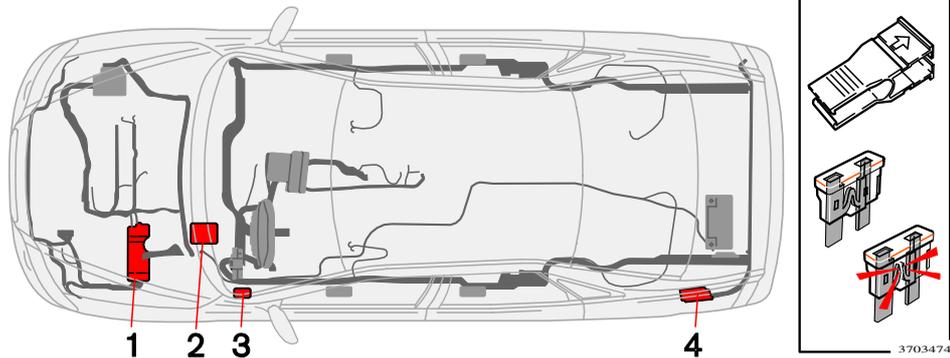

All electrical functions and components are protected with a number of fuses to protect your car's electrical system from damage by short-circuits or overloads.

Fuses are housed in four different locations in the car:

1. Relay/fuse box in the engine compartment.
2. Fuse box in the passenger compartment within the sound barrier on the driver's side.
3. Fuse box in the passenger compartment at dashboard end on driver's side.
4. Fuse box in the cargo compartment.




If an electrical component or function does not operate it may be because the component fuse was temporarily overloaded and burned out. Look in the fuse diagram to locate the affected fuse. Pull out the fuse and look at it from the side to see if the curved wire is burned out. Replace with a new fuse of the same colour and ampere designation.

There are a number of spare fuses in the cover on the end of the dashboard. There are also pliers to assist you in pulling out and replacing the fuses.

If the same fuse burns out repeatedly, there is a fault in the component, and you should visit your Volvo workshop to have it checked.

**Fuses in the engine compartment**


This fuse box contains 24 fuse positions. Be sure to replace a blown fuse with a new fuse of the same colour and amperage. There are also a number of spare fuses.

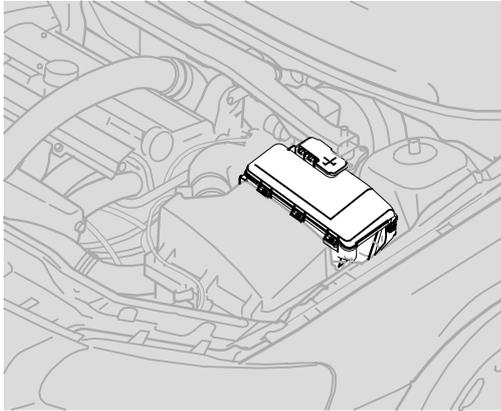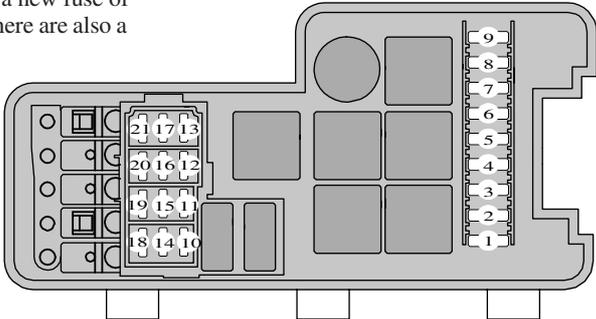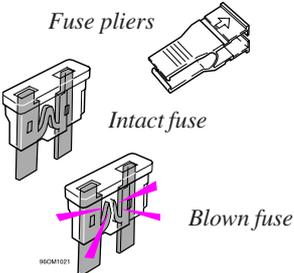

3703757m

No	Ampere rating	
1.	ABS .....	30
2.	ABS .....	30
3.	– .....	–
4.	Parking heater (option) .....	25
5.	Auxiliary lamps (option) .....	20
6.	Starter motor relay .....	35
7.	Windscreen wipers .....	25
8.	– .....	–
9.	Fuel pump .....	15
10.	Ignition coils (petrol), engine control module (ECM), injection valves (diesel), fuel pressure regulator .....	20
11.	Accelerator pedal sensor (APM), AC compressor, electronics box fan .....	10
12.	Engine control module (ECM) (petrol), injection valves, (petrol), mass air flow sensor (petrol) .....	15
	mass air flow sensor (diesel) .....	5
13.	Electronic throttle module (ETM), solenoid valve .....	10
14.	Lambda-sond (petrol) .....	20
15.	Crankcase ventilation heater, solenoid valves, glow plugs (diesel) coil .....	10
16.	Dipped beam (left) .....	20
17.	Dipped beam (right) .....	20
18.	– .....	–
19.	Engine control module (ECM) supply (petrol), engine relay .....	5
20.	Position lamps .....	15
21.	– .....	–

# Fuses in the passenger compartment at dashboard end on driver's side

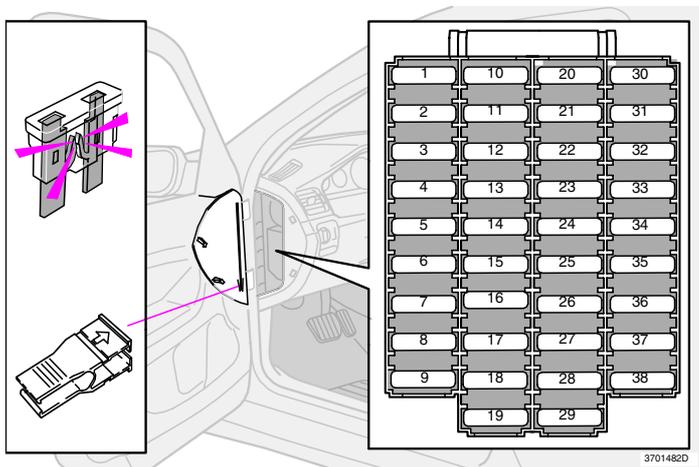

3701482D

VOLVO			
1	25A	10	20A
2	25A	11	30A
3	30A	12	10A
4	25A	13	6A
5	25A	14	-
6	10A	15	-
7	15A	16	-
8	7,5A	17	-
9	5A	18	-
		19	-
		20	-
		21	-
		22	-
		23	-
		24	-
		25	-
		26	-
		27	-
		28	-
		29	-
		30	-
		31	-
		32	-
		33	-
		34	-
		35	-
		36	-
		37	-
		38	-

1 POWER SEAT DRIVER  
 2 POWER SEAT PASSENGER  
 3 CLIMATE CONTROL FAN  
 4 FRONT DOOR MODULE RH  
 5 FRONT DOOR MODULE LH  
 6 INTERIOR LIGHT, REAR VIEW MIRROR, RAIN SENSOR  
 7 SUNROOF  
 8 IGNITION SWITCH, SRS ENGINE CONTROL MODULE PASSENGER AIRBAG ON/OFF SWITCH, IMMOBILIZER  
 9 OBD II, LIGHT SWITCH MODULE DETO/STEERING WHEEL MODULE  
 10 AUDIO  
 11 AMPLIFIER  
 12 RTI DISPLAY  
 13 TELEPHONE  
 14 -  
 15 -  
 16 -  
 17 -  
 18 -  
 19 -

ADDITIONAL INFORMATION SEE OWNERS MANUAL  
 INFORMATION ADDITION VOIR MANUEL UTILIS.

8904037I



*Decal located in the end box cover. Indicates positions and amperages*

This fuse box contains 38 fuse positions. Fuses are located inside the access panel on the end face of the dashboard. There are also a number of spare fuses.

No	Ampere rating
1.	Power driver's seat ..... 25
2.	Power passenger seat ..... 25
3.	Climate control system fan ..... 30
4.	Control module, right front door ..... 25
5.	Control module, left front door ..... 25
6.	General lighting, ceiling (RCM), Upper Electronic Module (UEM) ..... 10
7.	Sunroof ..... 15
8.	Ignition switch, SRS system, Engine Control Module (ECM), SRS deactivation on passenger side (PACOS), immobilizer (IMMO) ..... 7,5
9.	OBDII, light switch (LSM), Steering Angle Sensor (SAS), Steering Wheel Module (SWM) ..... 5
10.	Audio ..... 20
11.	Amplifier ..... 30
12.	RTI display ..... 10
13.	Telephone ..... 5
14 - 38	- ..... -

## Fuses in the passenger compartment within the sound barrier on the driver's side

This fuse box contains 36 fuse positions. The fuses are located within the sound barrier on the left-hand side. Be sure to replace a blown fuse with a new fuse of the same colour and amperage. Several spare fuses are found here as well.

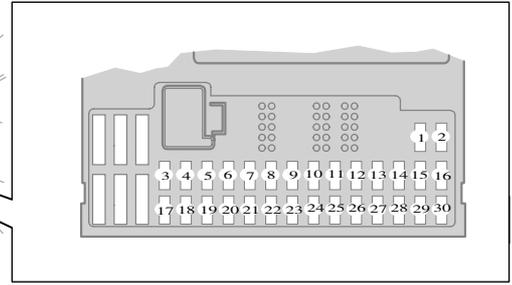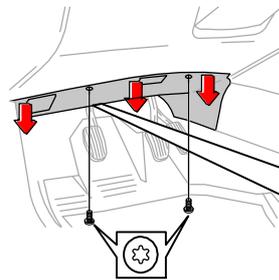



3703457r

No	Ampere rating		
1.	Seat heating, right side	15	
2.	Seat heating, left side	15	
3.	Horn	15	
4.	–	–	
5.	–	–	
6.	Reserve	–	
7.	Reserve	–	
8.	Alarm siren	5	
9.	Brake lamp switch feed	5	
10.	Combined instrument panel (DIM), climate control (CCM), parking heater, power driver's seat	10	
11.	Front and rear seat socket	15	
12.	–	–	
13.	Reserve	–	
14.	Headlamp wipers	15	
15.	ABS, STC/DSTC	5	
16.	Bi-fuel, Electronically Controlled Power Steering (ECPS), Bi-Xenon, headlamp levelling	10	
17.	Fog lamp, front left	7,5	
18.	Fog lamp, front right	7,5	
19.	Reserve	–	
20.	Reserve	–	
21.	Transmission Control Module (TCM), reverse gear inhibitor (M66)	10	
22.	Main beam, left	10	
23.	Main beam, right	10	
24.	–	–	
25.	–	–	
26.	Reserve	–	
27.	Reserve	–	
28.	Power passenger seat, audio	5	
29.	Reserve	–	
30.	BLIS	5	
31.	Reserve	–	
32.	Reserve	–	
33.	Vacuum pump	20	
34.	Washer pump, headlamp wipers	15	
35.	–	–	
36.	–	–	

## Fuses in the cargo compartment

The fuses are located behind the upholstery on the left-hand side. Be sure to replace a blown fuse with a new fuse of the same colour and amperage.


No	Ampere rating		
1.	Reversing lamp .....	10	19. Foldable head restraint .....
2.	Parking lamps, fog lamps, cargo compartment lighting, numberplate lighting, LEDs in brake lighting .....	20	20. Towing bracket wiring (15-feed) .....
3.	Accessories (AEM) .....	15	21. Reserve .....
4.	Reserve .....	–	22. – .....
5.	REM electronics .....	10	23. AWD .....
6.	CD changer, TV, RTI .....	7,5	24. Four-C SUM .....
7.	Towing bracket wiring (30-feed) .....	15	25. – .....
8.	Cargo compartment socket .....	15	26. Parking assistance .....
9.	Rear right door: power window, power window lock .....	20	27. Main fuse: towing bracket wiring, Four-C, parking assistance .....
10.	Rear left door: power window, power window lock .....	20	28. Central locking system (PCL) .....
11.	Reserve .....	–	29. Trailer lighting, left: parking lamp, direction indicator .....
12.	Reserve .....	–	30. Trailer lighting, right: brake lamp, fog lamp, direction indicator .....
13.	Diesel filter heater .....	15	31. Main fuse: Fuse 37, 38 .....
14.	– .....	–	32. – .....
15.	Reserve .....	–	33. – .....
16.	Reserve .....	–	34. – .....
17.	Audio accessories .....	5	35. – .....
18.	Reserve .....	–	36. – .....
			37. Rear window defroster .....
			38. Rear window defroster .....

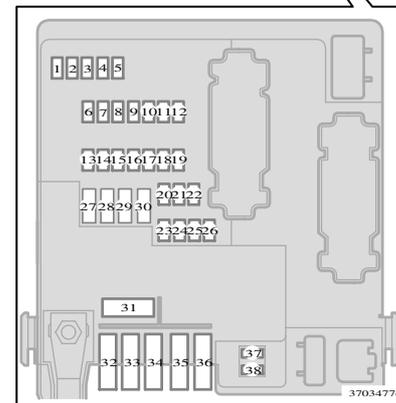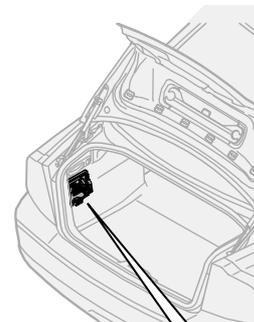

## General

All bulb specifications are found on page 166. The following list contains bulbs and point-source lamps that are specialised or unsuitable for changing except by a workshop:

- General interior lighting in the ceiling
- Ceiling lighting
- Reading lamps
- Glovebox lighting
- Direction indicators in the door mirrors
- Approach lighting in the door mirrors
- High-level brake light
- Bi-Xenon headlamps

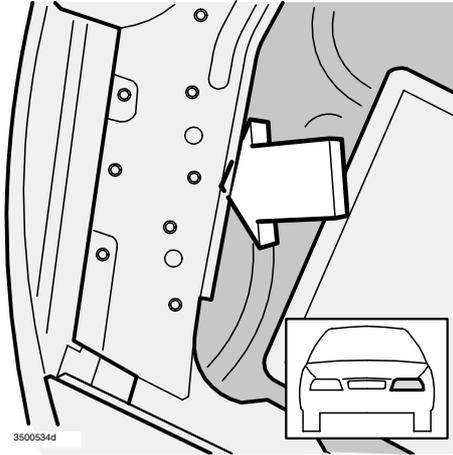

### Important!



Never touch the bulb glass with your fingers. Grease and oils from your fingers are vaporised by the heat, coating and damaging the reflector.

### ⚠ WARNING!

On cars with Bi-Xenon headlamps, all work on the lights should be carried out by an authorised Volvo workshop.

Bi-Xenon headlamps must be handled with extreme care due to the high-voltage unit.

## Replacing bulbs

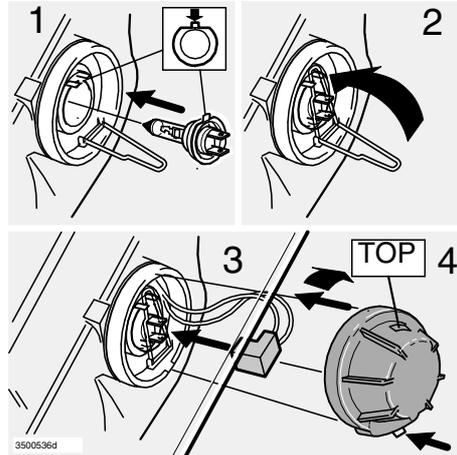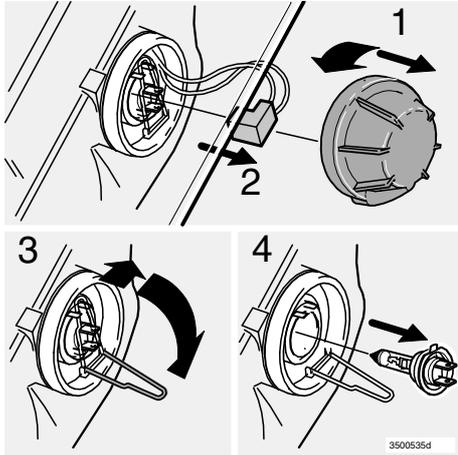


### Dipped and main beam

Replace headlamp bulbs from the engine compartment.


- Switch off all lights and turn ignition key to position 0!
- Open the bonnet.
- Remove the cover by twisting anticlockwise (1).
- Pull off the connector (2).
- Disconnect the spring clamp. First push to the right so that the spring disconnects and then out and down (3).
- Pull the bulb out and replace with a new one (4).
- Replace the bulb (1). It can only be fitted in one position.

- Press the clamp spring upwards and a little to the left so that it secures in its catch (2).
- Press the connector back into place (3).
- Screw the cover back into place; "TOP" should be upwards (4)!

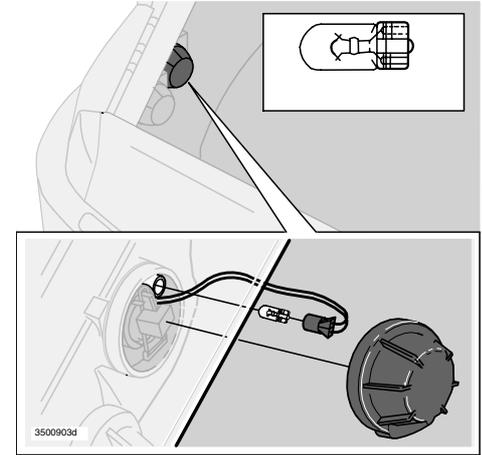


### Front position/parking lamp\*

- Switch off all lights and turn ignition key to position 0.
- Remove the main headlight cover by turning it anticlockwise.
- Pull out the bulb and its socket. Replace the bulb.
- Press the bulb and its socket back into place.
- Check that the new bulb lights.
- Screw the cover back into place; "TOP" should be up!

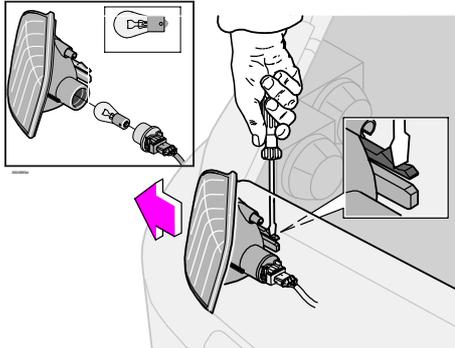

## Replacing bulb in front corner

- Switch off all lights and turn ignition key to position 0.
- Using a screw driver, press the guide lug and pull out the entire lamp housing.
- Press down the spring clip and undo the connector from the lamp housing.
- Twist the bulb holder anticlockwise and remove it.
- Press the bulb inwards, turn it anticlockwise and remove it from the bulb holder.
- Replace with a new bulb and refit the bulb holder in the lamp housing.
- Press the connector back onto the lamp holder.
- Switch on the ignition and check that the new bulb lights.
- Press the lamp housing home and check that it is seated securely.

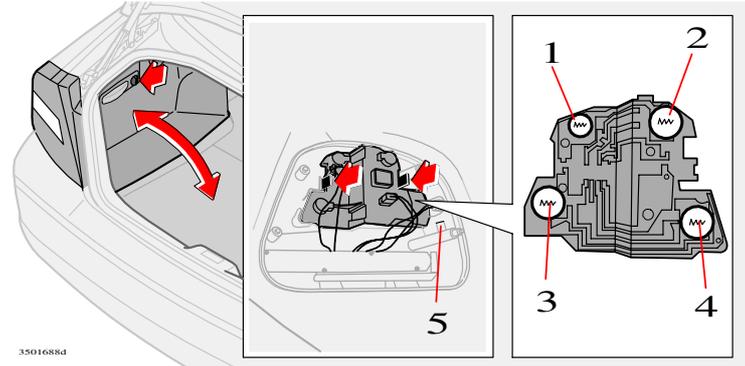

3501688d

## Replacing bulbs in the rear lamp cluster

All bulbs in the rear lamp cluster can be replaced from inside the cargo compartment.

- Switch off all lights and turn ignition key to position 0.
- Unlock and fold down the side panel inwards to allow access to the bulbs. On the right-hand side, it is easier to access the bulbs if you first extend the load curtain as much as possible.

The bulbs are located in a removable lamp holder which is secured with two locking pins. To replace bulbs in the lamp holder:

- Press the locking pins towards one another in order to remove the lamp holder from the lamp housing.
- Replace the bulb.
- Press back the lamp holder.
- Close and secure the side panel.

*Left-hand rear edge of car*


### Location of bulbs in rear lamp cluster

1. Position lamp
2. Position/Parking lamp/  
Foglampbulb
3. Position
4. Reversing lamp
5. Position (side marker) light

**NOTE!** If the error message "LAMP FAULT" / "CHECK BRAKE LIGHT" remains after a faulty bulb has been replaced then an authorised Volvo workshop needs to be consulted to rectify the fault.

**NOTE!** LED brake light bulbs should be replaced at a Volvo workshop.


## Replacing bulbs

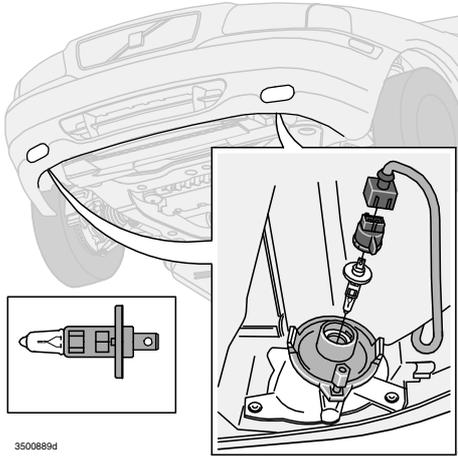

### Replacing front fog lamp bulb


**NOTE!** Never touch the bulb glass with your fingers.

- Switch off the lights and turn the ignition key to position 0.
- Turn the bulb holder a little anticlockwise.
- Remove the bulb and replace with a new.
- Refit the bulb holder. (The profile on the bulb holder aligns with the profile on the base of the lamp).
- Replace the bulb holder by turning a little clockwise. The marking "TOP" on the headlamp cover should be upwards!

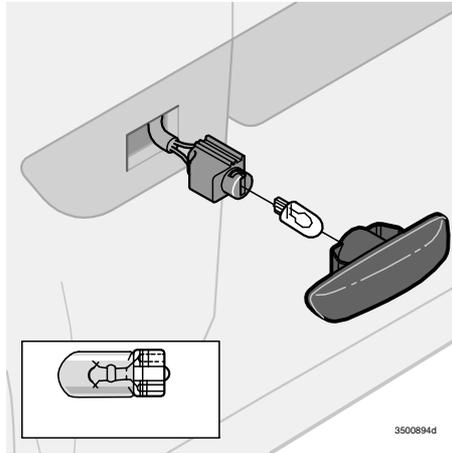


### Replacing side direction indicator bulb

- Open the front door halfway.
- Insert your hand behind the front wing and press out the lamp. Allow the cables to remain in the bulb holder.
- Twist the bulb holder 1/4 turn anticlockwise and pull straight out.
- Pull the defective bulb straight out.
- Replace the bulb and press the lamp straight in.

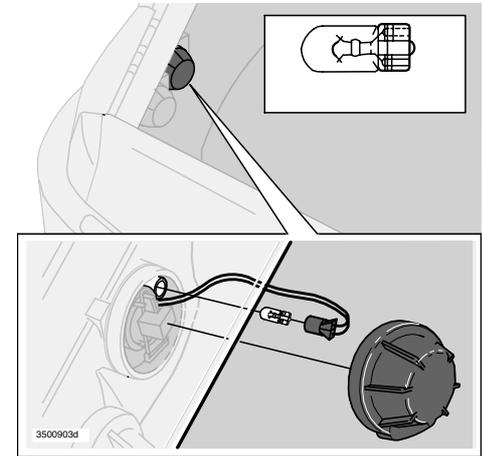


### Replacing position/parking lamp bulb

- Switch off all lights and turn ignition key to position 0.
- Remove the main headlight cover by turning it anticlockwise.
- Pull out the bulb and its socket. Replace the bulb.
- Press the bulb and its socket back into place.
- Check that the new bulb lights.
- Screw the cover back into place; "TOP" should be up!

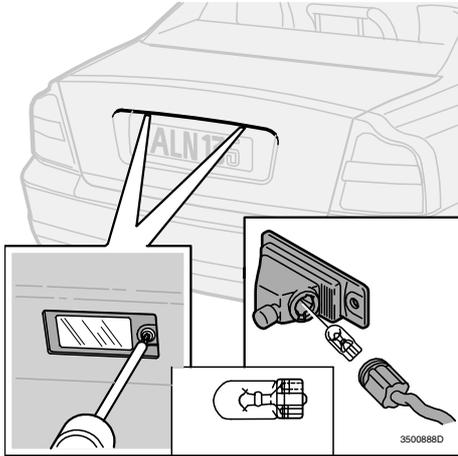

## Replacing numberplate lighting bulb


- Switch off the lights and turn the ignition key to position 0!
- Remove the screw with a screwdriver.
- Loosen the whole lamp housing carefully and pull it out.
- Turn the connector anticlockwise and pull out the bulb.
- Replace bulb.
- Reinstall the connector and turn it clockwise.
- Reinstall and screw the whole lamp housing into place.

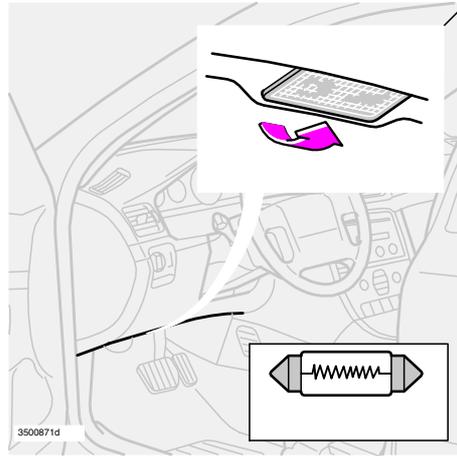

## Replacing courtesy lighting bulb - front door

The courtesy lighting is under the dashboard on the driver's and passenger sides. Carry out the following to replace:



- Insert a screwdriver and twist lightly so that the lamp housing loosens.
- Remove the faulty bulb and install a new bulb.
- Check that lamp lights and reinstall the lamp housing.

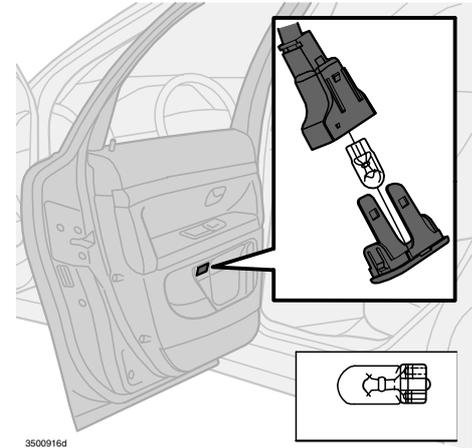


## Replacing courtesy lighting bulb - rear door

- Insert a screwdriver and twist lightly so that the lamp housing loosens.
- Undo the cable from the lamp housing and then remove the glass from the lamp housing by pressing the two side clips outward.
- Pull out the old bulb and fit a new one.
- Refit in the reverse order.

## Replacing bulbs

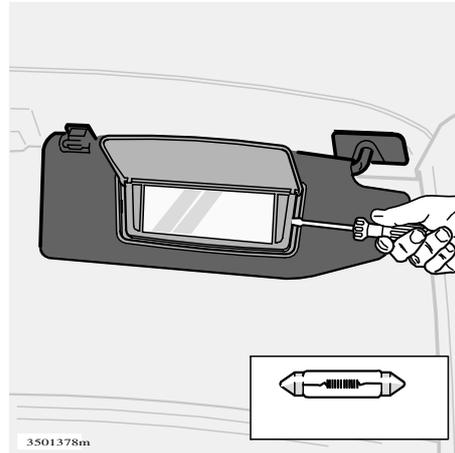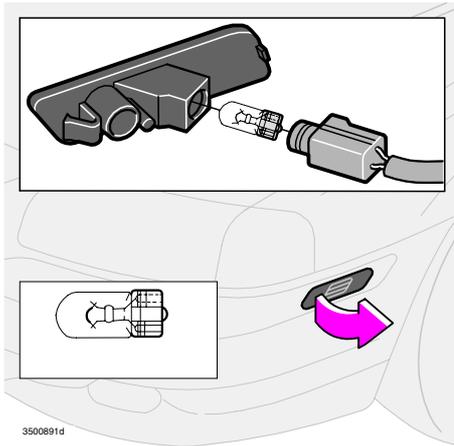

*Insert screwdriver and turn carefully*

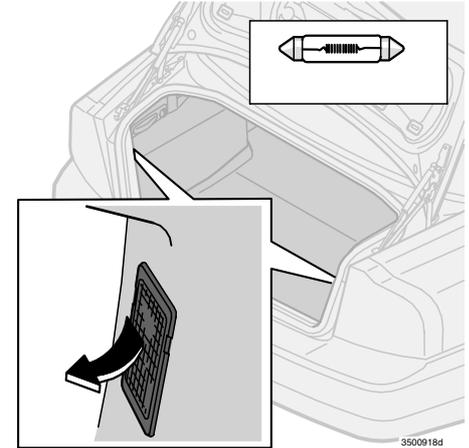

### Replacing side marker bulb

- Press the entire lamp insert backwards and remove.
- Try if possible to remove the lamp insert with your fingers. Otherwise, use a plastic or wooden tool so as not to damage the paintwork.
- Turn the lamp holder anticlockwise and remove.
- Install a new bulb.
- Insert the lamp holder and turn it clockwise.
- Refit the lamp insert by pressing it into place in the body.

### Replacing the make up-mirror bulb

- Insert a screwdriver and gently turn so that the glass loosens.
- Prise out the bulb and replace with a new one.
- Press the lamp glass back into place and make sure it is secured correctly.

### Replacing cargo compartment bulb

The lighting is to the left and right of the boot lid. Carry out the following to replace:

- Insert a screwdriver and twist lightly so that the lamp housing loosens.
- Remove the faulty bulb and install a new bulb.
- Check that the lamp lights and reinstall the lamp housing.

---

---

## Car care and Service

Rustproofing	138
Checking and repairing paintwork damage	139
Washing	140
Volvo Service	143
Bonnet, Engine Compartment	145
Diesel	147
Engine oil	148
Coolant	150
Brake fluid, Power steering, Windscreen washer fluid	151
Battery care	152
Replacing wiper blades	154

### Rustproofing - check and repair

Your Volvo received a very thorough and complete rustproofing at the factory. Areas that are extremely vulnerable, such as the underbody, have been sprayed with a thick, wear-resistant anti-corrosion compound on the outside. Members, cavities and enclosed sections are sprayed internally with a thin, penetrating rust inhibitor.

The car's rustproofing is maintained by doing the following:

- Keep the car clean! Wash chassis components\*, the underbody, and the inside and edges of wheel arches with a pressure washer. When high pressure washing - hold the spray nozzle at least 30 cm away from painted surfaces!
- Check and repair the rustproofing regularly.
  - \* Trailing arms, link arms, spring mountings and spring strut seats.

The car's rustproofing does not normally require treatment for approximately 8 years. After that time, it should be treated at three year intervals. If your car requires treatment, consult your Volvo workshop.

### Improving

If you want to repair the rustproofing yourself, make sure the area is clean and dry. Hose down, wash and dry the car thoroughly. Use a rustproofing agent in a spray can or one that is intended for brush application.

Two types of rustproofing agent are available:

- a) thin (colourless), for visible places
- b) thick, for areas prone to wear on the underbody and in the wheel arches

Possible repair areas with these agents:

- Visible welds and sheet metal joints - thin fluid
- Underbody and wheel arches - thick fluid
- Door hinges - thin fluid
- Bonnet hinges and catch - thin fluid

When you have finished treatment, excess rustproofing agent can be wiped off using a rag dampened with white spirit.

Parts of the engine and suspension strut mountings in the engine bay are treated at the works with a wax-based colourless rustproofing agent. This withstands normal detergents without dissolving and losing its rustproofing ability. On the other hand, if you wash the engine using aromatic solvents such as turpentine or white spirit (especially those which do not contain emulsifiers), the protective wax should be renewed after washing. Your Volvo dealer has such waxes in stock.

## Paint


Paint is an important part of the car's rustproofing and should therefore be checked regularly. Repair paintwork damage immediately so that it does not start to rust. The most common types of paintwork damage that you can repair yourself are:

- minor stone chips and scratches
- damage to wing edges and sills

**When repairing paintwork, the car should be clean and dry with a temperature above + 15 °C.**

## Colour code

Make sure you have the right colour. The colour code number is on the data plate in the engine compartment.

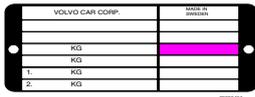

*Colour code*

## Minor stone chips and scratches



### Material:

- Primer in a can
- Paint in a can or a touch-up pen
- Brush
- Masking tape
- If the stone chip has not gone down to the bare metal and an unpainted colour coat remains, you can add paint immediately after removing dirt.

### Do as follows if the stone chip went down to the bare metal:

- Fasten a piece of masking tape over the damaged surface. Then remove the tape, removing any paint residue (illustration 1).
- Stir the primer thoroughly and apply using a fine brush or matchstick (illustration 2).
- When the primer is dry, apply the surface coat with a brush.
- Ensure that the paint is well stirred and apply several thin coats allowing it to dry between coats.
- The procedure is the same for scratches, but masking tape can be used to protect undamaged paintwork (illustration 3).
- Wait a day or so and then finish the repair by polishing. Use a soft rag and apply lapping paste sparingly.

*Remove any paint residue with tape*

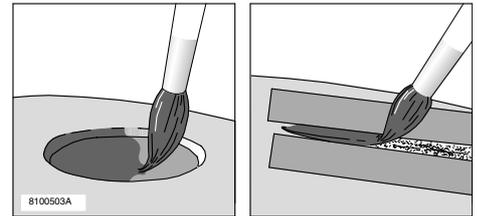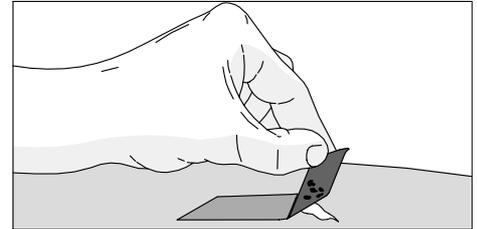

*Mask if necessary*

## Washing

### Wash the car frequently!

Wash the car as soon as it becomes dirty, especially in the winter when road salt and moisture can lead to corrosion.

Wash the car as follows:

- Thoroughly hose off the dirt on the car underbody (wheel arches, wing edges, etc.).
- Rinse the entire car to remove loose dirt.
- When using high pressure hose:  
Ensure that the high pressure hose nozzle does not come nearer than 30 cm from the bodywork. Do not spray directly at the locks.
- Wash with a sponge using a lot of water with or without detergent.
- You can use lukewarm (maximum 35 °C) but not hot water.
- If the dirt is ingrained, you can wash the car with cold degreasing agent, but then be sure that there is a drain separator where you are washing the car. When using cold degreasing agent, ensure that the car is not in direct sunlight or that the paint is warm from sunlight or a warm engine. Sunlight and heat can cause permanent damage. Consult your Volvo workshop.
- Dry the car with a clean, soft chamois.
- Clean the wiper blades with a lukewarm soap solution.

#### Suitable detergent:

Car shampoo.

#### Keep in mind the following:

Always wash off **bird droppings** from the paintwork as fast as possible.

Bird droppings contain chemicals that affect and discolour paintwork quickly. The discoloration cannot be polished off.

### Exterior plastic parts

A special cleaning agent, available from Volvo dealers, is recommended for cleaning exterior plastic parts. Never use strong stain removers.



#### WARNING!

**After washing: always test the braking** so that damp and corrosion do not affect the brake pads and impair the brakes! Depress the brake pedal lightly now and again when driving longer distances in the rain or slushy snow to warm up and dry the brake discs and pads. You should also do this when starting in very damp or cold weather conditions.



#### WARNING!

Do not wash the engine when it is still warm. Fire risk!

## **Automatic car wash**

An automatic car wash is a simple and fast way of washing the car. Remember that an automatic car wash can never replace a proper handwash.

The brushes of an automatic car wash do not reach all areas.

During the first months of the car's life it is recommended that you only handwash the car.

## **Polishing and waxing**

Polish and wax the car when you feel the paintwork is matte and when you wish to give the paintwork extra protection, such as before winter. The car does not usually need polishing until after one year. It can be waxed earlier.

Wash and dry the car thoroughly before you begin polishing and/or waxing. Clean away asphalt or tar splashes with Volvo asphalt remover or white spirit.

Stubborn marks can be removed with fine rubbing paste for car paintwork. First polish and then wax with liquid or solid wax. Carefully follow the instructions on the package. Many preparations contain both polish and wax.

Do not wax or polish in direct sunlight.

## **Cleaning the interior**

### **Treating spots on fabric upholstery**

A special cleaning agent, available from Volvo dealers, is recommended for cleaning the fabric upholstery. Other chemicals can impair the fire retardant qualities of the upholstery.

### **Treating spots on leather upholstery**

A special cleaning agent, available from Volvo dealers, is recommended when cleaning leather upholstery. Treat the leather upholstery once or twice a year using Volvo's leather care kit. Never use strong solvents. Such products may damage fabric, vinyl and leather upholstery.

### **Treating spots on interior plastic parts and surfaces**

A special cleaning agent, available from Volvo dealers, is recommended for cleaning interior plastic parts and surfaces. Do not scrape or rub spots. Never use strong stain removers.

## **Cleaning seat belts**

Use water and synthetic detergent. Special upholstery detergent is available from your Volvo dealer. Make sure the seat belt is dry before allowing it to retract.

### **IMPORTANT!**

Sharp objects and Velcro may damage the textile upholstery.

### **Cleaning door mirrors and front side windows with water-repellent coating (option)**

Never use products such as car wax, degreaser or similar on mirror/glass surfaces as this could ruin their water-repellent properties.

Take care when cleaning so as not to damage the glass surface.

To avoid damaging glass surfaces when removing ice, only use plastic ice scrapers.

There is natural wear of the water-repellent coating.

**NOTE!** Treatment with a special finishing agent available from Volvo dealers is recommended in order to maintain the water-repellent properties. This should be used first after three years and then each year.

## Volvo Service

Before the car left the factory, it was thoroughly test driven. It was checked again in accordance with Volvo Car Corporation regulations before it was handed over to you.

## Volvo service programme

In order for you to keep your Volvo at the highest level of traffic safety, driving safety and reliability you should follow the Volvo service programme which is specified in the Warranty and Service schedule. We advise you always to let a Volvo workshop carry out the servicing and repair work. Your Volvo workshop has the personnel, the special tools and the service literature which guarantees you the highest quality of service. Your Volvo workshop always uses Volvo Genuine parts. The Volvo Service schedule is developed for the normal motorist.

### **Important!**

For the Volvo warranty to apply, check and follow the instructions in the Service and Warranty Manual.

## Service or installation of accessories

Service or installation of accessories that affect the car's electrical system can only be carried out using electronic equipment specially developed for the car. It is therefore important that you always contact your Volvo workshop before beginning or carrying out service work that affects the electrical system.

## Recording vehicle data

One or more computers in your Volvo car can record detailed information. This information is intended for research purposes in order to further develop safety and to diagnose faults in certain systems. It can included data such as seat belt usage by the driver and front passenger, information on the function of different systems and modules in the car and information on the status of the engine, throttle control, steering, brake and other systems.

This information can contain data on the driver's driving style.

Such data can contain information including, but not limited to, vehicle speed, use of the brake or accelerator pedal and steering wheel manoeuvres. The latter data can be stored for a limited time while the car is driven and during the course of a collision or a near miss.

Volvo Car Corporation will not distribute this stored information without permission. Volvo Car Corporation may, however, be forced to provide this information if required by national legislation.

In general, Volvo Car Corporation and authorised workshops may read and use the information.

### **WARNING!**

The car ignition system has very high voltage!  
The voltage in the ignition system is dangerous!  
Do not touch spark plugs, ignition cables or the ignition coil when the engine is running or the ignition is switched on!

#### **The ignition should be switched off when:**

- Conducting engine tests.
- Replacing parts in the ignition system, such as spark plugs, ignition coil, distributor, ignition cables, etc.


### **Note the following before you begin working on your car:**

#### **Battery**

- Ensure that the battery cables are correctly connected and tightened.
- Never disconnect the battery when the engine is running (e.g. when replacing the battery).
- Never use a fast charger to charge the battery. The battery cables should be disconnected when recharging.

#### **Environmental care**


The battery contains acid that is both corrosive and poisonous. It is important that the battery is handled in an environmentally friendly way. Let your Volvo dealer assist you.

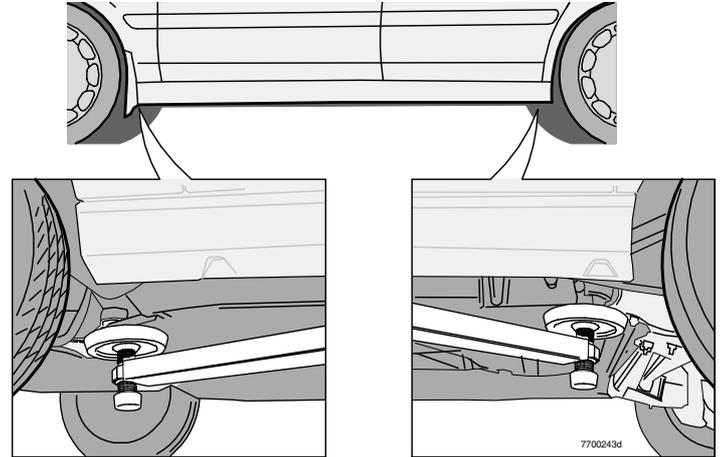


### **Lifting the car**

If the car is lifted with a workshop jack, it should sit with the front edge on the engine support arm. Do not damage the splashguard under the engine. Ensure that the jack is positioned so that the car cannot slide off the jack. Always use axle stands or the like.


If you lift the car using a two pillar workshop lift, ensure that the front and rear lift arms are fixed under the lifting points on the door sill. See the illustration.

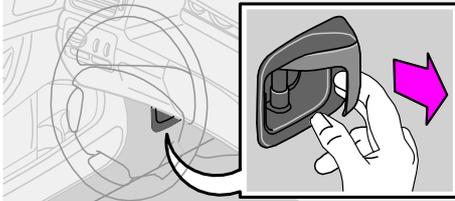

Pull the handle..

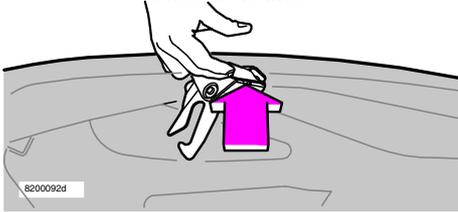

...press up and open

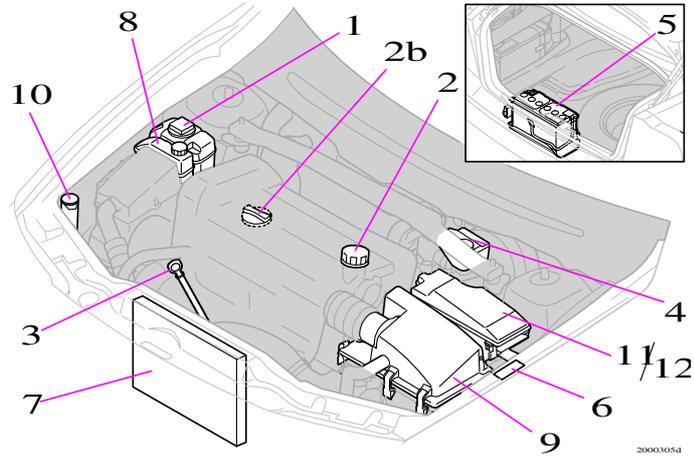

## Opening the bonnet

Pull the handle on the far left under the dashboard. You hear when the lock releases. Insert the hand in the centre of the front edge of the bonnet and press up the safety catch handle. Open the bonnet.

### **WARNING!**

Check that the bonnet lock properly when you close it!

## Engine compartment


- 1 Expansion tank, cooling system
- 2 Engine oil filler pipe
- 3 Engine oil dipstick
- 4 Clutch/brake fluid reservoir
- 5 Battery (in cargo compartment)
- 6 Data plate
- 7 Radiator
- 8 Power steering fluid reservoir
- 9 Air filter
- 10 Washer fluid reservoir
- 11 Main fuse box
- 12 Integrated relay/fuse box

### **WARNING!**


#### **Electric engine cooling fan:**

Cooling fan may continue running and can start itself after the engine is switched off!


## Bonnet, Engine compartment - right-hand drive

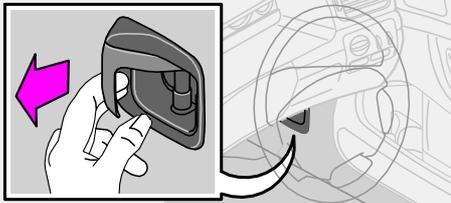

*Pull the handle...*

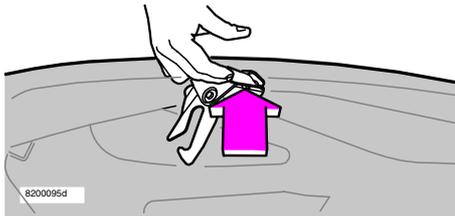

*..press up and open*

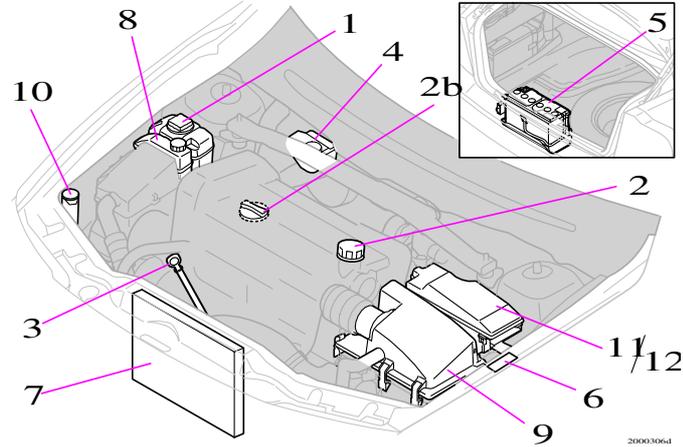

### Opening the bonnet

Pull the handle on the far right under the dashboard. You hear when the lock releases. Insert the hand in the centre of the front edge of the bonnet and press up the safety catch handle. Open the bonnet.

#### **WARNING!**

Check that the bonnet locks properly when you close it!

### Engine compartment

- 1 Expansion tank, cooling system
- 2 Engine oil filler pipe
- 3 Engine oil dipstick
- 4 Clutch/brake fluid reservoir
- 5 Battery (in cargo compartment)
- 6 Data plate
- 7 Radiator
- 8 Power steering fluid reservoir
- 9 Air filter
- 10 Washer fluid reservoir
- 11 Main fuse box
- 12 Integrated relay/fuse box

#### **WARNING!**

##### **Electric engine cooling fan:**

Cooling fan may continue running and can start itself after the engine is switched off!

## **Fuel system**

Only use diesel fuel from a well-known oil company that fulfils the requirements for recommended fuel grade as described on page 164. Never use diesel of doubtful quality. Special diesel fuel for winter use is available from large oil companies. This fuel is less viscous at low temperatures and reduces the risk of wax building up in the fuel system. Keeping the tank well filled reduces the risk of condensation in the tank.

During filling you should check that the area around the filler pipe is clean. If you do the refuelling from a tank of your own, you should filter the fuel.

Avoid spilling onto the paintwork. Wash off any spills with detergent and water.

## **Empty tank**

No special procedures are required if the tank runs dry. The fuel system is bled automatically if the ignition switch is kept in position **II** for approx. 60 seconds before the start attempt.


### **Important!**

Diesel type fuels which must not be used: special additives, Marine Diesel Fuel, fuel oil, RME (Rape Methyl Ester), vegetable oil.

These fuels do not fulfil the requirements of Volvo's recommendation and generate increased wear and engine damage that is not covered by the Volvo warranty.

## **Draining condensation water from fuel filter**

The fuel filter removes condensation, which could otherwise affect engine function, from the fuel. The fuel filter should be drained as specified in the Service and Warranty Book, and when you suspect that the car has been filled with contaminated fuel.

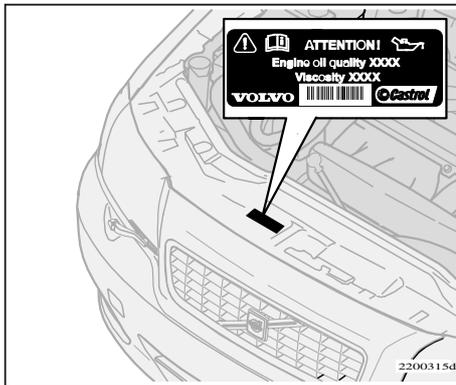

### Checking and changing the engine oil and oil filter

#### Important!

Always use oil of the prescribed grade, see engine compartment decal.

Check the oil level frequently and change the oil regularly.

The engine will be damaged if a lower than specified grade of oil is used or if the car is driven with the oil level too low.

Using oil of a higher grade is permitted. Volvo recommends using an oil of a higher grade than that specified on the decal for adverse driving conditions. See page 161.


### Adverse driving conditions

Check the oil level more frequently for long journeys:

- towing a caravan or trailer
- in mountainous regions
- at high speeds
- in temperatures colder than  $-30\text{ }^{\circ}\text{C}$  or hotter than  $+40\text{ }^{\circ}\text{C}$
- shorter driving distances (shorter than 10 km) at low temperatures (under  $5\text{ }^{\circ}\text{C}$ ). This may result in abnormally high oil temperature or oil consumption.

Change the oil and oil filter in accordance with the intervals specified in the Service and Warranty Booklet. When filling oil to top up a low oil level, the oil being filled must be of the same grade and viscosity as the oil in the engine.

Checking the oil level in a new car is especially important before the first scheduled oil change. The Service and Warranty Booklet specifies the odometer readings for oil changes. Volvo recommends checking the oil level every 2500 km. The most accurate measurements are made on a cold engine before starting. The measurement will be inaccurate if taken immediately after the engine is switched off. The dipstick will indicate that the level is too low because the oil has not had time to flow down into the oil sump.

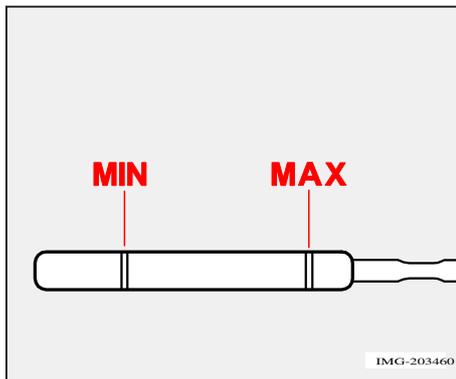

*The oil level must be within the area marked on the dipstick.*

- Wipe the dipstick clean before checking the level.
- Check the oil level using the dipstick. The oil level must be between the MIN and MAX marks.
- If the level is close to the MIN mark, start by topping up with 0.5 litres of oil. Top up until the oil level is nearer the MAX than the MIN mark on the dipstick. See 161-162 for volumes.

### Important!

Never fill above the MAX mark. Oil consumption may increase if too much oil is poured into the engine.



### WARNING!

Do not spill oil onto the hot exhaust manifold due to the risk of fire.

### Checking the oil in a cold engine:

- Wipe the dipstick clean before checking the level.
- Check the oil level using the dipstick. The oil level must be between the MIN and MAX marks.
- If the level is close to the MIN mark, start by topping up with 0.5 litres of oil. Top up until the oil level is nearer the MAX than the MIN mark on the dipstick. See page 161-162 for volumes.

### Checking the oil in a warm engine:

- Park the car on a level surface, switch off the engine and wait 10-15 minutes to give the oil time to run back down to the sump.

### Checking and topping up coolant

Follow the instructions on the packaging when topping up coolant. It is important that the mixture of coolant concentrate and water is correct for the prevailing weather conditions. Never top up with water only. The risk of freezing increases with both too little and too much coolant concentrate.

See capacities and recommended grade for fluids and oils on page 160.

#### **Important!**

Always use coolant with anti-corrosion agent as recommended by Volvo.

New cars are filled with coolant that can withstand temperatures down to approximately  $-35^{\circ}\text{C}$ .

#### **Check the coolant regularly**

The level should lie between the MIN and MAX marks on the expansion tank.

Top up with fluid when the level has fallen to the MIN mark.


#### **Important!**

The engine must only be run with a well-filled cooling system.

High temperatures can occur, causing a risk of damage (cracks) to the cylinder head.

#### **WARNING!**

The coolant may be very hot. If the coolant requires topping up when the engine is at operating temperature, unscrew the expansion tank cap slowly to gently release the overpressure.

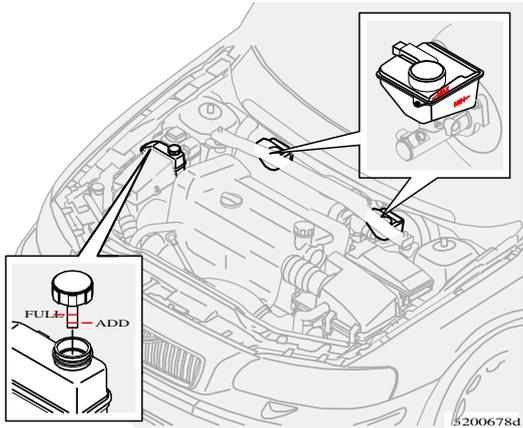

Power steering fluid reservoir

## Power steering fluid reservoir

Check the level at every service. It is not necessary to change the fluid. The level should lie between the ADD and FULL marks. See capacities and recommended grade for fluids and oils on page 160.

**NOTE!** If a fault occurs in the power steering (or if the car has no power and is to be towed) the car can still be steered. Remember that the steering will be much heavier than normal and more strength is required to turn the steering wheel.

Clutch and brake fluid reservoir

## WARNING!


If the level of brake fluid in the reservoir is below the MIN mark, the car should not be driven until the brake fluid has been topped up. The reason for the loss of brake fluid must be investigated.

## Clutch and brake fluid reservoir

The brake and clutch fluid have a common reservoir<sup>1</sup>. The fluid level must be between the MIN and MAX marks. Check the level regularly. Change the brake fluid every other year or at every other regular service. See capacities and recommended grade for fluids and oils on page 160.

**NOTE!** The fluid should be changed annually on cars which drive in conditions requiring hard and frequent braking, driving in mountains or tropical climates with high humidity.

<sup>1</sup> Location dependent on whether car is left or right-hand drive.

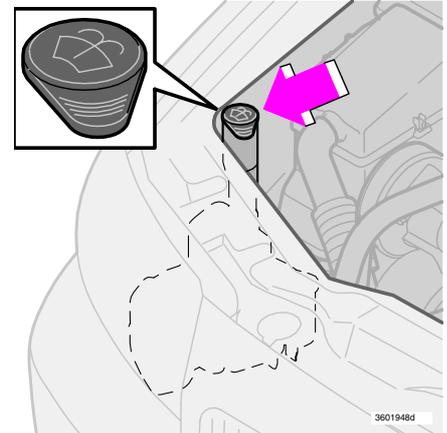


Washer fluid reservoir

## Washer fluid reservoir

The wipers for the windscreen and headlamps share the same fluid reservoir. See capacities and recommended grade for fluids and oils on page 160. Use washer fluid during the winter so that the fluid does not freeze in the pump, reservoir and hoses.

Tip: clean the wiper blades when topping up washer fluid.

## Battery care

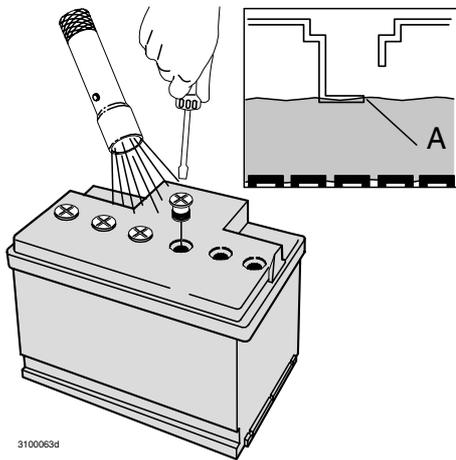

- Check all battery cells. Use a screwdriver to remove the caps. Each cell has its own maximum level mark.
- If necessary, top up with distilled water to the battery's maximum mark.
- Never fill above the maximum mark (A).

### Important!

Always use distilled or deionised water (battery).

- Tighten the caps properly.

**NOTE!** The life of the battery is shortened if it becomes discharged repeatedly.

## Battery care

The service life and function of the battery is influenced by factors such as the number of starts, discharging, driving style, driving conditions and climatic conditions. Repeated use of the parking heater and other great power consumers in combination with short trips can lead to battery discharge and thereby difficulty starting.

For the battery to function satisfactorily, consider the following:

- Regularly check that the battery fluid level is correct (A).

### ⚠ WARNING!

Batteries can generate oxyhydrogen gas, which is highly explosive.

One spark, which can be generated if you connect the jump leads incorrectly, is sufficient to make the battery explode.

The battery contains sulphuric acid, which can cause serious burns.

If the acid comes into contact with eyes, skin or clothing, flush with large quantities of water.

If acid splashes into the eyes, seek medical attention immediately.

## Symbols:



Use protective goggles.



Further information in the owner's manual.



Store the battery out of the reach of children.




The battery contains corrosive acid.



Avoid sparks and open flames.



Risk of explosion.

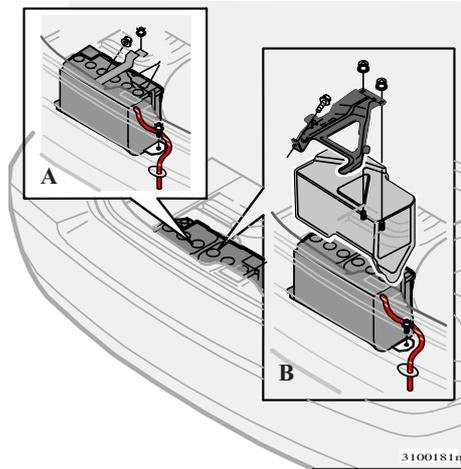

A. Battery without cover  
B. Battery with cover

## Replacing the battery

### Removing the battery:

- Switch off the ignition and remove the key.
- Wait at least 5 minutes before touching any electrical terminals. This allows time for the information in the car's electrical system to be stored in the control modules.
- Undo the screws from the lock brace over the battery and remove the brace.
- Bend up the plastic cover over the negative battery terminal or unscrew the cover from the battery.
- Disconnect the negative battery cable.
- Detach the lower console holding the battery.
- Bend aside the plastic cover and disconnect the positive cable.
- Remove the battery.


### Fitting the battery:

- Position the lower console and screw it in place.
- Position the lower console and screw it in place.
- Connect the positive cable, press in and fold
- Connect the negative cable, fold down the plastic cover.
- Fit the plastic cover or the cover over the battery.
- Make sure the evacuation hose is correctly connected to both the battery and the outlet in the bodywork.
- Fit the lock brace over the battery and tighten the screws.

### WARNING!

Batteries can generate oxyhydrogen gas, which is very dangerous. One spark, which can be generated if you connect the jump leads incorrectly, is sufficient to make the battery explode. The battery contains sulphuric acid, which can cause serious burns. If the acid comes into contact with eyes, skin or clothing, flush with large quantities of water. If acid splashes into the eyes, seek medical attention immediately.

## Replacing wiper blades

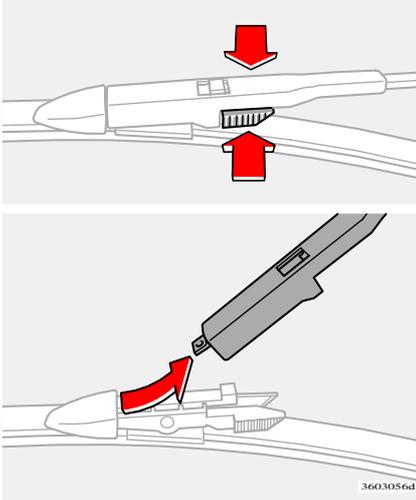

### Replacing windscreen wiper blades

- Fold out the wiper arm and hold the wiper blade.
- Push in the ribbed locking springs on the wiper blade while lifting it from the arm extension.
- Install the new blade following the instructions in reverse order and **check that the blade is properly secured.**

**NOTE!** Keep in mind that the wiper blade on the driver's side is longer than the blade on the passenger side.

---

---

# Specifications


Type designation	156
Dimensions and weights	157
Engine specifications	158
Capacities	160
Fuel	163
Catalytic converter and suspension	165
Electrical system	166

# Specifications

## Type designation

Whenever contacting your Volvo dealer and when ordering spare parts and accessories for your car, it makes things easier if you know your car's type designation, vehicle identification number and engine number.

1. Decal for parking heater.
2. Type and model year designation, and vehicle identification number.
3. Engine type designation, component and serial number.
4. Engine oil decal\* specifies oil grade and viscosity.
5. Gearbox type designation and serial number
  - a: Manual gearbox
  - b: Automatic gearbox AW.
6. Type designation, vehicle identification number, maximum permissible weights, codes for colour and upholstery and type approval number.

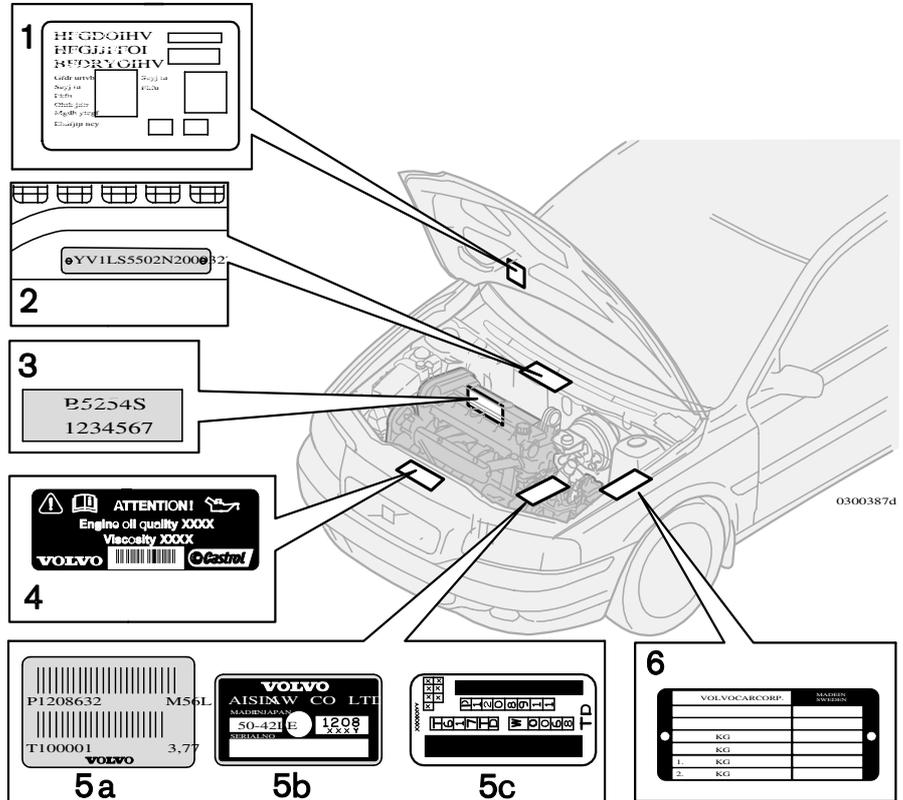

\* Certain engine variants

## Measurements

Length .....	482 cm
Width .....	183 cm
Height .....	145 cm
Wheelbase .....	279 cm
Front track .....	158 cm
Rear track .....	156 cm

## Weights

The kerb weight includes the driver, the fuel tank 90% full and all fluids. The weight of passengers and accessories, such as a towbar, towball load (when a trailer is hitched, see table), load carriers, and roof box, affect load capacity and must not be included in the kerb weight. Permitted weight (in addition to driver) = Gross vehicle weight - Kerb weight. For the location of the decal, see page 156.

1. Max. total weight
2. Max. train weight (car+trailer)
3. Max. front axle load
4. Max rear axle load

VOLVO CAR CORP.		VÅRDE PÅ SVENSKA	
	KG	1	
	KG	2	
1.	KG	3	
2.	KG	4	

Max load:	see registration papers
Max roof load:	100 kg
Maximum trailer weight:	1800 kg

### **Warning!**

The driving characteristics of the car change depending on how heavily it is loaded and how the load is distributed.

## Engine specifications

	2.0T	BIFUEL CNG	2.4	2.4	2.5T	2.4T
Engine variant	<b>B5204T5</b>	<b>B5244SG</b>	<b>B5244S</b>	<b>B5244S2</b>	<b>B5254T2</b>	<b>B5244T4<sup>a</sup></b>
Output* (kW/rps) AWD	132/92 -	103/97 -	125/98 -	103/75 -	154/83 -	162/83 -
(hp/rpm) AWD	180/5500 -	140/5800 -	170/6000 -	140/4500 -	210/5000 -	220/5000 -
Torque* (Nm/rps) AWD	240/30-83 -	192/75 -	225/75 -	220/55 -	320/25-75 -	285/33-83 -
(kpm/rpm) AWD	24.5/1850-5000 -	19.6/4500 -	23.0/4500 -	22.5/3300 -	32.6/1500-4500 -	35.7/2100-4000 -
No. of cylinders	5	5	5	5	5	5
Bore (mm)	81	83	83	83	83	83
Stroke (mm)	77	90	90	90	93,2	90
Cylinder displacement (dm <sup>3</sup> (l))	1.98	2.44	2.44	2.44	2.52	2.44
Compression ratio	9.5:1	10.3:1	10.3:1	10.3:1	9.0:1	8.5:1
<b>Spark plugs:</b>						
Electrode gap (mm)	0.7	1.2	1.2	1.2	0.7	0.7
Tightening torque (Nm)	28	30	30	30	30	28

To verify the type of engine in the car - see the type designation stamped into the engine compartment (Type designations - page 156, point 3).

<sup>a</sup> Thailand, Malaysia

\* Output and torque as per test standard EU 80/1269. For petrol engines, 98 octane is always used for this test.

## Engine specifications

	<b>T6</b>	<b>2.9</b>	<b>D5</b>	<b>2.4D</b>		
Engine variant	<b>B6294T</b>	<b>B6294S2</b>	<b>D5244T</b>	<b>D5244T2</b>		
Output* (kW/rps) AWD	200/87 -	144/87 -	120/67 -	96/67 -		
(hp/rpm) AWD	272/5200 -	196/5200 -	163/4000 -	130/4000 -		
Torque (Nm/rps) AWD	380/30-83 -	280/65 -	340/29-50 -	280/29-50 -		
(kpm/rpm) AWD	38.8/1800-5000 -	28.6/3900 -	34.7/1750-3000 -	28.6/1750-3000 -		
No. of cylinders	6	6	5	5		
Bore (mm)	83	83	81	81		
Stroke (mm)	90	90	93.2	93.2		
Cylinder displacement (dm <sup>3</sup> (l))	2.92	2.92	2.40	2.40		
Compression ratio	8.5:1	10.3:1	18.0:1	18.0:1		
<b>Spark plugs:</b>						
Electrode gap (mm)	0.7	3x1.2	-	-		
Tightening torque (Nm)	30	25	-	-		

To verify the type of engine in the car - see the type designation stamped into the engine compartment (Type designations - page 156, point 3).

\* Output and torque as per test standard EU 80/1269. For petrol engines, 98 octane is always used for this test.

## Capacities

### Other fluids and lubricants

Fluid	System	Volume	Recommended grade
<b>Transmission fluid</b>	Manual, 5-speed (M56/M58)	2.1 litres	Transmission fluid <sup>1</sup> : MTF 97309
	Manual, 6-speed (M66)	2.0 litres	
	Automatic gearbox (AW55-51)	7.2 litres	Transmission fluid <sup>1</sup> : JWS 3309
	Automatic gearbox (GM4T65)	12.7 litres	Transmission fluid <sup>1</sup> Dexron III G
<b>Coolant</b>	Petrol engines without turbo	8.0 litres	Coolant with corrosion protection mixed with water, see packaging. The thermostat starts opening at 90 °C in petrol engines and at 82 °C diesel engines.
	Petrol engines with turbo	9.0 litres	
	Diesel engines	12.5 litres	
<b>Air conditioning</b>	Compressor oil	180-200 gram <sup>2</sup>	PAG
	Refrigerant	500-600 gram <sup>2</sup>	R134a (HFC134a)
<b>Brake fluid</b>		0.6 litres	DOT 4+
<b>Power steering</b>	System: same of which reservoir	0.9 litres 0.2 litres	Power steering fluid: WSS M2C204-A or equivalent product with specifications.
<b>Washer fluid reservoir</b>	Variant with headlamp wipers high pressure wash	4.5 litres 6.4 litres	Use a washer anti-freeze recommended by Volvo mixed with water at temperatures below freezing.
<b>Fuel tank</b>			For tank volume, see Fuel section on page 163.

<sup>1</sup> The recommended transmission fluid must be used to prevent damage to the gearbox. Do not mix with any other transmission fluid. If the transmission is topped up with a different fluid, contact an authorised Volvo workshop for servicing.

<sup>2</sup> Weights can vary depending on the engine variant. Contact an authorised Volvo workshop for the exact information.

## Engine oil

### Adverse driving conditions

Check the oil level more frequently for long journeys:

- towing a caravan or trailer
- in mountainous regions
- at high speeds
- in temperatures colder than -30 °C or hotter than +40 °C.
- shorter driving distances (shorter than 10 km) at low temperatures (under 5 °C)

This may result in abnormally high oil temperature or oil consumption.

Choose a fully synthetic engine oil for adverse driving conditions. It provides extra protection for the engine.


Volvo recommends  oil products.

### Important!

Always use the prescribed oil grade and viscosity.

If an oil other than that prescribed has been used, contact the local authorised Volvo workshop immediately for service.

Do not use extra oil additives. They could damage the engine.

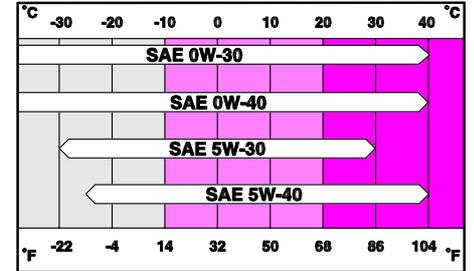

2200293v

Viscosity chart

# Capacities

## Engine oil



Oil decal

The following applies when the above-mentioned decal is fitted in the car's engine compartment. For location, see page 156  
 Oil grade: ACEA A5/B5  
 Viscosity: SAE 0W-30

Engine variant	Volume between MIN y MAX	Volume <sup>1</sup> / litre
<b>2.0T B5204T5</b>	1.2	5.5
<b>2.4 B5244S</b>		
<b>2.4 B5244S2</b>		
<b>2.4T B5244T4<sup>2</sup></b>		
<b>2.5T B5254T2</b>		

<sup>1</sup> Including filter change

<sup>2</sup> Thailand, Malaysia



Oil decal

The following applies when the above-mentioned decal is fitted in the car's engine compartment. For location, see page 156  
 Oil grade: ACEA A1/B1  
 Viscosity: SAE 5W-30  
 When driving under adverse conditions, use ACEA A5/B5 SAE 0W-30.

Engine variant	Volume between MIN y MAX	Volume <sup>1</sup> / litre
<b>BIFUEL B5244SG</b>	1.2	5.5
<b>T6 B6294T</b> <b>2.9 B6294S2</b>	1.5	6.6

<sup>1</sup> Including filter change



Oil decal

The following applies when the above-mentioned decal is fitted in the car's engine compartment. For location, see page 156  
 Oil grade: ACEA A3/B3/B4  
 Viscosity: SAE 5W-30

Engine variant	Volume between MIN y MAX	Volume <sup>1</sup> / litre
<b>2.4D D5244T2</b> <b>D5 D5244T</b>	2.0	6.5

<sup>1</sup> Including filter change

## Fuel consumption, emissions and volume

Engine variant	Gearbox	Consumption (litres/100 km) <sup>1</sup>	Carbon dioxide emissions (g/km)	Tank volume (litres)
2.4 B5244S2	Manual 5-speed (M56)	8.9	212	70
	Automatic gearbox (AW55-51)	9.6	229	
2.4 B5244S	Manual 5-speed (M56)	9.0	214	70
	Automatic gearbox (AW55-51)	9.7	232	
2.0T B5204T5	Manual 5-speed (M56)	9.0	214	80
	Automatic gearbox (AW55-51)	9.8	234	
2.5T B5254T2	Manual 5-speed (M56)	9.2	219	80
	Automatic gearbox (AW55-51)	10.0	239	
	AWD	Automatic gearbox (AW55-51)	10.5	252
2.4 B5244SG	Bi-Fuel	Manual 5-speed (M56)	9.2	30 <sup>3</sup>
		Automatic gearbox (AW55-50)	9.9	
D5 D5244T	Manual 5-speed (M56)	6.5	172	70
	Automatic gearbox (AW55-50)	7.7	204	70
2.4D D5244T2	Manual 5-speed (M56)	6.5	171	70
	Automatic gearbox (AW55-50)	7.7	204	
T6 B6294T	Geartronic	11.1	268	80
	4-speed (GM4T65)			
2.9 B6294S2	Geartronic	10.6	255	80
	4-speed (GM4T65)			
2.4T B5244T4 <sup>2</sup>	Automatic gearbox (AW55-51)	-	-	70

<sup>1</sup> Emission values are affected by fuel quality and may therefore differ from those specified if fuel of a different standard than that recommended by Volvo is used.

<sup>2</sup> Certain countries.

<sup>3</sup> Fuel tank.

## Specified fuel consumption

Official fuel consumption figures are based on a standard driving cycle in accordance with EU Directive 80/1268 comb.

Fuel consumption figures may be altered if the car is equipped with extra equipment that affects the car's weight. The manner in which the car is driven and other non-technical factors can also affect fuel consumption.

Consumption is higher and power output lower when driving using fuel with an octane rating of 91 RON.

## Recommended fuel grade

### Petrol

The engine can be run with octane ratings of 91, 95 and 98 RON.

When driving in temperatures above +38 °C, use of fuel with the highest possible octane rating is recommended for optimum performance and fuel economy.

- 98 RON is recommended for maximum effect and minimum fuel consumption.
- 95 RON can be used for normal driving.
- 91 RON must not be used in 4-cylinder engines and, in general, should only be used as an exception. However, the engine will not be damaged by this fuel grade.

Petrol: Standard EN 228

### Diesel


Diesel: Standard EN 590  
JIS K2204 or similar

### Important!

Diesel fuels not to be used: special additives, Marine Diesel Fuel, fuel oil, RME (Rape Methyl Ester), vegetable oil. These fuels do not fulfil the requirements of EM 590 and generate increased wear and engine damage that is not covered by the Volvo warranty.

### Important!

Refuel with correct petrol!  
Your car has a catalytic converter. Only drive with unleaded petrol so as not to damage the catalytic converter.

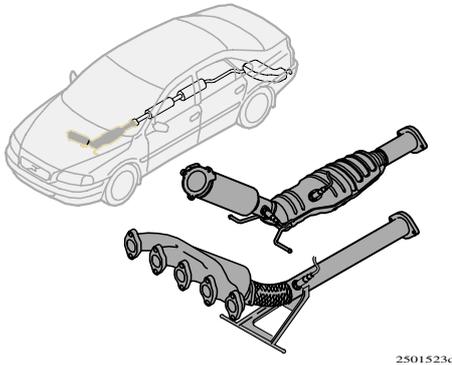

2501523d

### Lambda-sond™ Heated oxygen sensor

The lambda sensor is part of a management system intended to reduce emissions and improve fuel economy.

An oxygen sensor monitors the oxygen content of the exhaust gases leaving the engine. These values are fed into an electronic system that continuously controls the injectors. The ratio of air to fuel is continuously adjusted.

These adjustments create optimal conditions for efficient combustion, and together with the three-way catalytic converter reduce harmful emissions (hydrocarbons, carbon monoxide and nitrous oxides).

### Catalytic converter

The purpose of the catalytic converter is to purify exhaust.

It is located in the exhaust flow near the engine to quickly reach operating temperature.

The catalytic converter consists of a monolith (ceramic or metal) with channels. The channel walls are coated with a thin layer of platinum, rhodium and palladium. The metals act as catalysts, i.e. they accelerate the chemical process without being used up themselves.

### Wheel suspension, springing

#### Front end


McPherson type spring strut. Unitary construction of shock absorbers and spring. Rack and pinion steering. Safety type steering shaft. The values apply to an unladen car with full tank, coolant and spare wheel.

#### Rear suspension

Independent suspension with individually sprung wheels with shock absorbers. The suspension consists of rear-facing trailer arms, upper and lower control arms, track rods and anti-roll bar.

## General

12-volt system with voltage regulated alternating current generator. Single pole system in which the chassis and engine block are used as conductors. The negative pole is connected to the chassis. The car is equipped with an extra ground lead to reduce the magnetic fields.

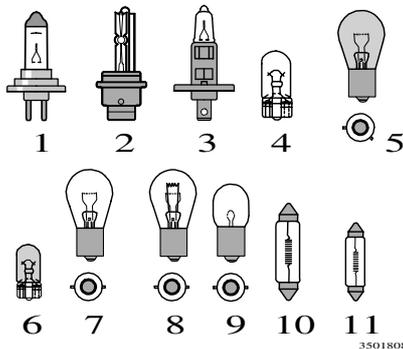

## Battery

Voltage	12 V	12 V	12V
Cold start capacity (CCA)	520 A	600 A	800 A*
Reserve capacity (RC)	100 min	120 min	170 min

\* Cars equipped with diesel and parking heater.

If the battery is changed, replace it with a battery of the same cold start capacity and reserve capacity as the original (see the decal on the battery).

**Generator** max current 140 A  
**Starter motor**, power 1,4/1,7/2,2 kW

## Bulbs

Bulbs	Type (LL)	Socket
1. Main beam / dipped beam	H7 55W	
2. Bi-Xenon	D2R35W	
3. Front fog lamp	H1 55W	
4. Parking lamp (front), side marker lamp (rear)	W5W	W2.1x9.5d
4. Side marker lamp (front)*	W3W	W2.1x9.5d
5. Direction indicator (front)	PY21W	BAU 15s
6. Direction indicator (side)	WY5W	W2.1x9.5d
7. Reversing lamp, direction indicator (rear)	P21W	BA15s
8. Rear fog lamp, parking lamp (rear)	P21/4W	BAZ15d

Bulbs	Type (LL)	Socket
9. Rear parking lamp	R5W	BA15s
10. Numberplate lighting, courtesy lighting (front) cargo compartment lighting	C5W	SV8.5
11. Vanity mirror	1.2W	SV5.5
4. Courtesy lighting (rear)	W5W	W2.1x9.5d


\*S80 Graphite Edition (white lens): WY5W (yellow lamp), W2.1x9.5d.

---


---

## Audio


Overview, Stereo HU-450	168
Overview, Stereo HU-650	169
Overview, Stereo HU-850	170
Audio functions	171
Radio functions	173
Cassette player	180
CD player	181
Dolby Surround Pro Logic II	184
Technical data - Audio	186

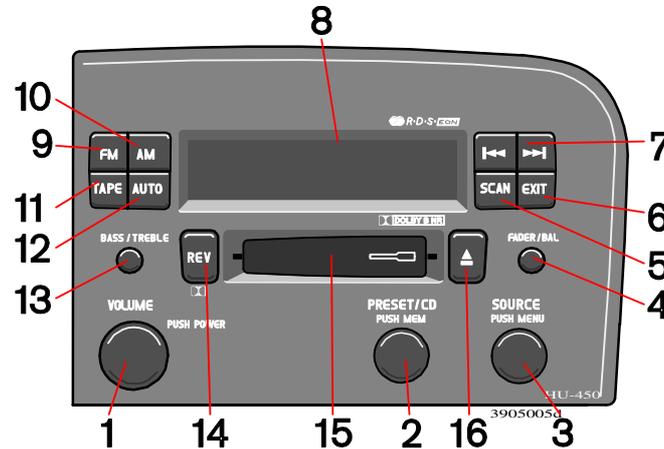


- |  |  |  |
|--|--|--|
| <ul style="list-style-type: none"> <li>1. POWER (Off/On) - Press <b>Volume</b> - Turn</li> <li>2. PRESET/ CD PUSH MENU - Stored radio stations<br/>CD changer (option)</li> <li>3. SOURCE PUSH MENU - Open the main menu - Press Turn to select: Radio - FM, AM Cassette<br/>CD changer (option)</li> <li>4. FADER / BALANCE - Press out and turn<br/>BALANCE - Press out, pull and turn</li> <li>5. SCAN - Automatic station search</li> <li>6. EXIT - Scroll back in the menu</li> </ul> | <ul style="list-style-type: none"> <li>7. Navigation buttons - CD/radio - seek/change station or track<br/>Cassette - Fast forward/rewind, select next/previous track</li> <li>8. Display</li> <li>9. FM - Shortcut</li> <li>10. AM - Shortcut</li> <li>11. TAPE - Shortcut</li> <li>12. AUTO - Automatic preset of radio stations</li> <li>13. BASS - Press out and turn<br/>TREBLE - Press out, pull and turn</li> <li>14. Cassette - Direction select<br/>CD changer (option) - Random</li> </ul> | <ul style="list-style-type: none"> <li>15. Cassette opening</li> <li>16. Cassette opening</li> </ul> |
|--|--|--|

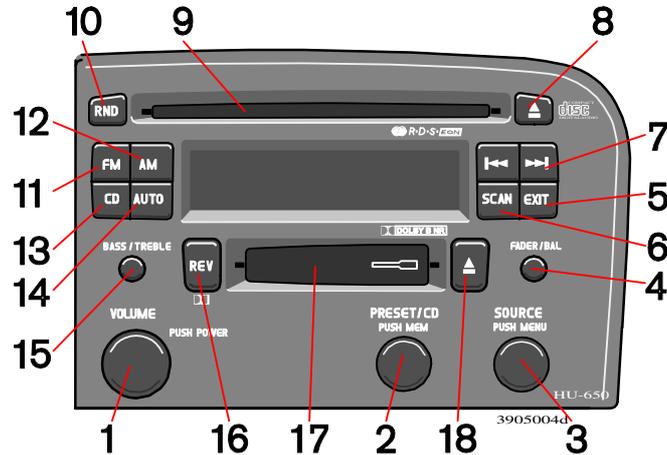

- |  |  |
|--|--|
| 1. POWER (Off/On) - Press Volume - Turn  | 8. CD eject  |
| 2. PRESET/ CD PUSH MENU -<br>Stored radio stations<br>CD changer (option)  | 9. CD slot   |
| 3. SOURCE PUSH MENU - Open the<br>main menu - Press Turn to select:<br>Radio - FM, AM<br>Cassette<br>CD<br>CD changer (option) | 10. CD random  |
| 4. FADER - Press out and turn<br>BALANCE - Press out, pull and turn  | 11. FM - Shortcut  |
| 5. EXIT - Scroll back in the menu  | 12. AM - Shortcut  |
| 6. SCAN - Automatic station search   | 13. CD - Shortcut  |
| 7. Navigation buttons - seek/change<br>station or track  | 14. AUTO - Automatic preset of radiostations                       |
|  | 15. BASS - Press out and turn<br>TREBLE - Press out, pull and turn |
|  | 16. Cassette - Direction select<br>CD changer (option) - Random    |
|  | 17. Cassette opening   |
|  | 18. Cassette eject   |

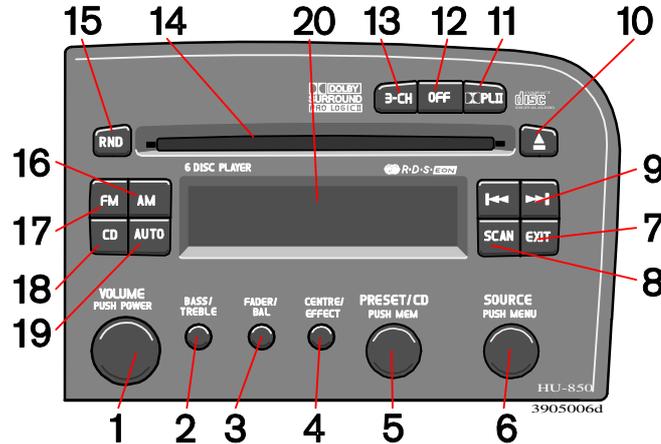

- |  |   |  |
|--|---|--|
| 1. POWER (Off/On) - Press<br>VOLUME - Turn                                       | 6. SOURCE PUSH MENU -<br>Open the main menu - Press                       | 10. CD eject                                     |
| 2. BASS - Press out and turn<br>TREBLE - Press out, pull and turn                | Turn to select:<br>Radio - FM, AM   | 11. Dolby Pro Logic II                           |
| 3. FADER - Press out and turn<br>BALANCE - Press out, pull and turn              | Output level - Press out, pull and turn                                   | 12. 2-channel stereo                             |
| 4. Centre volume - Press out and turn<br>Output level - Press out, pull and turn | 5. PRÉSET/ CD PUSH MENU -<br>Stored radio stations<br>CD changer (option) | 13. 3-channel stereo                             |
|  |   | 14. CD slot                                      |
|  |   | 15. CD random                                    |
|  |   | 16. AM - Shortcut                                |
|  |   | 17. FM - Shortcut                                |
|  |   | 18. CD - Shortcut                                |
|  |   | 19. AUTO - Automatic preset of radio<br>stations |
|  |   | 20. Display                                      |

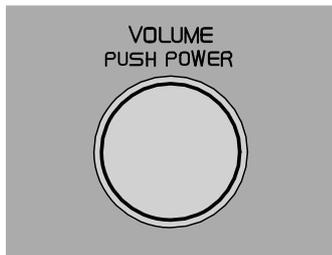

3902418d

## On/Off switch

Press button to switch the radio on or off.

## Volume control

Turn the knob clockwise to increase volume. Volume control is electronic and does not have an end stop. If you have a keypad in the steering wheel, increase or decrease volume with the + or - buttons.

## Volume control - TP/PTY/ NEWS

If a cassette or a CD is playing when the radio receives traffic information, news, or a selected programme type, the function is interrupted, and the message will be heard at the pre-set volume for traffic information, news or programme type. Volume is adjusted with the volume control.

The unit will thereafter return to the previously set volume and continue playing the cassette or the CD.



3901856d

## Bass

Set the bass by pressing out the button and turning to right or left. In the centre position the volume is “normalised”. Press the button back to original position after setting.


## Treble

Set the treble by pressing out the button, pull it further out and turn it left or right. In the centre position the volume is “normalised”. Press the button back to original position after setting.




### Fader – Balance front/rear

Set a suitable balance between the front and rear loudspeakers by pressing out the button and then turning it to the right (sound to front) or to the left (sound to the rear). Centre position means that the balance is “normalised”. Press the button back to its original position after setting.

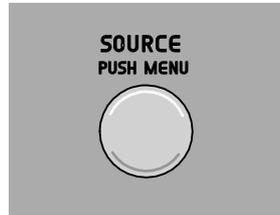

### Balance – Balance right/left

Set the balance by pressing, pulling out the button and turning to right or left. In the centre position the volume is “normalised”. Press the button back to its original position after setting.

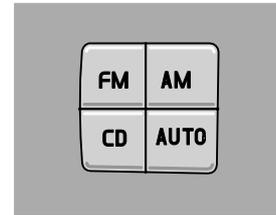

### Selection of sound source

There are two ways to select sound source:

Either with the shortcut keys (AM, FM CD (HU-650/850), TAPE (HU-450)) or with the SOURCE knob.

Turn the SOURCE knob to select FM or AM. This knob can also be used to select cassette (HU-450/650), CD (HU-650/850) or CD changer (option) if connected.

The selected sound source is shown in the display.





3905010m

## Scanning

Press the SCAN button to start the search. When the radio finds a station, it stops scanning for a 10 seconds. It then resumes scanning. To listen to the station, press the SCAN or EXIT button.


## Station search

Press or to seek lower or higher frequencies. The radio searches for the next audible station and then stops. Press the button again to continue the search.

## Manual tuning

Press and hold or . MAN is shown on the display. The radio slowly scrolls in the desired direction, increasing its tempo after a few seconds. Release the button when the desired frequency shows in the display. The frequency can then be adjusted by briefly pressing one of the arrow keys or .

Manual adjustment mode stays in effect five seconds after the last press.

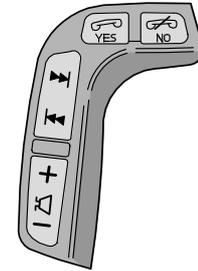

3901873d


## Steering wheel keypad

If you have a keypad in the steering wheel, press the right or left arrow to select preset stations.


**NOTE!** If the car is equipped with an integrated telephone, the steering wheel keypad can only be used for telephone functions when the telephone is activated. When in active mode, telephone information is always shown in the display. Deactivate the telephone by pressing . Switch off the telephone if you do not have an SIM card. See page 190.



3905007d

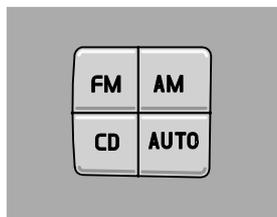

3905009m

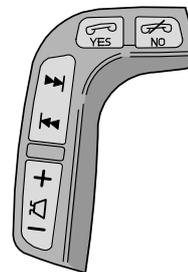

3901873d

## Programming stations

1. Set the desired frequency.
2. Briefly press the PRESET/CD knob. Select a number by turning forwards or backwards. Press again to store the desired frequency and station.

## Preset

To select a preset radio programme, turn the PRESET/CD to the stored number. The set programme is displayed.

## Autostoring stations

This function automatically seeks and stores up to 10 strong AM or FM stations in a separate memory. The function is especially useful in areas in which you are unfamiliar with the radio stations or their frequencies.

1. Select radio mode using the AM or FM button.
2. Start the search by pressing and holding AUTO (more than 2 seconds).
3. AUTO is shown on the display and a number of strong stations (max. 10) from the set frequency band are saved in the autostore memory.  
If there are no stations with sufficient signal strength, NO STATION is displayed.

4. Briefly press the AUTO button or one of the arrows of the steering wheel keypad to scroll to another of the automatically preset stations.

AUTO is shown on the display when the radio is in autostore mode.

The text disappears when you return to ordinary radio mode. Return to ordinary radio mode by pressing FM, AM or EXIT or by turning the PRESET/CD-knob.

Returning to autostore mode:  
Briefly press AUTO.

## Radio Data System - RDS

RDS is a system that links specific network transmitters. It is used, for example, to tune the correct frequency of a station irrespective of the transmitter or the active sound source (e.g. CD). The system can also be used for receiving traffic information and for finding broadcasts of a specific type.

Radio text is also a component of RDS. A radio station can transmit information about the radio programme currently being broadcast.

Some radio stations do not use RDS or only use a limited range of its features.

## PI search (automatic station search)

When listening to an RDS transmitter, various information, such as traffic information, is stored in the radio.

When a preset RDS transmitter is later selected, the radio updates the transmitter's RDS information. If the radio is at the boundary or just outside of the transmitter's range, the radio automatically seeks the strongest possible transmitter of that channel.

If there is no audible transmitter, the radio quiets and the PI SEEK appears on the display until the station is found.

## Traffic information - TP Station

Traffic information from RDS stations interrupts other sound sources. The message is heard at the volume set for this specific feature. As soon as the message ends, the audio system returns to the previous sound source and volume setting.

Activating traffic information:

1. Select radio mode using the FM button and press SOURCE.
2. Select TP and press SOURCE.
3. Turn SOURCE, select TP ON (flashing text) and press SOURCE.
4. Press EXIT.

Deactivating TP

1. Select radio mode using the FM button and press SOURCE.
2. Select TP and press SOURCE.
3. Turn SOURCE, select TP OFF (flashing text) and press SOURCE.
4. Press EXIT.

TP is shown on the display when the function is activated.

Press EXIT if you do not wish to listen to a traffic bulletin.

The TP function remains active and the radio waits for the next traffic bulletin.

Activate traffic information from a special channel:

1. Select radio mode using the FM button.
2. Activate the station from which traffic information is to be received.
3. Press SOURCE.
4. Turn SOURCE, select ADVANCED MENU and press SOURCE.
5. Turn SOURCE, select RADIO SETTINGS and press SOURCE.
6. Turn SOURCE, select TP STATION and press SOURCE.
7. Turn SOURCE, select SET CURRENT and press SOURCE.
8. Press EXIT.

Deactivating TP Station

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS and press SOURCE.
4. Turn SOURCE, select TP STATION and press SOURCE.
5. Turn SOURCE, select TP STATION OFF and press SOURCE.
6. Press EXIT.

### TP search

This function allows you to listen to traffic information when travelling between different areas and countries without selecting a station.

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS and press SOURCE.
4. Turn SOURCE, select TP SEARCH and press SOURCE.
5. Turn SOURCE, select TP SEARCH ON or TP SEARCH OFF (flashing text) and press SOURCE.
6. Press EXIT.

### News

Messages with a programme code (such as news from RDS stations) will interrupt other sound sources at the volume set for this specific feature. As soon as the news broadcast is finished, the audio system returns to the previous sound source and volume setting.

Activating News:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select NEWS and press SOURCE.
3. Turn SOURCE, select NEWS ON (flashing text) and press SOURCE.
4. Press EXIT.

NEWS appears on the display.

To deactivate News:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select NEWS and press SOURCE.
3. Turn SOURCE, select NEWS OFF (flashing text) and press SOURCE.
4. Press EXIT.

NEWS disappears from the display.

Press EXIT if you do not wish to listen to a news broadcast.

The News function remains active and the radio waits for the next news programme.

Setting the current station as news source:

1. Select radio mode using the FM button.
2. Activate the station from which traffic information is to be received.
3. Press SOURCE.
4. Turn SOURCE, select ADVANCED MENU and press SOURCE.
5. Turn SOURCE, select RADIO SETTINGS and press SOURCE.
6. Turn SOURCE, select NEWS STATION and press SOURCE.
7. Turn SOURCE, select SET CURRENT and press SOURCE.
8. Press EXIT.

To deactivate News Station:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS and press SOURCE.
4. Turn SOURCE, select NEWS STATION and press SOURCE.
5. Turn SOURCE, select NEWS STN OFF and press SOURCE.
6. Press EXIT.

Programme types	Displayed
OFF	PTY OFF
New features	News
Current affairs	Current
Information	Info
Sport	Sport
Education	Educ
Theatre	Theater
Culture and Art	Culture
Science	Science
Entertainment	Enterta
Pop music	Pop
Rock music	Rock
Easy listening	Easy list
Light classical	L Class
Classical music	Classical
Other music	Other M
Weather	Weather
Economy	Economy
For children	For children
Social questions	Social
Spiritual questions	Spiritual
Telephone watch	Telephone
Travel and holiday	Travel
Leisure and hobby	Leisure
Jazz music	Jazz
Country music	Country
National music	Nation M
Golden oldies	“Oldies”
Folk music	Folk
Documentary	Document

## Programme type - PTY

Use the PTY function to select between the various programme types

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select PTY and press SOURCE.
3. Turn SOURCE, select PTY in the menu and press SOURCE.
4. The radio begins searching for the selected programme type.
5. If you do not wish to listen to the station found by the radio, continue the search using the left or right arrow key.
6. If the radio does not find a station with the selected programme type, it returns to the previous frequency.

Not all radio stations have a PTY designation

## PTY standby

PTY mode is then in standby until the selected programme type is broadcast. When this happens, the radio automatically switches to the station broadcasting the selected programme type.

Deactivating:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select PTY and press SOURCE.
3. Turn SOURCE, select PTY OFF and press SOURCE.
4. Press EXIT.

The PTY symbol disappears from the display and the radio resumes normal mode.

## PTY - language

The PTY function can be used to select the language used in the radio display (English, German, French or Swedish).

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS and press SOURCE.
4. Turn SOURCE, select PTY LANGUAGE and press SOURCE.
5. Turn SOURCE, select language and press SOURCE.
6. Press EXIT.

### Automatic frequency updating

The AF function is normally activate and ensures that the radio tunes to the strongest available transmitter.

Activating AF:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS MENU and press SOURCE.
4. Turn SOURCE, select AF ON (flashing text) and press SOURCE.
5. Press EXIT.

Deactivating AF:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS MENU and press SOURCE.
4. Turn SOURCE, select AF OFF (flashing text) and press SOURCE.
5. Press EXIT.

### Regional radio programmes

The regional function is normally deactivated. When the function is activated you can continue listening to a regional broadcast even if the signal is weak.

Activating REG:

1. Select radio mode using the FM button and press SOURCE.
  2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
  3. Turn SOURCE, select RADIO SETTINGS MENU and press SOURCE.
  4. Turn SOURCE, select REG LOCK (flashing text) and press SOURCE.
  5. Press EXIT.
- REG appears on the display.

Deactivating REG:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS MENU and press SOURCE.
4. Turn SOURCE, select REG SWITCH (flashing text) and press SOURCE.
5. Press EXIT.

### EON - Local/Distant (Enhanced Other Networks)

When EON is activated, the radio programme is interrupted for traffic bulletins, news broadcasts or the like from other channels.

The function has two levels:

Local - only interrupts if the signal is strong.  
Distant - also interrupts with weaker signals.

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RADIO SETTINGS MENU and press SOURCE.
4. Turn SOURCE, select EON (flashing text) and press SOURCE.
5. Turn SOURCE, select Local or Distant and press SOURCE.
6. Press EXIT.

## **Resetting RDS functions**

Resets all radio settings to the original factory settings.

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select RESET TO DE-FAULT and press SOURCE.
4. Press EXIT.

## **ASC (Active Sound Control)**

The ASC function automatically adapts the volume of the radio to vehicle speed.

Activating ASC:

1. Select radio mode using the FM button and press SOURCE.
2. Turn SOURCE, select ADVANCED MENU and press SOURCE.
3. Turn SOURCE, select AUDIO SETTINGS MENU and press SOURCE.
4. Turn SOURCE, select ASC LEVEL and press SOURCE.
5. Turn SOURCE select LOW, MEDIUM, HIGH or Off and press SOURCE.


## **Radio text**

Some RDS stations broadcast information, such as about programme content and artists.


Hold the FM button depressed a few seconds to access any transmitted radio text, which then appears on the display.

After the text is shown twice, the radio once again displays the station/frequency.


A brief press on EXIT ends the radio text display.

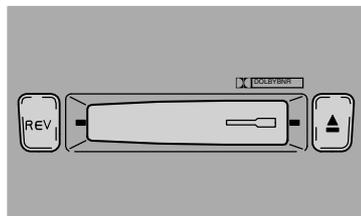

3901857d

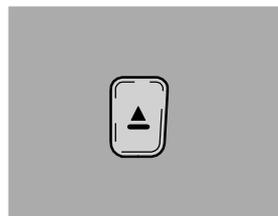

3901876d

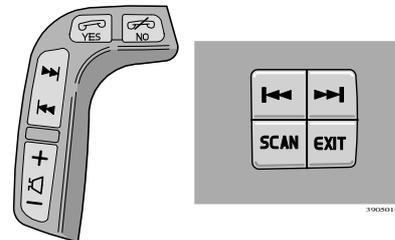

3901873d

## Cassette opening

Slide cassette into the cassette opening with the tape to the right. TAPE Side A is shown in the display. When one side has finished playing the system will automatically begin playing the other side (auto reverse). To play a cassette that is already in the player, turn the SOURCE knob or press the TAPE shortcut key (HU-450).

## Changing tape direction

Press the **REV** button to if you wish to play the other side of the tape. The display shows which side is being played.

## Cassette eject

If you press the button, the tape stops and the cassette is ejected. Turn the **SOURCE** knob to select a new programme source. The cassette can be inserted or ejected even if the system is switched off.

## Dolby B Noise Reduction

This function is preset. Do as follows to switch it off: hold the **REV** button depressed until the Dolby symbol  in the display goes out. Press the same button again to reactivate the Dolby function.

## Scanning


Scan plays the first ten seconds of each track. Press the **SCAN** or **EXIT** button when you find a song or track you wish to listen to.

## Fast forward/rewind


The tape is fast forwarded by pressing and holding the  button and is rewound with the button . "FF" (fast forward) or "REW" (rewind) is shown in the display during this time. Fast forward/rewind is interrupted if you press the button again.

## Next track, Previous track


If you press the button,  the cassette will automatically fast forward to the next song. If you press the button,  the cassette will automatically rewind to the previous song. There must be a five second break between each track for this function to work. If you have a keypad in the steering wheel, you can use the arrows.

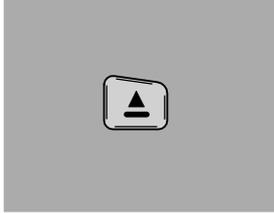

3901862d

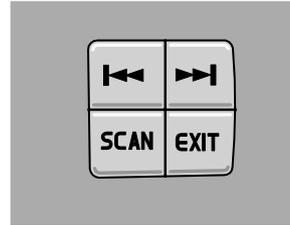

3905010m

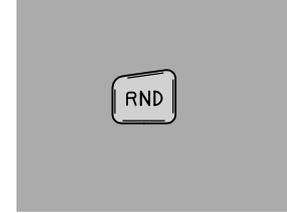

## CD player

Insert a CD. If there is already a CD in the player, activate it by turning the SOURCE knob or pressing the CD shortcut key.

## CD eject

If you press this button the CD stops playing and the disc is ejected. (See illustration above)

**NOTE!** For reasons of traffic safety, you have twelve seconds to handle the ejected disc. Otherwise, the CD is drawn back into the player and resumes with the most recently played track.

## Fast forward/reverse and change track

Press and hold down the right or left-hand arrow key to fast forward/reverse a track or the whole disc. Fast forward/reversing cannot be done using the steering wheel keypad.

Briefly press the left or right-hand arrow key to go to the previous or next track. The steering wheel keypad can also be used for this. Track numbers are shown in the display.

## Scanning

Scan plays the first ten seconds of each track. Press the SCAN or EXIT button when you find a song or track you wish to listen to.

## Random



Press **RND** to connect the random function. The unit plays tracks from the disc in random order. "RND" (random) is displayed as long as the function is activated.

**NOTE!** If the quality of the CD does not comply with the standard EN60908, or if it has been recorded using poor equipment, sound quality may be poor or playback interrupted.


### IMPORTANT!

Use only standard 12 cm CDs - no smaller. Do not use CDs with a sticker label. Heat from the CD player could cause the label to let loose from the disc, possibly damaging the CD player.

## External CD changer

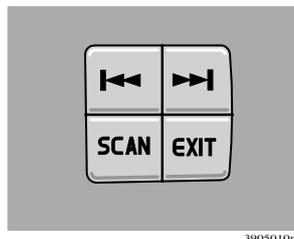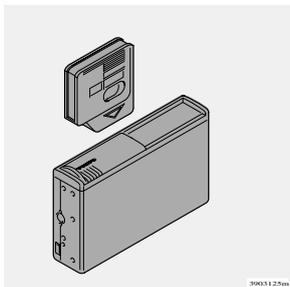

3905010m

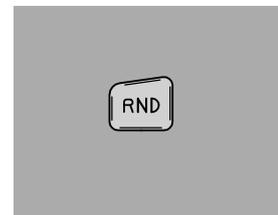

### CD changer

The external CD changer (option) is mounted behind the panel on the rear left side of the cargo compartment.

Turn the **SOURCE** knob to activate CD changer mode. The CD changer resumes playing the disc and track that was playing last. If the CD changer magazine is empty “LOAD CARTRIDGE” is displayed.

Loading discs in the CD changer:

1. Slide open the CD changer cover.
2. Press the cartridge eject button on the changer.
3. Pull out the CD cartridge and insert the discs.
4. Reinsert the cartridge in the CD changer.

### Selecting disc number

Turn the **PRESET/CD** knob. The numbers of the disc and the track are shown in the display.

### Fast forward/reverse and change track

Press and hold down the right or left-hand arrow key to fast forward/reverse a track or the whole disc. Fast forward/reversing cannot be done using the steering wheel keypad. Briefly press the left or right-hand arrow key to go to the previous or next track. The steering wheel keypad can also be used for this. Track numbers are shown in the display.

### Scanning

Scan plays the first ten seconds of each track. Press the **SCAN** or **EXIT** button when you find a song or track you wish to listen to.


### Random

Press **RND** (for HU-650 and 850) to activate the Random function. If you have audio system HU-450, use the **REV** button. A randomly selected track is chosen from a randomly selected disc. Then a new track is selected in the same way. “RND” (random) is displayed as long as the function is activated.


**NOTE!** If the quality of the CD does not comply with the standard EN60908, or if it has been recorded using poor equipment, sound quality may be poor or playback interrupted.

### IMPORTANT!


Use only standard 12 cm CDs - no smaller. Do not use CDs with a sticker label. Heat from the CD player could cause the label to let loose from the disc, possibly damaging the CD player.

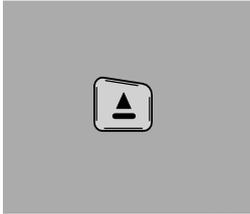

3901862d

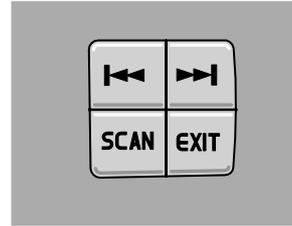

3905010m

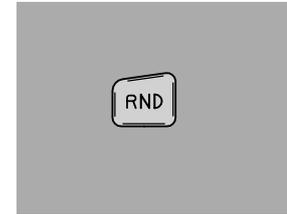

## Internal CD changer

HU-850 contains an internal 6-disc CD changer.

Press the CD shortcut key or turn the SOURCE knob to activate the CD player. The CD player resumes with the most recently played track of the most recently played CD. Up to 6 discs can be inserted in the CD player. An empty slot in the player must be selected when inserting a disc. This is done by turning the PRESET/CD knob. Make sure "LOAD DISC" is displayed before inserting a new disc.

## CD eject

If you press this button the CD stops and the disc that was playing is ejected.

**NOTE!** For traffic safety reasons you have twelve seconds to handle the ejected CD. Otherwise, the CD is drawn back into the player and resumes with the most recently played track.

## Selecting disc number

Turn the PRESET/CD knob. The disc and track numbers are shown on the display.

## Fast forward/reverse and change track

Press and hold down the right or left-hand arrow key to fast forward/reverse a track or the whole disc. Fast forward/reversing cannot be done using the steering wheel keypad. Briefly press the left or right-hand arrow key to go to the previous or next track. The steering wheel keypad can also be used for this. Track numbers are shown in the display.

## Scanning

Scan plays the first ten seconds of each track. Press the SCAN or EXIT button when you find a song or track you wish to listen to.

## Random

Press **RND** to connect the random function. A randomly selected track is chosen from a randomly selected disc. Then a new track is selected in the same way. "RND" (random) is displayed as long as the function is activated.

**NOTE!** If the quality of the CD does not comply with the standard EN60908, or if it has been recorded using poor equipment, sound quality may be poor or playback interrupted.


### IMPORTANT!

Use only standard 12 cm CDs - no smaller. Do not use CDs with a sticker label. Heat from the CD player could cause the label to let loose from the disc, possibly damaging the CD player.

### Dolby Surround Pro Logic II

Dolby Surround Pro Logic II is a further refinement of the previous system and provides a significantly improved sound experience. This improvement is especially noticeable to rear seat passengers.


Dolby Surround Pro Logic II together with a centre speaker in the dashboard offers a sound experience very close to being there. The normal left-right stereo channels are divided into left-centre-right. In addition, surround sound is produced by the rear speakers. Dolby Surround Pro Logic II works in CD mode. 3-channel stereo (3-CH) is recommended for AM and FM radio transmissions.

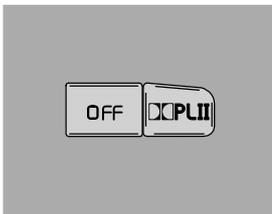

3905088d

### Dolby Surround Pro Logic II Mode


To select Dolby Surround Pro Logic II Mode, press “ PL II”. “PL II” is shown on the display. “Dolby Pro Logic” is displayed. Press **OFF** to return to 2-channel stereo.

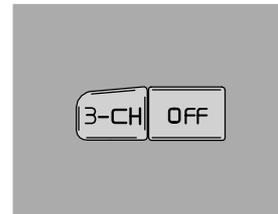

3901877d

### 3-channel stereo

To select 3-channel stereo press “**3-CH**”. “**3-CH**” is displayed. Press **OFF** to return to 2-channel stereo.

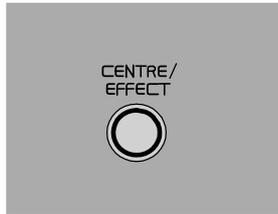

## Centre loudspeaker volume

Set the centre loudspeaker volume by pressing out the button and turning it left or right. In the centre position the volume is “normalised”. Press the button back after setting.



## Rear loudspeaker output level (surround sound)

Set the power output of the rear channels by pressing out the button, pulling it further out and turning it left or right. In the centre position the power output is “normalised”. Press the button back after setting. The control regulates the surround sound level when listening in Dolby Surround Pro Logic II mode.

## Technical data - Audio

### HU-450

Output: 4 x 25 W  
Impedance: 4 Ohm  
Voltage required: 12 V, negative ground

### Radio

Frequency: U (FM) 87.5 - 108 MHz  
M (AM) 522 - 1611 kHz  
L (AM) 153 - 279 kHz

### HU-650

Output: 4 x 25 W  
Impedance: 4 Ohm  
Voltage required: 12 V, negative ground  
External amplifier: 4 x 50 W or 4 x 75 W (option)

### Radio

Frequency: U (FM) 87.5 - 108 MHz  
M (AM) 522 - 1611 kHz  
L (AM) 153 - 279 kHz

### Bass speaker

Built-in amplifier: 150 W

#### Low battery voltage

If battery voltage is low, a text appears in the combined instrument panel display. The energy economy function of the car may switch off the radio. Charge the battery by starting the engine.

### Alarm

"Alarm!" is shown in the radio display when an alarm message is transmitted. The function is used to warn the driver of serious accidents or catastrophes, such as collapsed bridges, earthquakes or nuclear accidents.

Dolby Noise Reduction is manufactured under license of Dolby Laboratories Licensing Corporation. Dolby and the double D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

Dolby Surround Pro Logic II is a registered trademark of Dolby Laboratories Licensing Corporation. Manufacturing rights for Dolby Pro Logic Surround System are licensed from Dolby Laboratories Licensing Corporation.

### HU-850

Output: 1 x 25 W (Centre speaker)  
Impedance: 4 Ohm  
Voltage required: 12 V, negative ground  
External amplifier: 4 x 50 W or 4 x 75 W (option)

HU-850 must be connected to an external amplifier.

### Radio

Frequency: U (FM) 87.5 - 108 MHz  
M (AM) 522 - 1611 kHz  
L (AM) 153 - 279 kHz

---

## Telephone (option)

Telephone system	188
Operating	190
Call options	191
Memory functions	194
Menu functions	195
Miscellaneous information	199

## Telephone system

### General rules

- **Put traffic safety first!** If you as the driver must use the privacy handset in the armrest, park the car in a safe place.
- Switch off the telephone when refuelling.
- Switch off the telephone in areas where blasting work is being carried out.
- Only allow authorised personnel service your telephone.

### Emergency calls

Emergency calls to emergency services can be made without the ignition key or the SIM card.

- Press the ON/OFF button.
- Ring the emergency number that applies to your region (within EU: **112**).
- Press the green button .

### 1. Keypad in centre console

All telephones system functions can be controlled from the keypad in the centre console.

### 2. Steering wheel keypad

The keypad in the steering wheel can be used for most telephones system functions. When the telephone is activated, the keypad in the steering wheel can only be used for telephone functions. When in active mode, telephone information is always shown in the display. To use the buttons for radio settings, the telephone has to be deactivated, see page 190.

### 3. Display

The display shows menu functions, messages, telephone numbers, etc.

### 4. Privacy handset

The privacy handset can be used for private conversations when you do not wish to be disturbed.

### 5. SIM card

All telephone functions can be controlled via the keypad in the centre console. The majority of telephone functions can be controlled via the steering wheel keypad. The SIM card is inserted below the keypad in the centre console.

Switch off the telephone whenever a SIM card is not in use. Otherwise, messages from other functions cannot be shown on the display.

### 6. Microphone


The microphone is built into the rearview mirror.

### 7. Speaker


The speaker is integrated in the driver's seat head restraint.

### 8. Antenna

The antenna is mounted against the windscreen in front of the rearview mirror.

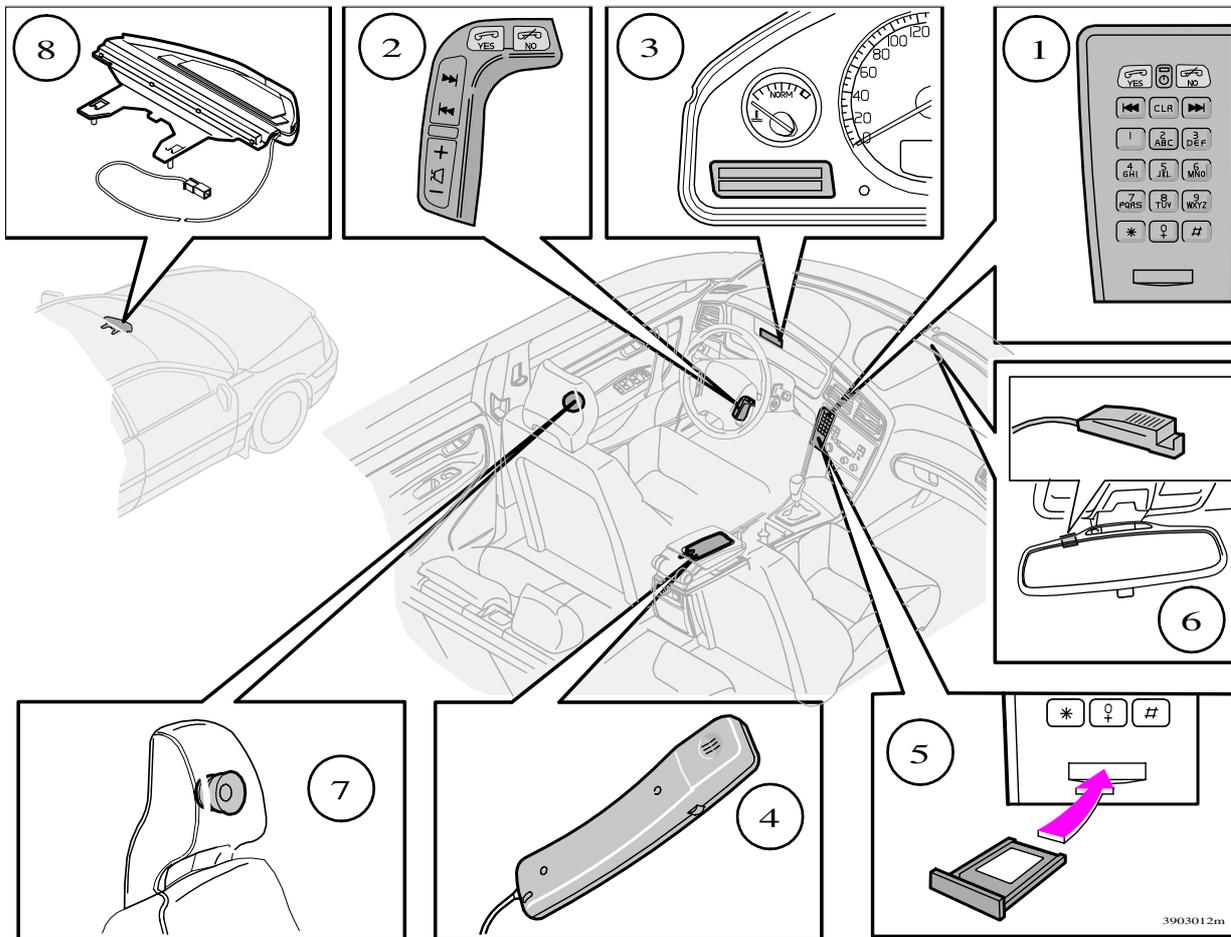

## Operating

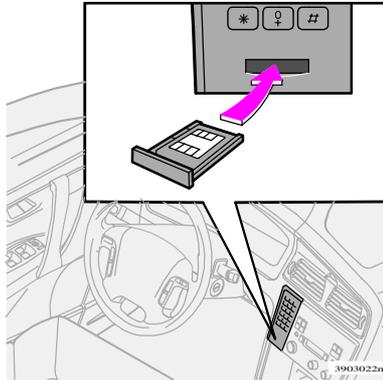

### SIM card

The telephone can only be used in conjunction with a valid SIM card (Subscriber Identity Module). Obtain the card from your service provider.

Always insert the SIM card to use the telephone. The name of your service provider will then be displayed.

Switch off the telephone whenever a SIM card is not in use. Otherwise, message from other functions cannot be shown on the display and the keypad cannot be used to control the radio.

### Switching the telephone on and off

To switch the telephone on: turn the ignition key to position I. Press the button marked in the illustration

To switch the telephone off: press the same button for approx. 3 seconds. If you switch off the car while the telephone is on, it will be on the next time you switch on the ignition.

Telephone calls cannot be received if the telephone is switched off.

### Active mode


The telephone must be in active mode to use its functions (does not apply to receiving calls).

Activate the telephone by pressing  on the centre console keypad or the keypad in the steering wheel.

When in active mode, telephone information is always shown in the display.

Press  to deactivate the telephone.

## Call options

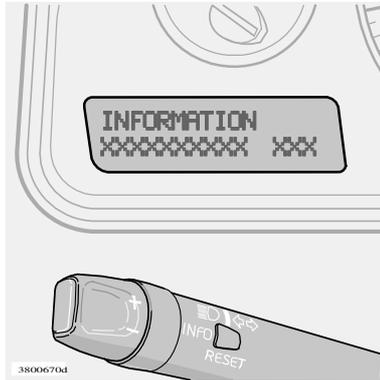

## Display

The display shows the current function, such as menu alternative, message, telephone number, or setting.

## Making and receiving calls

To **place a call**: enter the number and press  YES on the steering wheel or centre console keypad (or lift up the handset).

To **receive** an incoming call: Press the button  YES (or lift the privacy handset). You can also use Automatic answer, see menu function 4.3.

The audio system is automatically muted during conversation. See menu alternative 5.6.5 regarding audio system volume.

## Ending a call

To conclude a call, press  NO on the steering wheel or centre console keypad or put the handset back in place. The audio system will resume its previous activity.


## Call options (cont.)



### Last number called

The telephone automatically stores the last telephone numbers/names called.

1. Press  on the steering wheel or centre console keypad.
2. Use the arrows to scroll forward  or backward  through the last numbers called.
3. Press  (or lift the privacy handset) to make the call.

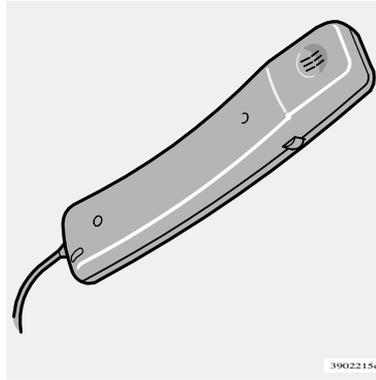

### Privacy handset

If you wish to talk undisturbed, use the **privacy handset**.

1. Pick up the handset. Enter the chosen number on the centre console keypad. Press  to place a call. Adjust the volume by using the knob on the side of the handset.
2. The call is terminated when you replace the handset in its holder. If you wish to change to handsfree without ending the call: press  and select Handsfree. Press  and put down the handset, see the following page.

## Speed dial

### Storing speed dial numbers

A number stored in the telephone book can be linked to a speed dial button (0-9) as follows:

1. Go into active mode. Scroll with  to Edit memory (Menu 3) and press .
2. Scroll to Speed dial (Menu 3.4) and press .
3. Choose the digit that is to be the speed dial number. Press  to confirm.
4. Find the desired name or telephone number in the memory and press  to select it.

### Using speed dial

Press the desired speed dial button for about 2 seconds to make a call.

**NOTE!** When you turn on the telephone, wait a moment before using the speed dial function. To enter a speed dial number, Menu 4.5 must be activated, see page 196.

## Functions during a call

The following functions are available **during** a call (scroll with arrows):

Secret mode/ Secret mode off	Secret mode
Hold/No hold	Choose if the present call is to be parked, i.e. put on hold
Handset/ Handsfree	Use the handset or handsfree
Memory	Show stored numbers

The following functions are available when you have **a current** call and **a parked** call (scroll with arrows):

Secret mode/ Secret mode off	Secret mode
Handset/ Handsfree	Use the handset or handsfree
Memory	Show stored numbers
Three-way calling	Speak with both parties simultaneously (conference call)
Switch	Switch between the two calls

The following functions are available during **three-way calling** (scroll with arrows):

Secret mode/ Secret mode off	Secret mode
Handset/ Handsfree	Use the handset or handsfree
Memory	Show stored numbers

## Call waiting

If you hear a beep in your receiver followed immediately by two beeps (double beep) during a phone call, someone else is calling.

The double beep is then repeated until you either answer or the caller hangs up. In this mode, you can choose to either take the call or ignore it.

If you **do not** wish to take the call, press  or do nothing.

If you **do** wish to take the call, press . Your current call will be put in “park mode”. If you press , both calls will be terminated.

## SMS

A double beep informs you that a SMS-message has been received.



## Volume

Increase volume by pressing on the (+) button on the steering wheel keypad. Reduce volume by pressing on the (-) button.

When the telephone has been activated, the steering wheel keypad can only be used for telephone functions.

To use this keypad for radio settings the telephone has to be deactivated, see page 190.

## Memory functions

Telephone numbers and names can be stored in either the telephone memory or the SIM card memory.

If the number of the person calling is in the memory, their name is shown in the display.

Up to 255 names can be stored in the telephone memory.

## Storing telephone numbers with names

1. Press and scroll to Edit memory (Menu 3) and press YES.
2. Scroll to Enter item in memory (Menu 3.1) and press YES.
3. Enter a number and press YES.
4. Enter a name and press YES.
5. Choose in which memory to save with and press YES.

## Enter a name (or message)

Press the button with the desired character: once for the first character, twice for the second, etc. Press 1 to enter a space.

	space 1- ? ! , . : ' ( )
	a b c 2 ä å à á â æ ç
	d e f 3 è é ê
	g h i 4 ì í î ï
	j k l 5
	m n o 6 ñ ò ó ø
	p q r s 7 ß
	t u v 8 ü ù ú û
	w x y z 9
	if you enter two letters in a row from the same button, press * between them or wait a few seconds
	+ 0 @ * # & \$ £ / %
	change between capital and lower case letters
	delete the last letter or number entered. If you press the button for a long time, the entered number or text is deleted.



## Calling from the memory

1. Press .
2. Choose from the following alternatives:
  - Press YES and scroll with the arrows until you find the desired name.
  - Press the key of the first letter in the name (or enter the name) and press YES.
3. Press YES to call the selected number.

## Menu functions

The menu function is used to check and alter settings and programme new functions in your system. The different menus are shown in the display.

### Menu function

Go into active mode. Press  to come to the menu function.

The following applies in the menu function:

- A long press on  means you exit the menu function.
- A short press on  means that you retract, cancel or reject an alternative.
- A press on  means that you confirm or select, or that you scroll from a submenu to the next submenu.
- The right arrow  leads to the next side menu. The left arrow  leads to the previous side menu.



## Traffic safety

For reasons of safety, the menu system cannot be accessed at speeds in excess of 8 km/h (5 mph). You may only complete activities in the menu system that have already been started. The speed limiter can be disconnected using menu function 5.7.

## Shortcuts

When you use the right arrow  to enter the menu system, you can use numbers instead of the arrows and the green button  to select the right menu on **the main menu level** (1, 2, 3, etc.), **first submenu level** (1.1, 2.1, 3.1, etc.) and the **second submenu level** (1.1.1, 2.1.1, etc.). The numbers are shown in the display together with the menu alternative.

## Main menus/submenus

### 1. Call register

- 1.1 Missed calls
- 1.2 Received calls
- 1.3 Dialed calls
- 1.4 Erase list
  - 1.4.1 All
  - 1.4.2 Missed
  - 1.4.3 Received
  - 1.4.4 Dialed
- 1.5 Call duration
  - 1.5.1 Last call
  - 1.5.2 Number of calls
  - 1.5.3 Total time
  - 1.5.4 Clear

### 2. Messages

- 2.1 Read
- 2.2 Write
- 2.3 Voice message
- 2.4 Settings
  - 2.4.1 SMSC number
  - 2.4.2 Validity
  - 2.4.3 Type

### 3. Edit memory

- 3.1 Enter item
- 3.2 Search
  - 3.2.1 Edit
  - 3.2.2 Erase
  - 3.2.3 Copy
  - 3.2.4 Move
- 3.3 Copy all
  - 3.3.1 SIM to phone
  - 3.3.2 Phone to SIM
- 3.4 Speed dial
- 3.5 Empty SIM
- 3.6 Empty memory
- 3.7 Status

### 4. Call options

- 4.1 Transmit numbers
- 4.2 Call waiting
- 4.3 Automatic answer
- 4.4 Automatic dial
- 4.5 Speed dial
- 4.6 Call divert service
  - 4.6.1 All calls
  - 4.6.2 When busy
  - 4.6.3 When not answered
  - 4.6.4 If unreachable
  - 4.6.5 Fax calls
  - 4.6.6 Computer calls
  - 4.6.7 Cancel all divers

### 5. Settings

- 5.1 Factory settings
- 5.2 Network selection
- 5.3 Language
  - 5.3.1 English UK
  - 5.3.2 English US
  - 5.3.3 Svenska
  - 5.3.4 Dansk
  - 5.3.5 Suomi
  - 5.3.6 Deutsch
  - 5.3.7 Nederlands
  - 5.3.8 Français FR
  - 5.3.9 Français CAN
  - 5.3.10 Italiano
  - 5.3.11 Español
  - 5.3.12 Português P
  - 5.3.13 Português BR
- 5.4 SIM security
  - 5.4.1 On
  - 5.4.2 Off
  - 5.4.3 AUTO
- 5.5 Change codes
  - 5.5.1 PIN code
  - 5.5.2 Telephone code
- 5.6 Volume
  - 5.6.1 Ringer volume
  - 5.6.2 Ringer tone
  - 5.6.3 Button click
  - 5.6.4 Speed volume
  - 5.6.5 Radio Auto Suppression
- 5.7 Traffic safety

## Menu 1. Call register

**1.1 Missed calls:** A list of missed calls is shown here. You can choose to call, erase or store the number in the telephone or SIM card memory for later use.

**1.2 Received calls:** A list of received calls is shown here. You can choose to call, erase, or store the number in the telephone or SIM card memory for later use.

**1.3 Dialed calls:** A list of dialed numbers is shown here. You can choose to call, erase, or store the number in the telephone or SIM card memory for later use.

**1.4 Erase list:** This option can be used to erase the list of menus 1.1, 1.2 and 1.3 as follows.

- 1.4.1 All
- 1.4.2 Missed
- 1.4.3 Received
- 1.4.4 Dialed

**1.5 Call duration:** Here you can see the duration of all your calls or the most recent. You can also choose to see the number of calls and clear the call timer.

- 1.5.1 Last call
- 1.5.2 Number
- 1.5.3 Total time
- 1.5.4 Clear timer

The telephone code is needed to clear the call timer (see Menu 5.5).

## Menu 2. Messages

**2.1 Read:** Here you can read received text messages. You can then choose to erase the last message, forward it, change or save the entire message or parts of it.

**2.2 Write:** Using the keypad, you can write a text message. Then choose to save or send it.

**2.3 Voice message:** Listen to received messages.

**2.4 Settings:** Enter the number (SMSC number) of the message centre you wish to have transfer your messages. Specify also how the message is to reach the addressee and how long it is to be stored in the message centre.

- 2.4.1 SMSC number
- 2.4.2 Validity
- 2.4.3 Type

Contact your service provider for information about these settings and the SMSC number.

## Menu 3. Edit memory

**3.1 Enter item:** You can store names and telephone numbers in the telephone or SIM card memory. See the section on memory functions for more information.

**3.2 Search:** Changes in the memory can be made here.

- 3.2.1 Edit: Change data in the different memories.
- 3.2.2 Erase: Remove a saved name.
- 3.2.3 Copy: Copy a saved name.
- 3.2.4 Move: Transfer information between the memory of the telephone and the SIM card.

**3.3 Copy all:** Copy the telephone numbers and names on the SIM card to the telephone's memory.

- 3.3.1 From SIM to telephone memory
- 3.3.2 From Telephone to SIM memory

**3.4 Speed dial:** A number stored in the telephone book can be stored as a speed dial number.

**3.5 Empty SIM:** The entire memory of the SIM card can be erased.

**3.6 Empty memory:** The entire memory of the phone can be erased.

**3.7 Status:** See how many places in the SIM card or telephone memory are occupied by names and numbers.

## Menu 4. Call options

**4.1 Transmit number:** Choose whether or not to display your number to the person you call. Contact your service provider for a permanently concealed number.

**4.2 Call waiting:** Choose whether or not you want to be alerted during a phone call that there is another call coming in.

**4.3 Automatic answer:** Chose to answer without using the keypad.

**4.4 Automatic redial:** Choose to call a previously dialled number that was busy.

**4.5 Speed dial:** Here you set whether or not speed dial is to be activated. In order to use speed dial, the function must be activated

**4.6 Call divert service:** Here you can choose when and what type of calls are to be diverted to a specified telephone number.

- 4.6.1 All calls (this setting only applies during the current call).
- 4.6.2 When busy
- 4.6.3 When not answered
- 4.6.4 If unreachable
- 4.6.5 Fax calls
- 4.6.6 Computer calls
- 4.6.7 Cancel all diverts

## Menu 5. Settings

**5.1 Factory settings:** Function to return to the system's factory settings.

**5.2 Network selection:** Choose a network automatically or manually.

- 5.2.1 Auto
- 5.2.2 Manual

**5.3 Language:** Here you can choose which language the telephone is to display.

- 5.3.1 English UK
- 5.3.2 English US
- 5.3.3 Svenska
- 5.3.4 Dansk
- 5.3.5 Suomi
- 5.3.6 Deutsch
- 5.3.7 Nederlands
- 5.3.8 Français FR
- 5.3.9 Français CAN
- 5.3.10 Italiano
- 5.3.11 Español
- 5.3.12 Português P
- 5.3.13 Português BR

**5.4 SIM security:** Choose if the PIN code is to be on, off, or automatic.

- 5.4.1 On
- 5.4.2 Off
- 5.4.3 Auto

**5.5 Change codes:** Change the PIN code or telephone code.

- 5.5.1 PIN code
- 5.5.2 Telephone code (use 1234 before you change to a personal code). The telephone code is used to clear the call timer.


**NOTE!** Make a note of the code and store it in a safe place.

## 5.6 Volume

- 5.6.1 Ringer volume: Here you can choose the volume of the ringer for incoming calls.
- 5.6.2 Ringer tone: There are eight different ringer tones to choose from.
- 5.6.3 Button click: On or off
- 5.6.4 Speed volume: Choose whether the volume should be adjusted according to speed.
- 5.6.5 Radio Auto Suppression: Here you choose whether the volume of the radio should remain the same during telephone calls.
- 5.6.6 New SMS: Choose whether you want the telephone to signal an incoming SMS or not.

**5.7 Traffic safety:** Here you can choose to disengage the speed limiter for the menu system, i.e. choose to use the menu system even while driving.


## Miscellaneous information

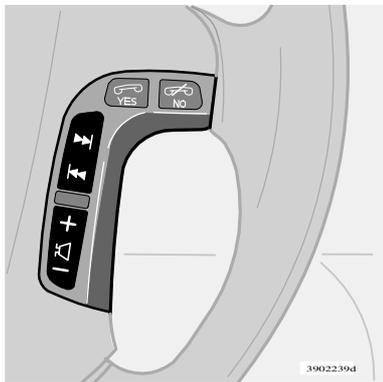

### Radio - Telephone

The four lowest buttons in the steering wheel keypad are for both radio and telephone.

If you wish to control telephone functions with these buttons, you must first activate the telephone; see page 188. If you wish to adjust the radio settings with these buttons, exit the telephone active mode. Press .

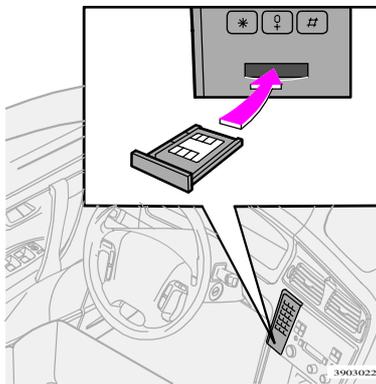

### Double SIM card

Many service providers offer double SIM cards, one for the car and a second one for another telephone. Double SIM cards give you the same number for two separate telephones. Ask your service provider about the possibilities and offers available regarding double SIM cards.

## Specifications

Output	2W
SIM card	small
Memory positions	255*
SMS (Short Message Service)	Yes
Computer/Fax	No
Dual band	Yes (900/1800)

\* 255 memory positions in the telephone memory. The number of memory positions on the SIM card varies depending on your subscription.

## IMEI number

To block the telephone, inform the service provider of the telephone IMEI number. This is a 15 digit serial number programmed in the telephone. Dial \*#06# to display this number. Write down the number and store it in a safe place.



- A**
- ABS ..... 110
  - AC ..... 60
  - Activating the alarm ..... 83
  - Active mode ..... 190
  - Actual temperature - ECC ..... 55
  - Air distribution ..... 54, 61
  - Air quality sensor ..... 57
  - Air vents ..... 54
  - Alarm ..... 83, 186
  - Anti-lock brakes (ABS) ..... 111
  - Audio system ..... 167
  - AUTO DOWN ..... 48
  - AUTO UP ..... 48
  - AUTO ..... 57
  - AUTO (climate control ECC) ..... 58
  - AUTOUP/DOWN (power windows) ..... 48
  - Autodim ..... 49
  - Automatic gearbox ..... 92, 93
  - Automatic gearbox with manual positions (Geartronic) ..... 94, 95
  - Automatic relocking ..... 80
  - Average fuel consumption ..... 40
  - Axle load ..... 157
- B**
- Battery (jump start) ..... 99
  - Battery care ..... 152, 153
  - Battery ..... 144
  - Bird droppings ..... 140
- BLIS (Blind Spot Information System) ..... 113
- Bonnet ..... 145
  - Booster battery ..... 99
  - Booster cushion ..... 28
  - Brake fluid ..... 151
  - Brake system ..... 110, 111
  - Bulbs ..... 166
- C**
- Call options ..... 191
  - Car washes ..... 141
  - Cargo compartment ..... 71
  - Cassette player ..... 180
  - CD changer ..... 182
  - CD player ..... 181, 183
  - Changing bulbs ..... 131
  - Changing wheels ..... 122
  - Children in the car - seating locations ..... 27
  - Cigarette lighter socket ..... 47
  - Cleaning the seat belts ..... 141
  - Cleaning the upholstery ..... 141
  - Climate control with air conditioning (AC) ..... 60
  - Coat hanger ..... 73
  - Colour code ..... 139
  - Combined instrument panel ..... 32
  - Cruise control ..... 41
  - Current fuel consumption ..... 40
- D**
- D Drive ..... 92
  - Dashboard - LHD ..... 2
  - Dashboard - RHD ..... 3
  - Deactivating deadlocks ..... 81
  - Deactivating the alarm ..... 83
  - Deadlocks ..... 81
  - Defroster ..... 58, 61
  - Diesel fuel filter ..... 147
  - Diesel ..... 45, 88, 147
  - Dimensions and weights ..... 157
  - Direct start of heater ..... 63
  - Direction indicators ..... 43
  - Dolby Pro Logic Surround Sound ..... 184
  - Door mirror defroster ..... 46
  - Double SIM card ..... 199
  - Drive position ..... 45
  - Driving with trailer ..... 100-103
  - DSTC ..... 35
- E**
- ECC ..... 58
  - Electric cooling fan ..... 145, 146
  - Electric socket ..... 47
  - Electronic Climate Control (ECC) ..... 56
  - Emergency calls ..... 188
  - Emergency stop (power seat) ..... 68
  - Engine - Specifications ..... 158, 159
  - Engine compartment ..... 145, 146

# Index

- Engine oil ..... 148, 149  
Engine type designation ..... 156  
Environmental care ..... 55, 144  
Exterior ..... 6
- F**  
Fan ..... 60  
Fault in emission control system ..... 36  
Fault in SRS ..... 36  
FIX NEXT SERVICE ..... 37  
Floor support ..... 72  
Follow-me-home lighting ..... 81  
Frequency update ..... 178  
Front seats ..... 66  
Fuel filler flap ..... 88  
Fuel gauge ..... 32  
Function selector ..... 61
- G**  
Gearbox type designation ..... 156  
Geartronic ..... 93  
General lighting ..... 69  
Generator not charging ..... 36
- H**  
Handbrake ..... 47  
Hazard warning flashers ..... 46  
Headlamp washer ..... 44  
Head restraints, rear ..... 67
- Heated front seats ..... 46  
Heating/Cooling ..... 60  
HU-403 ..... 167  
HU-603 ..... 169  
HU-803 ..... 170
- I**  
Ignition switch and steering  
wheel lock ..... 45  
Immobilizer ..... 78, 90  
Indicator and warning lamps ..... 33-36  
Interior - LHD ..... 4  
Interior - RHD ..... 5  
Interior lighting ..... 69
- J**  
Jack ..... 72, 123  
Jumpstarting ..... 99  
Keys ..... 78  
Kick-down ..... 90  
L Low gear ..... 92  
Lifting the car ..... 144  
Load carrier ..... 106  
Load curtain in cargo compartment ..... 71  
Location of children in the car ..... 27  
Locking and unlocking ..... 79  
Long load ..... 74  
Lowering the backrest, rear ..... 74  
Lowering the front passenger seat ..... 67
- M**  
Manual child safety locks ..... 82  
Manual climate control with  
air conditioning (AC) ..... 53, 60  
Manual gearbox ..... 91  
Master key ..... 78  
Mechanical child safety locks ..... 82  
Minor stone chips and scratches ..... 139  
Mirrors ..... 49  
Misting on window interiors ..... 55  
Mounting ..... 72  
Multifilter ..... 57
- N**  
N Neutral ..... 92
- O**  
Oil pressure ..... 36  
Open boot lid ..... 94  
Opening the fuel filler flap ..... 88
- P**  
P Parking ..... 92  
Paintwork damage ..... 139  
Paintwork ..... 139  
Parking brake engaged ..... 36  
Parking brake ..... 47  
Petrol ..... 164  
Polishing and waxing ..... 141

- Pollen filter ..... 55  
 Power seat ..... 68  
 Power steering ..... 151  
 Power sunroof ..... 50  
 Power windows ..... 48
- R**  
 R Reverse ..... 92  
 Radio ..... 167  
 Range to empty fuel tank ..... 40  
 Reading lamps, front and rear ..... 69  
 Rear fog lamp ..... 36  
 Rear seat head restraints ..... 67  
 Rear window defroster ..... 46  
 Rearview and door mirrors ..... 49  
 Rearview mirror ..... 49  
 Recirculation ..... 59  
 Recovery ..... 98  
 Refuelling ..... 88  
 Remote control ..... 68  
 Replacing remote control batteries ..... 80  
 Roof load ..... 157  
 Rustproofing ..... 138
- S**  
 Seat belts ..... 10, 11  
 Seat setting ..... 66  
 SEE MANUAL ..... 37  
 Service key ..... 78
- SERVICE REQUIRED ..... 37  
 SERVICE URGENT ..... 37  
 SIM card ..... 190  
 Ski hatch ..... 74  
 Slippery road surfaces ..... 89  
 Spare wheel ..... 72, 121  
 Spare wheel "Temporary Spare" ..... 121  
 SRS (airbags) ..... 12-17  
 Start position ..... 45  
 Starting the engine ..... 88  
 Steering wheel adjustment ..... 43  
 Stone chips ..... 139  
 STOP SAFELY ASAP ..... 37  
 Storage compartments in the  
 centre console ..... 71  
 Storage ..... 70  
 Suitable detergent ..... 140  
 Sun blind ..... 51  
 Sunroof ..... 50  
 Switches in the centre console ..... 38  
 Symbols ..... 152
- T**  
 Telephone system ..... 188  
 Temperature selector ..... 58, 70  
 Temperature ..... 58  
 Temporary puncture repair ..... 121  
 "Temporary Spare" ..... 121  
 Tool kit with towing eye ..... 72
- Tools ..... 72  
 Total weight ..... 157  
 Towbar ..... 102  
 Towbar - detachable (mounting) ..... 104  
 Towbar - detachable (removal) ..... 105  
 Towing equipment ..... 102, 103  
 Towing ..... 98  
 Traffic safety ..... 195  
 Trailer indicator lamp ..... 36  
 Trailer weight ..... 157  
 Trailer ..... 101  
 Train weight ..... 157  
 Trip computer ..... 40  
 Type designations ..... 156  
 Tyres ..... 118  
 Tyre dimensions ..... 118  
 Tyre, direction of rotation ..... 121  
 Tyre, driving characteristics ..... 120  
 Tyre, fitting ..... 123  
 Tyre, air pressure ..... 120  
 Tyre, removing ..... 122  
 Tyre, tread wear indicators ..... 121
- U**  
 Unlocking boot lid with master key .... 80
- V**  
 Vanity mirror ..... 69  
 Ventilation ..... 53

## Index

---

VIN .....	156
Volvo integrated booster cushion .....	28
Volvo Service Programme .....	143
<b>W</b>	
Warning - fault in ABS system .....	34
Warning - fault in brake system .....	34
Warning symbol in centre of dashboard .....	33
Warning triangle .....	72, 122
Washer fluid .....	151
Washing .....	140
Wheels and tyres .....	118
WHIPS .....	21, 22
Windscreen washer .....	44
Windscreen wipers .....	44
Winter tyres .....	119
Wiper blades, replacement .....	154















TP 7809 (English). AT 0520. Printed in Sweden, Elanders Infologistics Väst AB, Mölnlycke 2005